

8. LUBRICATE PROPELLER SHAFT AND TIGHTEN BOLTS

(a) 4WD:

- (1) Lubricate propeller shaft, referring to the lubrication chart. Before pumping in grease, wipe off any mud and dust on the grease fitting.


Grease grade:

Spider:

Lithium base chassis grease (NLGI No.2)

Slide yoke and double-cardan joint:

Molybdenum dialuphide lithium base chassis grease (NLGI No.2)

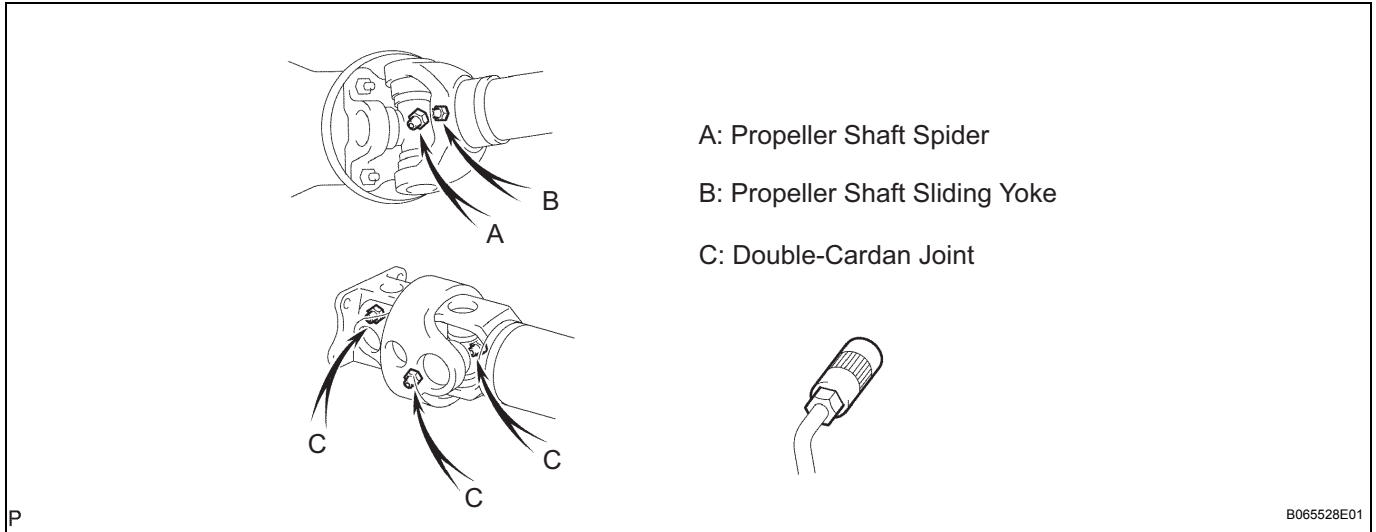

(b) Tighten the bolts of the propeller shaft.

Type	See Procedure
Front propeller shaft	See page PR-6
Rear propeller shaft (for 2WD)	See page PR-14
Rear propeller shaft (for 4WD)	See page PR-14

9. INSPECT MANUAL TRANSMISSION OIL (See page [MT-2](#))