

TOYOTA FJ CRUISER 2007

SECTION INDEX

A/C HEATER/VENTILATION.....	1789
A/C REFRIGERANT CAPACITIES.....	1789
ABS/BRAKES.....	1791
AIR BAG SYSTEM.....	1790
AIR CLEANER.....	1794
BACK DOOR.....	1801
CENTER CONSOLE.....	1796
CLEAR COAT IDENTIFICATION.....	1788
COOLING.....	1789
COWL & DASH.....	1795
ELECTRICAL.....	1794
EMISSION SYSTEM.....	1794
ENGINE/TRANS.....	1793
ENGINE/TRANS MOUNTS.....	1794
EXHAUST.....	1794
FRAME.....	1791
FRONT BUMPER.....	1788
FRONT DOOR.....	1798
FRONT DRIVE AXLE.....	1792
FRONT FENDER.....	1790
FRONT LAMPS.....	1788
FRONT SEAT.....	1797
FRONT STEERING LINKAGE/GEAR.....	1793
FRONT SUSPENSION.....	1792
FUEL TANK.....	1802
GRILLE.....	1788
HOOD.....	1788
INFORMATION LABELS.....	1788
INSTRUMENT PANEL.....	1795
PAINT CODE LOCATION.....	1788
QUARTER GLASS.....	1801
QUARTER PANEL.....	1800
REAR BODY.....	1802
REAR BUMPER.....	1803
REAR DOOR.....	1799
REAR LAMPS.....	1803
REAR SEAT.....	1797
REAR SUSPENSION.....	1802
ROCKER/PILLARS/FLOOR.....	1796
ROOF.....	1800
SEAT BELTS.....	1798
SPECIAL CAUTIONS.....	1788
STEERING PUMP.....	1793
STEERING WHEEL/COLUMN.....	1793
UNDERHOOD DIMENSIONS.....	1790
WHEEL.....	1791
WINDSHIELD.....	1795

SPECIAL CAUTIONS

ELECTRICAL COMPONENTS

Negative (-) terminal should be disconnected and isolated prior to any electrical repair, welding or charging of battery.

SUPPLEMENTAL RESTRAINT SYSTEM

Refer to Procedure Explanation 29 for Supplemental Restraint/Air Bag Special Cautions.

WELDING

Before initiating any repair involving the use of an electric welder, the ignition must be in the off position and both battery terminals disconnected.

PAINT CODE LOCATION

Paint code located on inside of driver door.


CLEAR COAT IDENTIFICATION

All colors are clear coat.

INFORMATION LABELS

Illustration Located in Next Column

1 Label, Emission	11296-27020	1.40
2 Label, Vacuum	17792-31250	.86
3 Label, Cooler Service Caution	88723-35070	3.16

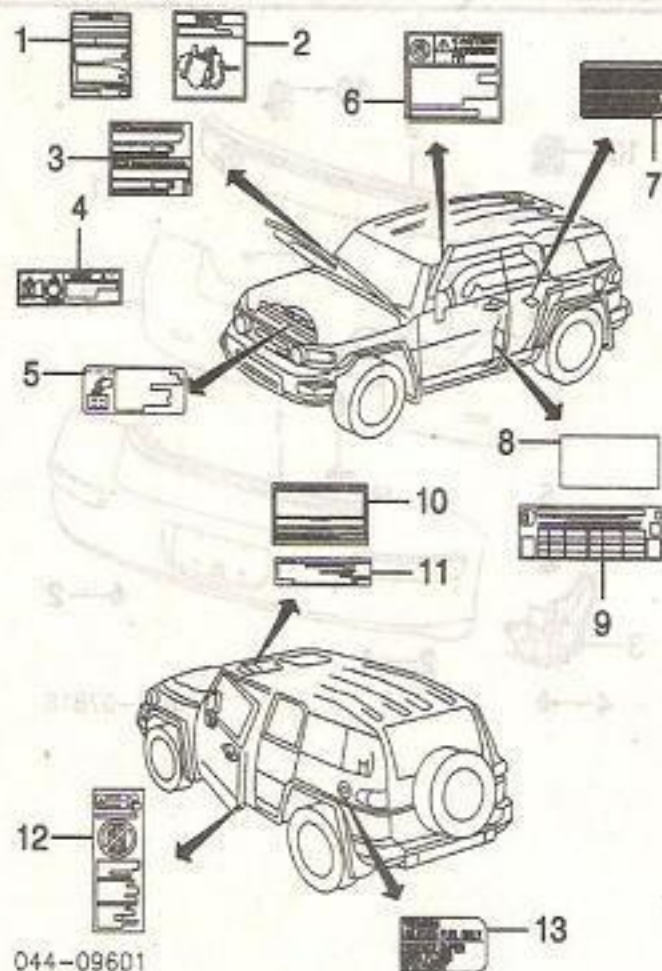


4 Label, Spark Plug Notice	11289-31010	1.94
5 Label, Eng Service	11296-27020	1.40
6 Label, Body Caution-See Quarter Panel Section		
7 Label, Rear Seat Caution	74543-35040	4.86
8 Label, Certification	74514-48020	3.20
9 Label, Tire Pressure	42661-35680	1.91
10 Label, Transfer Info		
Man Trans	36369-35620	4.69
Auto Trans	36369-35610	4.69
11 Label, Differential Notice	41991-35030	2.17
12 Label, Side Air Bag	R/L 74596-12020	3.29
13 Label, Fuel Info	74559-20110	1.11

FRONT BUMPER

Use Procedure Explanations 1 and 28 with the following text.

R&I Bumper Cover.....	#1.2
O/H Bumper Cover (Includes R&I).....	#2.0
#Includes R&I/R&R Grille Assy	

NOTE: All Parts in this section are included in O/H unless noted otherwise.

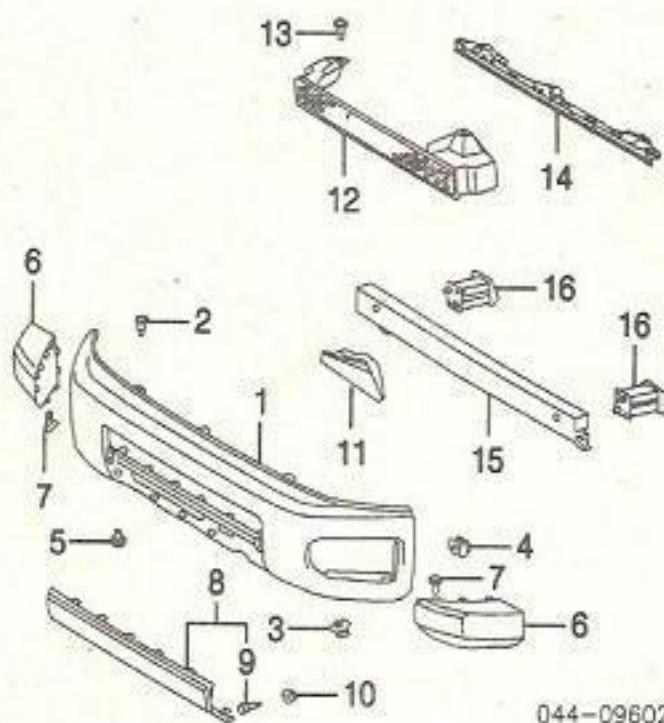


1 Cover, Bumper	52119-35070	#2.0	182.55
#Includes R&I/R&R Grille Assy			
2 Clip, Cover (3)	52161-02020		1.83
3 Clip, Retainer	R/L 90467-05138		2.74
4 Retainer, Side	R/L 53879-58010		3.66
5 Bolt, Lower Cover (4)	90109-06325		.80
6 Pad, Side Bumper	R 52422-35020	#.2	90.02
	L 52423-35010	#.2	90.02
7 Retainer, Cover Pad (6/Side)	R/L 75392-35200		1.40
8 Panel Assy, Valance			
Man Trans	53901-35170	#.3	123.09
Auto Trans	53901-35160	#.3	0.00
9 Bolt, Valance Panel (6)	53858-60050		2.40
#Included w/Valance Panel Assy			
10 Grommet, Valance (6)	90179-06274		.63
11 Support, Side Bumper	R 52115-35120	#.2	23.26
	L 52116-35110	#.2	23.26
#w/Bumper Cover Removed			
12 Grille, Bumper	53112-35030	.3	72.91
13 Clip, Grille	R/L 52161-02020		1.83
14 Retainer, Upper	52521-35030	#.2	47.30
15 Reinf, Bumper	52021-35090	#.2	140.61
#w/Bumper Cover Removed, Not Included in O/H			

16 Brkt, Bumper	R 52025-60010	#.2	55.36
	L 52026-60010	#.2	55.36
#w/Bumper Reinforcement Removed, Not Included in O/H			

GRILLE

R&I Grille Assy.....	.3
----------------------	----

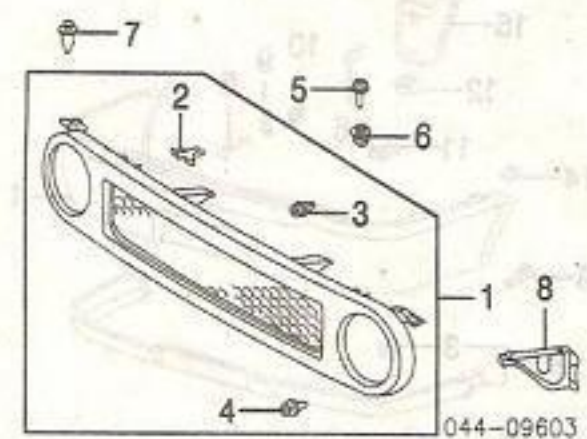

1 Grille Assy	53100-35A30	.3	177.26
2 Clip, Attaching	R/L 53145-12010		2.86
Clip, Grille			
3 Center	90467-10162		.94
4 Side	R/L 62217-13010		.94
#Included w/Grille Assy			
5 Bolt, Mtg	R/L 90159-A0029		.49
6 Grommet, Bolt	R/L 90189-05142		.69
7 Clip, Mounting	R/L 52161-02020		1.83
8 Brkt, Grille Mounting-See Cooling Section			


FRONT LAMPS

HEADLAMP

Aim Lamps.....	.4
R&I Headlamp.....	R/L #.5

#Includes R&I/R&R Grille Assy

NOTE: R&I/R&R Does Not include aim lamps.

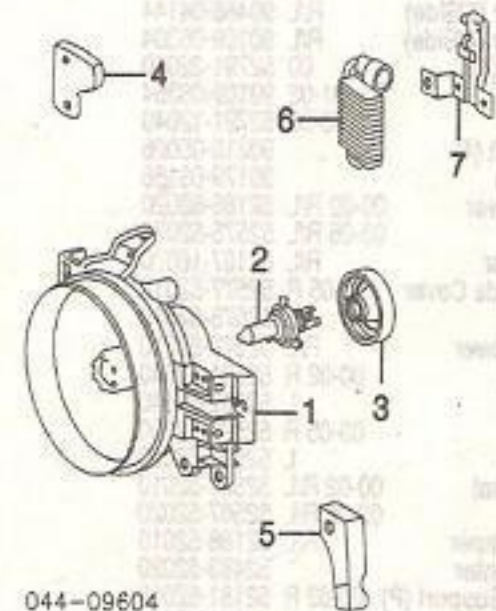

1 Headlamp	R 81140-35460	#.5	231.74
	L 81070-35440	#.5	231.74
#Includes R&I/R&R Grille Assy			
2 Bulb, Headlamp	R/L 90981-13055	#.2	38.61
#Included in R&I/R&R Headlamp			
3 Cover, Bulb	R/L 81139-52010		14.72
4 Brkt, Inner H/Lamp-See Cooling Section			
5 Brkt, Outer H/Lamp-See Cooling Section			
6 Resistor, DRL	L 82695-35030		63.73
7 Bracket, Resistor	L 82696-35030		8.17

PARK/SIGNAL/SIDE MARKER LAMP

R&I Park/Signal/Marker Lamp.....	R/L	.2
----------------------------------	-----	----




1 Lamp, Park/Signal/Marker	R 81131-35460	.2	137.50
	L 81171-35440	.2	137.50
2 Bulb, Park/Signal/Marker	R/L 99132-21210-75	#.2	4.23
#Included in R&I/R&R Park/Signal/Side Marker Lamp			
3 Socket, Park/Signal/Marker	R/L 81615-20610		19.63

HOOD


Use Procedure Explanations 4 and 28 with the following text.

Refinish Hood Outside.....	2.4
Add for Underside.....	1.2
Refinish Hood Moulding.....	.8
Refinish Hinge.....	R/L .5

INTERIOR TRIM

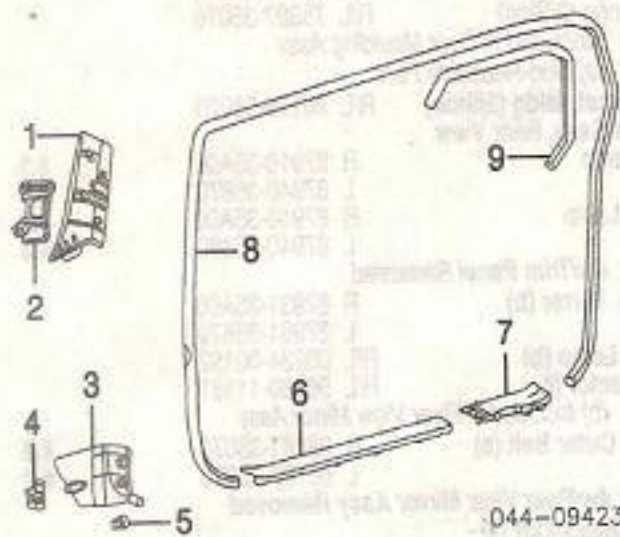


1	Garnish Assy, Inner Windshield-See Windshield Section		
2	Bracket, Assist Grip-See Windshield Section		
3	Panel, Cowl Trim	R 62111-35060-B0	.2 58.39
		L 62112-35070-B0	.2 58.70
4	Retainer, Panel	R 62135-60010	10.32
		L 62136-60010	10.32
5	Clip, Panel	R/L 90467-06183	1.49
6	Plate, Front Scuff	R 67913-35040-B0	.2 97.26
		L 67914-35040-B0	.2 97.26
7	Plate, Rear Scuff	R 67917-35030-B0	.2 72.79
		L 67918-35030-B0	.2 72.79
8	W/Strip, Door Opng (On Body)	R 62311-35040	.6 78.97
		L 62312-35030	.6 78.97
9	Trim, Rear Door Opening	R/L 62334-35020	.2 31.75

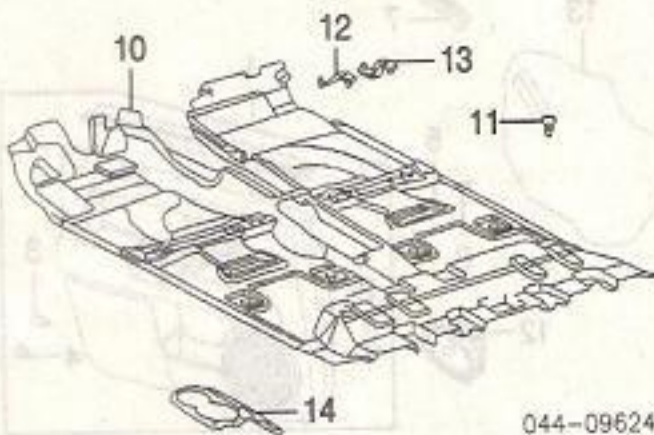

10	Mat, Floor		
	Man Trans	58510-3G810-B0	448.57
	Auto Trans	58510-3G800-B0	448.57
11	Clip, Mat	R/L 90467-05164-B2	.63
	Hook, Floor		
12	Inner	R/L 58521-35050	7.20
13	Outer	R/L 58521-35060	9.40
14	Insulator, Center Floor		
	Man Trans	58435-35010	28.58
	Harness, Main Wiring		
	No. 1	82162-35770	m 649.58
	No. 2	82161-35830	m 201.43

FRONT SEAT PASSENGER SIDE


R&I Seat Assy3

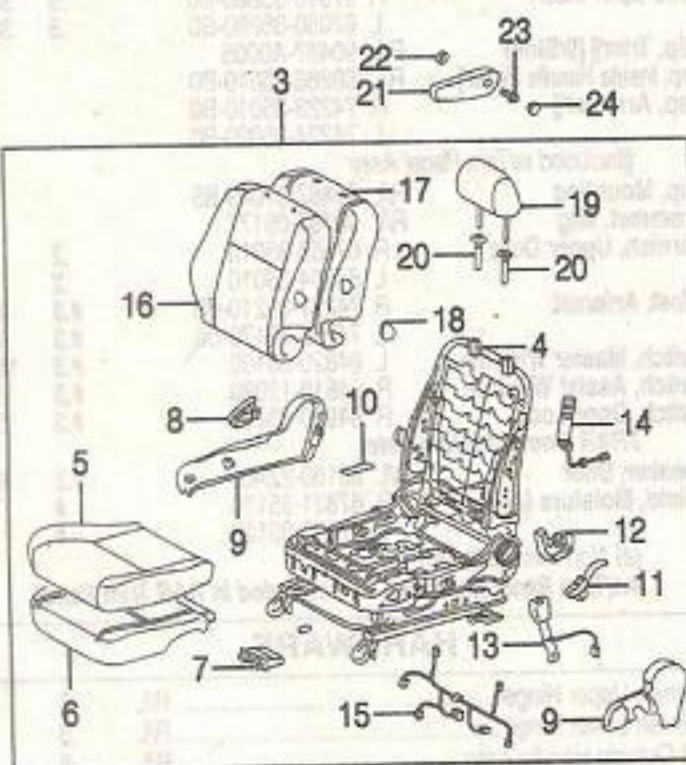

1	Bolt, Seat Mtg (2/Side)	R/L 90119-A0112	.94
2	Cover, Rear Seat Track	R/L 72137-35090-B0	12.00
3	Seat Assy, Front		
	w/Side Air Bags-See Air Bag System Section		
	w/o Side Air Bags-Serviced by Components		

4	Frame, Seat (a)		
	w/Side Air Bags-Serviced w/ Front Seat Assy	71110-35130	#1.4 744.44
	w/o Side Air Bags		
	#w/Seat Assy Removed		
5	Cover, Seat Cushion (a)	71071-3G430-B0	#.7 291.63
6	Pad, Seat Cushion (a)	71511-35140	#.7 153.59
	#R&R Complete, w/Seat Assy Removed, Included in R&R Seat Frame		
7	Module, OPDS (a)-See Air Bag System Section		
8	Handle, Recliner (a)	72525-60100-B3	.2 10.03
9	Trim, Side Cushion (a)	R 71811-35130-B1	50.99
		L 71861-60100-B3	34.55
		R/L 71537-60050	2.00
10	Protector, Cushion (a)		
11	Cover, Inner Recliner (a)		
	No. 1	R 71875-60160-B3	4.46
		L 71876-60160-B3	4.46
		R 71875-58060-B0	9.95
		L 71876-58060-B0	10.03
12	No. 2		
13	Buckle, Seat Belt (a)-See Seat Belts Section		
14	Module, Side Air Bag (a)-Serviced w/ Front Seat Assy		
15	Harness, Seat (a)	82167-35050	47.61
16	Cover, Seat Back (a)		
	w/Side Air Bags	71027-35100-B1	#.9 405.96
	w/o Side Air Bags	71027-35090-B0	#.9 405.96
17	Pad, Seat Back (a)		
	w/Side Air Bags-Serviced w/ Front Seat Assy	71551-35130	#.9 125.09
	w/o Side Air Bags		
	#R&R Complete, w/Seat Assy Removed, Includes R&R Headrest & Armrest, Included in R&R Seat Frame		
18	Cap, Armrest (a)	72848-35010-B0	7.60
19	Headrest (a)	71910-35730-B0	.2 172.71
20	Guide, Headrest (a)		
	Locking	71930-42020-B4	11.75
	Non-Locking	71931-42020-B4	7.12
	(a) Included w/ Front Seat Assy-listed in Air Bag System Section		
21	Armrest	72880-35020-B0	.2 229.35
22	Bushing, Armrest	90386-35001	2.24
23	Bolt, Armrest	91512-81070	1.54
24	Cap, Bolt	72848-60010-B3	2.83

DRIVER SIDE

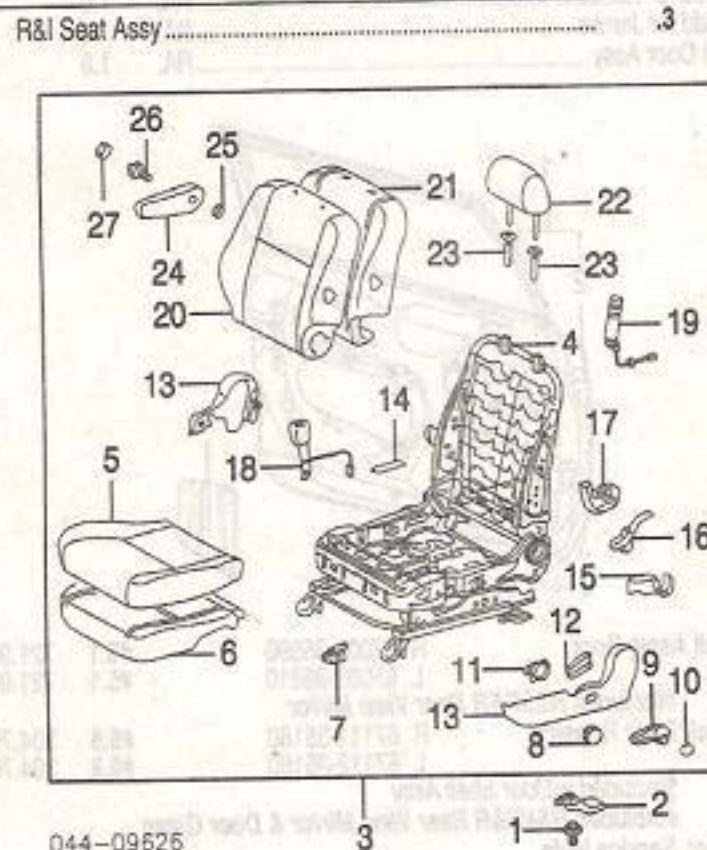

044-09625

1	Bolt, Seat Mtg (2/Side)	R/L 90119-A0112	.94
2	Cover, Rear Seat Track	R/L 72137-35090-B0	12.00
3	Seat Assy, Front		
	w/Side Air Bags-See Air Bag System Section		
	w/o Side Air Bags-Serviced by Components		
4	Frame, Seat (a)		
	w/Side Air Bags-Serviced w/ Front Seat Assy	71120-35090	#1.4 385.65
	w/o Side Air Bags		
	#w/Seat Assy Removed		
5	Cover, Seat Cushion (a)	71072-35240-B0	#.7 291.63
6	Pad, Seat Cushion (a)	71512-35040	#.7 125.09
	#R&R Complete, w/Seat Assy Removed, Included in R&R Seat Frame		
7	Sensor, Seat Position (a)-See Air Bag System Section		
8	Knob, Seat Adjuster (a)	72457-58010-B0	.2 10.37
9	Handle, Adjuster (a)	72493-60020-B2	29.04
10	Cap, Handle (a)	72459-60020-B2	8.35
11	Bushing, Adjuster (a)	72478-60010	5.23
12	Handle, Recliner (a)		
13	Trim, Side Cushion (a)	R 71862-60110-B3	34.55
		L 71812-35200-B0	48.30
		R/L 71537-60050	2.00
14	Protector, Cushion (a)	R 71873-53030-B1	6.69
15	Shield, Lwr Seat Cushion (a)	L 71874-53010-C0	7.32
	Cover, Inner Recliner (a)		
	No. 1	R 71875-60160-B3	4.46
		L 71876-60160-B3	4.46
		R 71875-58060-B0	9.95
		L 71876-58060-B0	10.03
16	No. 2		
17	Buckle, Seat Belt (a)-See Seat Belts Section		
18	Module, Side Air Bag (a)-Serviced w/ Front Seat Assy		
19	Harness, Seat (a)		
	w/Side Air Bags	71074-35690-B1	#.9 405.96
	w/o Side Air Bags	71074-35680-B1	#.9 405.96
20	Cover, Seat Back (a)		
	w/Side Air Bags-Serviced w/ Front Seat Assy	71552-35050	#.9 125.09
	w/o Side Air Bags		


#R&R Complete, w/Seat Assy Removed, Included in R&R Seat Frame

22	Headrest (a)	71910-35730-B0	#.2 172.71
23	Guide, Headrest (a)		
	Locking	71930-42020-B4	11.75
	Non-Locking	71931-42020-B4	7.12
24	Armrest (a)	72880-35010-B0	#.2 229.35
	#Included in R&R Seat Back		
25	Bushing, Armrest (a)	90386-35001	2.24
26	Bolt, Armrest (a)	91512-81070	1.54
27	Cap, Bolt (a)	72848-60010-B3	2.83
	(a) Included w/ Front Seat Assy-listed in Air Bag System Section		

REAR SEAT

RIGHT SIDE

R&I Seat Assy		.3
R&I Seat Cushion		.2

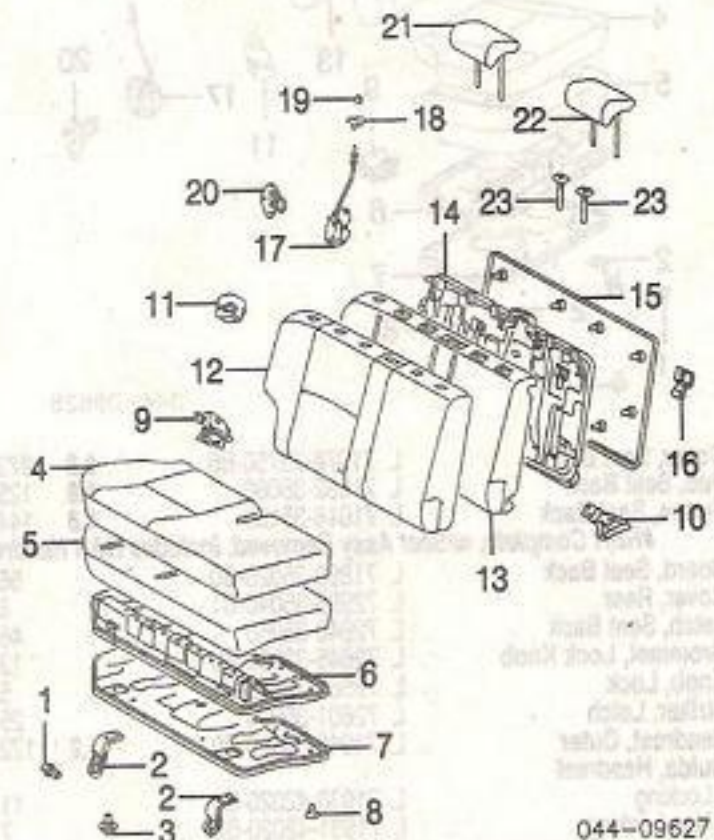

044-09627

1	Bolt, Seat Mtg (2)	R 72702-60080	1.23
2	Hinge, Seat Cushion		
	Outer	R 71301-35080	25.69
	Inner	R 71301-35090	23.98
3	Stopper, Rear Seat Cushion (2)	R 79226-35010	7.60
4	Cover, Seat Cushion	R 71075-35A30-B0	#.7 320.19
5	Pad, Seat Cushion	R 71611-35090	#.7 185.80
6	Frame, Seat Cushion	R 71015-35090	#.7 142.53
	#R&R Complete, w/Seat Cushion Removed		
7	Cover, Seat Under	R 72927-35040-B0	17.26
8	Clip, Seat (a)	R 71769-60010-B6	3.32
	(a) As Required		
9	Hinge, Outer Seat Back	R 71303-35030	29.32
10	Hinge, Center Seat Back	R 71305-35070	44.30
11	Cover, Seat Latch	R 72665-35020-B1	13.49
12	Cover, Seat Back	R 71077-35A40-B0	#.9 386.74
13	Pad, Seat Back	R 71651-35080	#.9 185.80
14	Frame, Seat Back	R 71017-35220	#.9 278.99
	#R&R Complete, w/Seat Assy Removed, Includes R&R Headrests		
15	Board, Seat Back	R 71880-35020-B0	85.79
16	Cover, Rear (2)	R 79226-35010	7.60
17	Latch, Seat Back	R 72630-35050	46.30
18	Grommet, Lock Knob	R 72646-33020-B6	13.20
19	Knob, Lock	R 72661-35010-B1	5.60
20	Striker, Latch	R 72601-35020	25.09
21	Headrest, Outer	R 71940-35480-B0	.2 172.71
22	Headrest, Inner	R 71960-35040-B0	.2 138.15
23	Guide, Headrest		
	Locking (2)	R 71930-42020-B4	11.75
	Non-Locking (2)	R 71931-42020-B4	7.12

LEFT SIDE

R&I Seat Assy		.3
R&I Seat Cushion		.2

Illustration Located in Next Column


1	Bolt, Seat Mtg (2)	L 72702-60080	1.23
2	Hinge, Seat Cushion		
	Outer	L 71301-35080	25.69
	Inner	L 71301-35100	24.15
3	Stopper, Rear Seat Cushion (2)	L 79226-35010	7.60
4	Cover, Seat Cushion	L 71076-35550-B0	#.7 229.57
5	Pad, Seat Cushion	L 71612-35050	#.7 125.09
6	Frame, Seat Cushion	L 71016-35060	#.7 112.66
	#R&R Complete, w/Seat Cushion Removed		
7	Cover, Seat Under	L 72928-35040-B0	11.20
8	Clip, Seat (a)	L 71769-60010-B6	3.32
	(a) As Required		
9	Hinge, Outer Seat Back	L 71304-35030	30.38
10	Hinge, Center Seat Back-See Right Side		
11	Cover, Seat Latch	L 72665-35020-B1	13.49

Procedure Explanation Pages Must Be Used with the Above Text for an Accurate Damage Report.

Comments or suggestions? Need assistance? Call 1-800-854-7030 or 858-578-6550. Ext. 8220. Fax 1-888-256-7969 or 858-549-0629.

REAR SEAT Cont'd

LEFT SIDE Cont'd

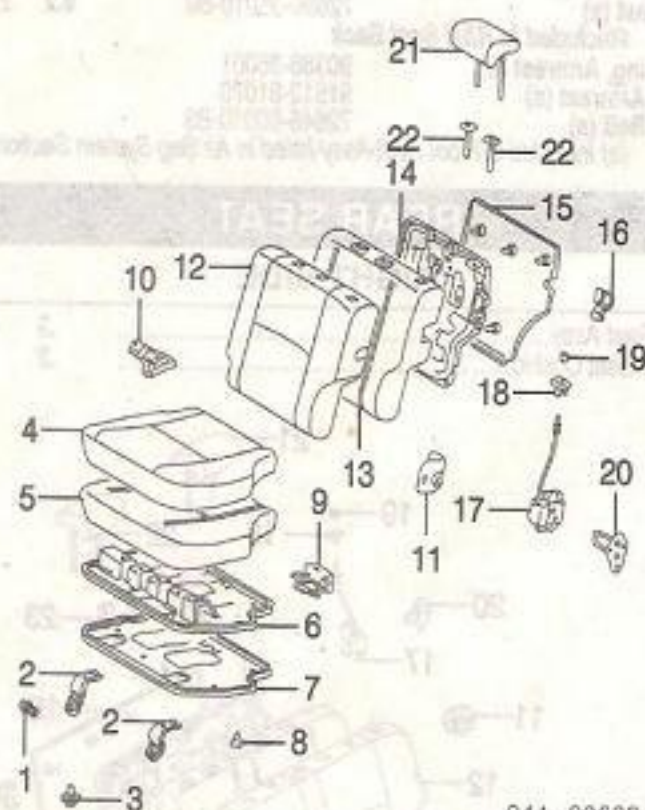


044-09628

12 Cover, Seat Back	L 71078-35750-B0	#.8	273.88
13 Pad, Seat Back	L 71652-35060	#.8	125.09
14 Frame, Seat Back	L 71018-35130	#.8	144.53
#R&R Complete, w/Seat Assy Removed, Includes R&R Headrest			
15 Board, Seat Back	L 71890-35020-B0		66.29
16 Cover, Rear	L 72996-35040-B1		8.97
17 Latch, Seat Back	L 72640-35050		46.30
18 Grommet, Lock Knob	L 72646-33020-B6		13.20
19 Knob, Lock	L 72661-35010-B1		5.60
20 Striker, Latch	L 72601-35020		25.09
21 Headrest, Outer	L 71940-35480-B0	.2	172.71
22 Guide, Headrest			
Locking	L 71930-42020-B4		11.75
Non-Locking	L 71931-42020-B4		7.12

SEAT BELTS

FRONT

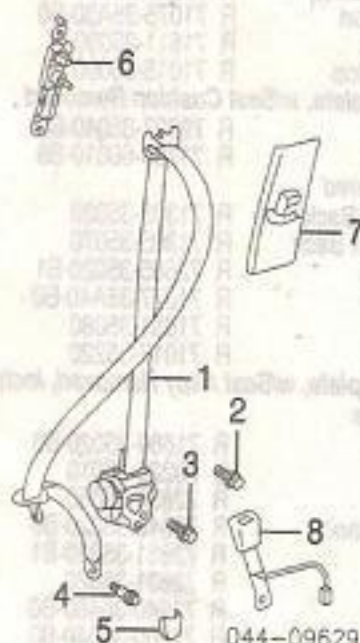


044-09629

1 Belt, Seat	R 73210-35840-C0	#.4	198.36
	L 73220-35740-C0	#.4	198.36
#w/Upper Trim Panel Removed, Included in R&R Rear Door Shell Assy or Rear Door Repair Panel			
Bolt, Seat Belt			
2 No. 1	R/L 91631-J0612	.57	
3 No. 2	R/L 90105-11041	1.03	
4 No. 3	R/L 90109-11053	1.86	
5 Cover, Bolt	R/L 73233-60010-B1	3.94	
6 Adjuster, Seat Belt	R/L 73200-53010	45.87	
7 Cover, Seat Belt-See Rear Door Section			
8 Buckle, Seat Belt (a)	R 73230-35860-B0	#.2	41.37
	L 73240-35510-B0	#.2	41.37
(a) Included w/Front Seat Assy-listed in Air Bag System Section			
#w/Seat Assy Removed			

REAR

Illustration Located in Next Column

1 Belt, Outer Seat	R 73360-35340-C0	#.4	123.91
	L 73370-35270-C0	#.4	123.91
#w/Seat Assy Removed			
2 Bolt, Upper Mtg			

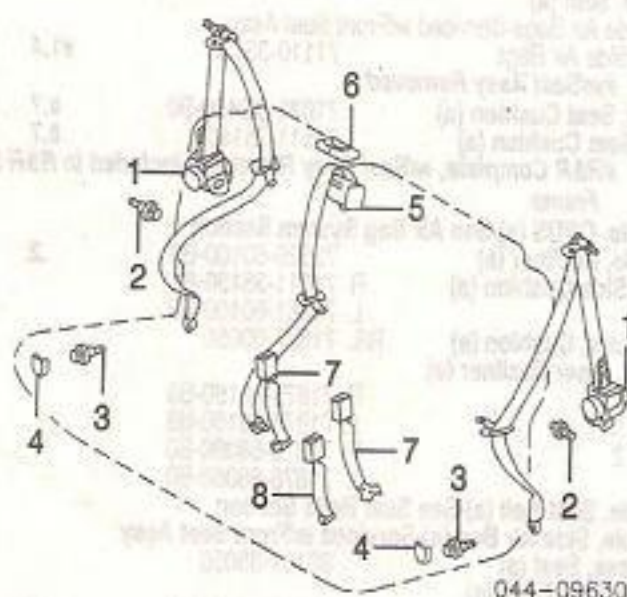

044-09630


No. 1	R/L 91631-J0612	.57	
No. 2	R/L 90105-11041	1.03	
3 Bolt, Lower Mtg	R/L 73383-60010	1.94	
4 Cover, Bolt	R/L 73233-60010-B1	3.94	
5 Belt, Center Seat	73350-35160-C0	123.91	
6 Bezel, Seat Belt	73373-60050-B2	23.46	
7 Buckle, Outer Seat Belt	R/L 73380-35170-C0	#.2	19.84
8 Buckle, Center Seat Belt	73460-35010-C0	#.4	19.84
#w/Seat Assy Removed			

FRONT DOOR

Use Procedure Explanations 16 and 28 with the following text.

SHEET METAL

Refinish Door Outside	R/L	2.3	
Add for Jamb & Interior	R/L	1.0	
Add for Jamb	R/L	.5	
R&I Door Assy	R/L	1.0	

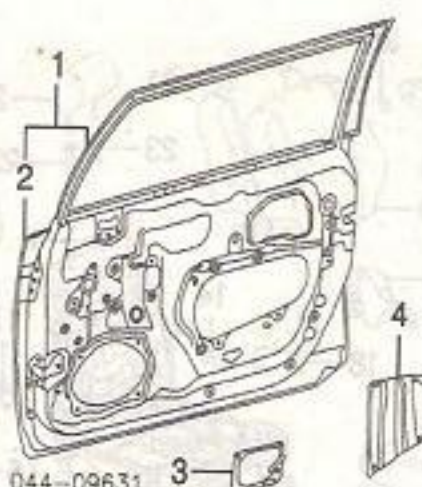


044-09631

1 Shell Assy, Door	R 67001-35590	#5.1	721.90
	L 67002-35610	#5.1	721.90
#Includes R&I/R&R Rear View Mirror			
2 Panel, Door Repair	R 67111-35180	#6.8	304.76
	L 67112-35180	#6.8	304.76
#Included w/Door Shell Assy			
#Includes R&I/R&R Rear View Mirror & Door Glass			
Cover, Service Hole			
3 Front	R 67833-35010		17.15
	L 67834-35010		17.15
4 Rear	R 67443-35010		49.30
	L 67444-35010		49.30

EXTERIOR TRIM

R&I Door Moulding Assy	R/L	.3	
R&I Rear View Mirror Assy	R/L	#.7	
#Includes R&I Trim Panel			
R&I Outer Belt Moulding	R/L	#.9	
#Includes R&I Rear View Mirror Assy			

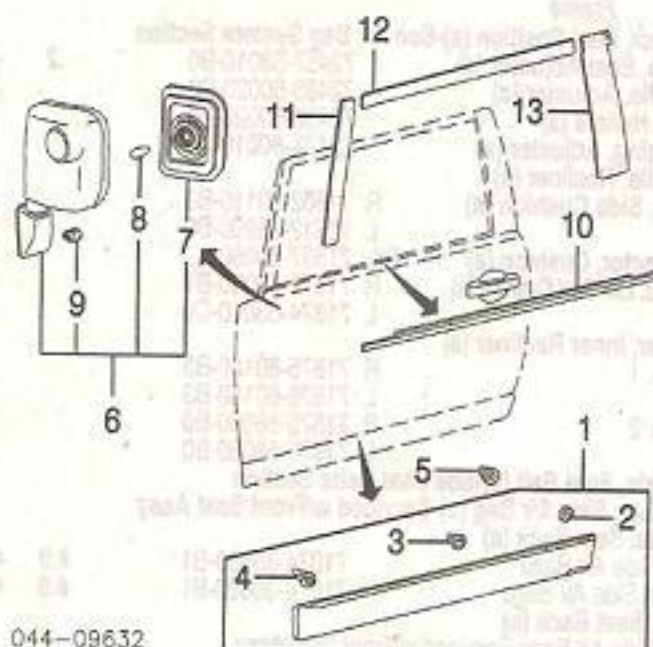

044-09632


1 Moulding Assy, Door	R 75071-35140	.3	125.78
-----------------------	---------------	----	--------

2 Gasket, Moulding (2/Side)	L 75072-35140	.3	125.78
Clip, Moulding (a)	R/L 90430-04260		1.18
3 Blue (4/Side)	R/L 75495-35010		.74
4 Orange (3/Side)	R/L 75397-35010		.74
#Included w/Door Moulding Assy			
(a) Non-Reusable Part			
5 Grommet, Midg (2/Side)	R/L 90176-05020		.63
6 Mirror Assy, Rear View			
w/Lamp	R 87910-35A00	#.3	184.03
	L 87940-35870	#.3	184.03
w/o Lamp	R 87910-35A00	#.3	184.03
	L 87940-35860	#.3	116.00
#w/Trim Panel Removed			
7 Glass, Mirror (b)	R 87931-35A00		37.13
	L 87961-35870		37.13
8 Bulb, Lamp (b)	R/L 00234-00192		1.00
9 Connector (b)	R/L 90980-11181		5.80
(b) Included w/Rear View Mirror Assy			
10 Midg, Outer Belt (a)	R 68161-35070	#.2	15.78
	L 68162-35070	#.2	15.78
#w/Rear View Mirror Assy Removed			
Tape, Black-Out (a)			
11 Front	R 75921-35020	.2	11.75
	L 75922-35020	.2	11.75
12 Upper	R 75923-35020	.2	17.63
	L 75924-35020	.2	17.63
13 Rear	R 75925-35010	.2	21.66
	L 75926-35010	.2	23.49
(a) Non-Reusable Part			

INTERIOR TRIM

R&I Trim Panel	R/L	.4	
----------------	-----	----	--

NOTE: All Parts in this section are included in R&R Trim Panel unless noted otherwise.

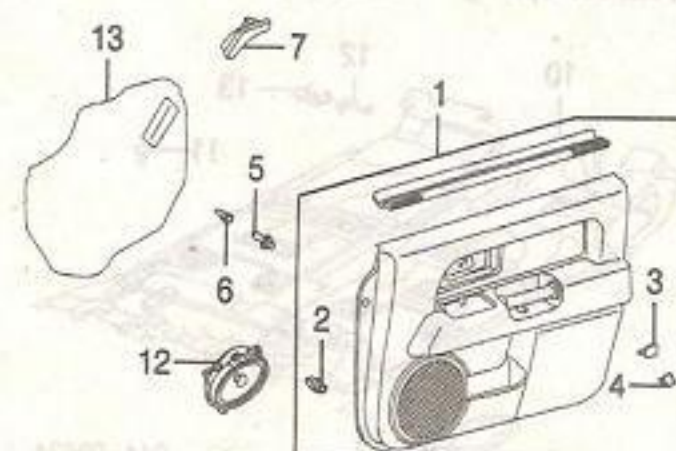


044-09633


1 Panel Assy, Trim			
w/Color Insert			
Black (Code 2JW)	R 67610-35B90-B2	.5	382.31
	L 67620-35B30-B2	.5	382.31
Blue (Code 2JV)	R 67610-35B90-B5	.5	382.31
	L 67620-35B30-B5	.5	382.31
Bordeaux (Code 2JT)	R 67610-35B90-B3	.5	382.31
	L 67620-35B30-B3	.5	382.31
Silver (Code 2JR)	R 67610-35B90-B1	.5	382.31
	L 67620-35B30-B1	.5	382.31
Yellow (Code 2JU)	R 67610-35B90-B4	.5	382.31
	L 67620-35B30-B4	.5	382.31
w/o Color Insert	R 67610-35B80-B0	.5	382.31
	L 67050-35290-B0	.5	382.31
2 Clip, Trim (9/Side)	R/L 90467-A0005		.97
3 Cap, Inside Handle Bezel	R/L 69283-35010-B0		.74
4 Cap, Armrest	R 74223-35010-B0		1.17
	L 74224-35020-B0		1.17
#Included w/Trim Panel Assy			
5 Clip, Mounting	R/L 90467-07043-B5		.92
6 Grommet, Mtg	R/L 90467-09177		1.01
7 Garnish, Upper Door	R 67663-35010	.2	2.23
	L 67664-35010	.2	2.23
8 Panel, Armrest	R 74231-35210-B0	#.3	17.12
	L 74232-35170-B0	#.3	12.03
9 Switch, Master Window	L 84820-35100	#.3	166.68
10 Switch, Assist Window	R 84810-12080	#.3	51.33
11 Switch, Door Lock	R 84930-33100	#.3	54.33
#R&R One Side Complete			
12 Speaker, Door	R/L 86160-22A00	#.2	89.71
13 Shield, Moisture (a)	R 67831-35170	#	8.92
	L 67832-35120	#	8.92
(a) Non-Reusable Part			
#w/Trim Panel Removed, Not Included in R&R Trim Panel			

HARDWARE

Refinish Upper Hinge	R/L	.5	
Refinish Lower Hinge	R/L	.5	
R&I Outside Handle Assy	R/L	.3	

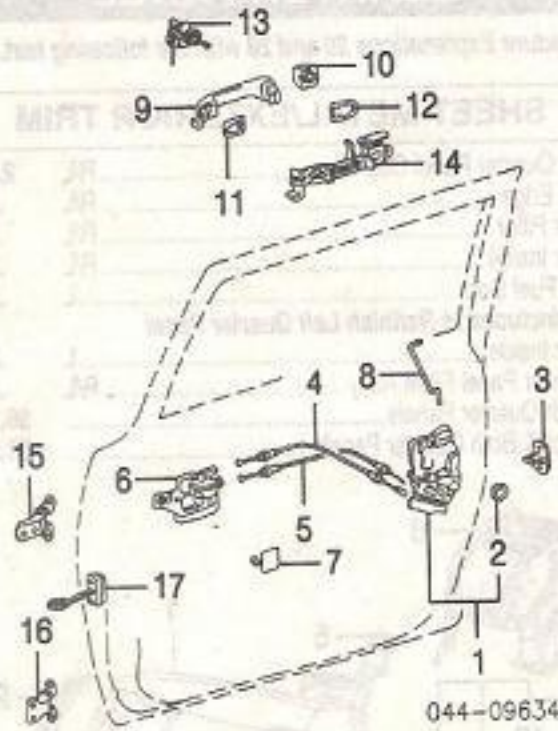

1 Latch Assy, Door	R 69030-52470	#.3	240.58
	L 69040-47060	#.3	276.11
#w/Trim Panel Removed			
2 Seal, Harness (a)	R/L 69318-47010		1.63
#Included w/Door Latch Assy			
(a) Non-Reusable Part			
3 Striker, Front Door-See Rear Door Section			
4 Cable, Door Lock	R/L 69710-35050	#.2	19.41
5 Cable, Inside Handle	R/L 69750-35020	#.2	19.41
6 Handle, Inside	R 69205-35020-B0	#.2	33.44
	L 69206-35010-B0	#.2	33.44
#w/Trim Panel Removed			
7 Cap, Inside Handle Bezel-See Interior Trim Section			
8 Rod, Lock	R 69311-35060		7.77
	L 69312-35060		7.77
9 Handle, Outside Door	R/L 69210-35160	#.3	85.17
#Includes R&R Handle Cover			
10 Cover, Handle	R/L 69217-35030	.2	10.17
11 Pad, Handle			
12 Front	R/L 69241-35030	#.3	1.49
12 Rear	R/L 69242-35020	#.3	1.49
#R&R One Side Complete, Included in R&R Outside Handle			
13 Cylinder, Door Lock (c)	R 69051-35170	#.4	50.00
	L 69052-35170	#.4	50.00
(c) Included w/Vehicle Lock Set-listed in Steering Wheel/Column Section			
#Includes R&R Handle Cover			
14 Brkt, Outside Handle	R 69201-35010	#.4	51.64
	L 69202-35010	#.4	51.64
#Includes R&R Outside Handle, w/Trim Panel Removed			
15 Hinge, Upper	R 68710-02020	#.2	38.58
	L 68720-02020	#.2	38.58
16 Hinge, Lower	R 68730-33020	#.2	42.24
	L 68740-33020	#.2	42.24
#w/Door Removed			
17 Check, Door	R 68610-35040	#.2	86.20
	L 68620-35020	#.2	86.20
#w/Trim Panel Removed			

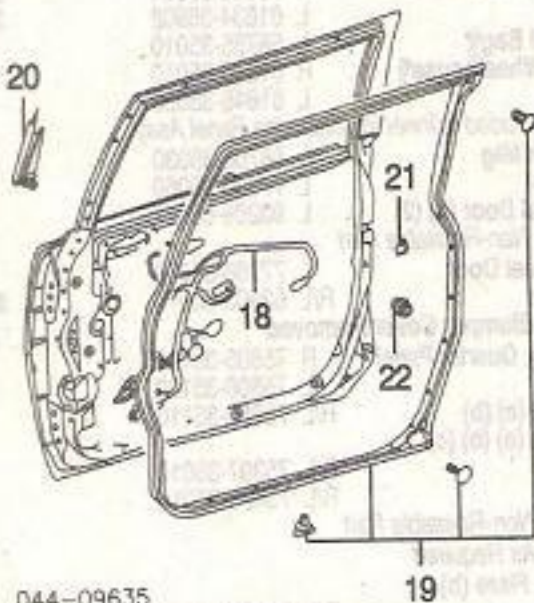


18 Harness, Door Wiring	R 82151-35460		158.33
	L 82152-35380		158.33
19 Weatherstrip, Door (On Door)	R 67861-35100	.4	42.88
	L 67862-35090	.4	42.88
20 Garnish, Frame Brkt	R 67491-35050	.2	15.29
	L 67492-35050	.2	15.29
21 Protector, Guide	R/L 67469-35040		.63
22 Bumper, Door (2/Side)	R/L 90541-09131	.1	2.14

GLASS & PARTS

Illustration Located in Next Column

1 Glass, Front Door	R 68101-35220	1.0	223.13
Toyota			

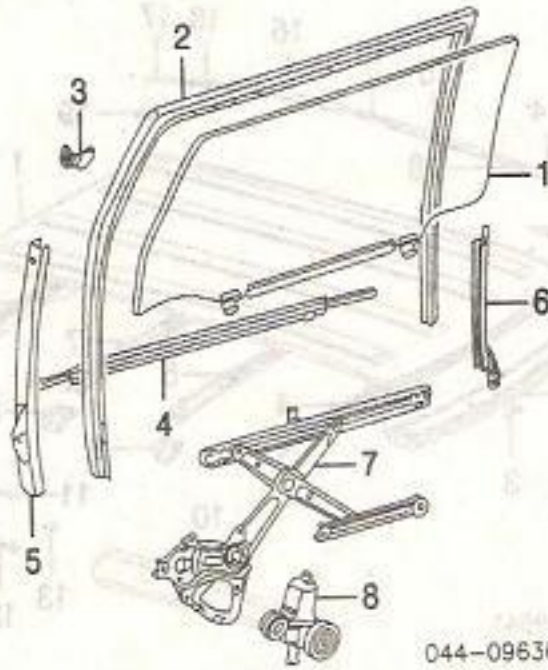

NAGS	L 68102-35220	1.0	223.13
	R FD23053GTN	1.0	0.00
	L FD23054GTN	1.0	0.00
2 Run, Glass	R 68141-35100	#.2	66.08
	L 68151-35090	#.2	66.08
#w/Door Glass Removed			
3 Clip, Anti-Rattle	R/L 62367-35010		0.00
4 Mldg, Outer Belt-See Exterior Trim Section			
5 Channel, Front Glass	R 67401-35060	#.2	40.24
	L 67402-35070	#.2	40.24
6 Channel, Rear Glass	R 67403-35090	#.2	32.84
	L 67404-35090	#.2	32.84
#w/Glass Run Removed			
7 Regulator, Window	R 69801-58010	#.4	94.45
	L 69802-58010	#.4	94.45
#w/Door Glass Removed, Includes R&R Regulator Motor			
8 Motor, Regulator	R 85710-AE010	#.3	276.34
	L 85720-AE010	#.3	276.34
#w/Trim Panel Removed			

REAR DOOR

Use Procedure Explanations 16 and 28 with the following text.

SHEET METAL


Refinish Door Outside	R/L	2.2
Add for Jambs & Interior	R/L	1.0
Add for Jambs	R/L	.5
R&I Door Assy	R/L	1.0



1 Shell Assy, Door	R 67003-35220	#5.4	652.86
	L 67004-35220	#5.4	652.86
#Includes R&R Seat Belt			
2 Panel, Door Repair	R 67113-35070	#7.0	275.60
	L 67114-35070	#7.0	275.60
#Included w/Door Shell Assy			
#Includes R&R Seat Belt & Door Glass			

EXTERIOR TRIM

R&I Door Moulding Assy	R/L	.3
R&I Outer Belt Moulding	R/L	.2

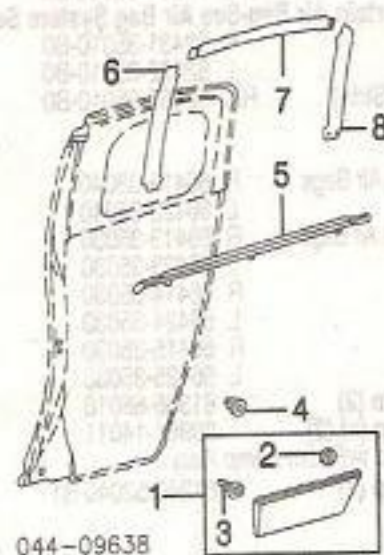


1 Moulding Assy, Door	R 75075-35160	.3	56.70
-----------------------	---------------	----	-------

2 Gasket, Moulding	L 75076-35160	.3	56.70
3 Clip, Moulding (a)	R/L 90430-04260		1.18
Blue (2/Side)	R/L 75495-35010		.74
Orange (2/Side)	R/L 75397-35010		.74
#Included w/Door Moulding Assy			
(a) Non-Reusable Part			
4 Grommet, Midg	R/L 90176-05020		.63
5 Mldg, Outer Belt (a)	R 68163-35040	.2	10.47
	L 68164-35040	.2	10.47
Tape, Black-Out (a)			
6 Front	R 75933-35010	.2	19.61
	L 75934-35010	.2	19.61
7 Upper	R 75931-35010	.2	15.66
	L 75932-35010	.2	15.66
8 Rear	R 75935-35010	.2	17.63
	L 75936-35010	.2	17.63
(a) Non-Reusable Part			

INTERIOR TRIM

R&I Lower Trim Panel	R/L	.4
----------------------	-----	----

NOTE: All Parts in this section are included in R&R Lower Trim Panel unless noted otherwise.

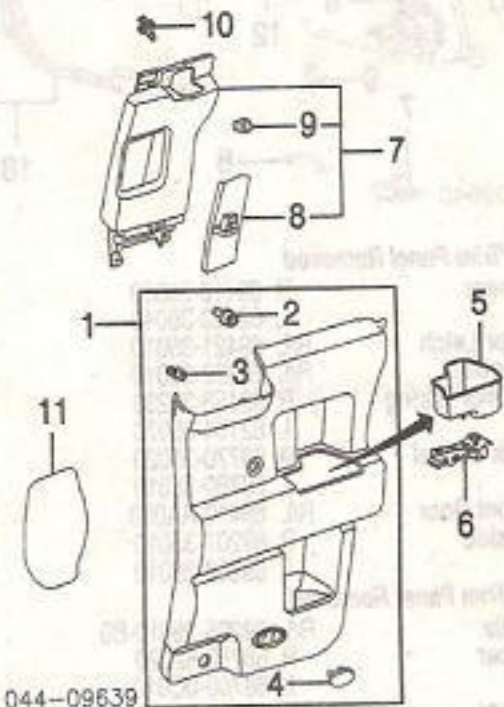

1 Panel Assy, Lower Trim			
w/Color Insert			
Black (Code 2JW)	R 67630-35A80-B2	.5	299.80
	L 67640-35A80-B2	.5	299.80
Blue (Code 2JV)	R 67630-35A80-B5	.5	299.80
	L 67640-35A80-B4	.5	299.80
Bordeaux (Code 2JT)	R 67630-35A80-B3	.5	299.80
	L 67640-35A80-B3	.5	299.80
Silver (Code 2JR)	R 67630-35A80-B1	.5	299.80
	L 67640-35A80-B1	.5	299.80
Yellow (Code 2JU)	R 67630-35A80-B4	.5	299.80
	L 67640-35A80-B4	.5	299.80
w/o Color Insert	R 67630-35A70-B1	.5	299.80
	L 67640-35A70-B1	.5	299.80
2 Clip, Trim Panel			
Type 1 (3/Side)	R/L 90467-A0005		.97
Type 2 (5/Side)	R/L 90467-10161		.89
3 Retainer, Panel	R/L 90467-12080		.63
4 Stopper, Lower	R/L 62695-34010-B5		7.86
#Included w/Lower Trim Panel Assy			
5 Holder, Cup	R 66991-35010-B0	.2	36.55
	L 66992-35010-B0	.2	37.24
6 Brkt, Cup Holder	R 67625-35030		15.12
	L 67626-35010		15.12
7 Panel Assy, Upper Trim	R 62411-35040-B0	#.2	109.32
	L 62412-35040-B0	#.2	109.32
8 Cover, Seat Belt (a)	R 73023-35020-B0	#	23.35
	L 73024-35020-B0	#	23.35
9 Clip, Trim (a) (2/Side)	R/L 90467-10161		.89
(a) Included w/Upper Trim Panel Assy			
10 Clip, Upper Trim Panel	R/L 90467-07076-P1	#	.89
11 Shield, Moisture (b)	R/L 67841-35100	#	0.00
(b) Non-Reusable Part			
#w/Lower Trim Panel Removed, Not Included in R&R Lower Trim Panel			

HARDWARE

Refinish Upper Hinge	R/L	.5
Refinish Lower Hinge	R/L	.5


Illustration Located in Next Column

1 Control, Latch	R 69630-35010	#.3	13.38
	L 69640-35010	#.3	13.38
2 Retainer	R/L N.A.		0.00
3 Latch, Upper	R 69350-35030	#.3	151.93
	L 69360-35010	#.3	151.93
#w/Trim Panel Removed			
4 Striker, Upper	R 69470-04010	.2	27.98
	L 69480-04010	.2	27.98
5 Cover, Striker-See Roof Section			
6 Latch, Lower	R 69380-35020	#.3	164.99
	L 69390-35040	#.3	164.99

TOYOTA FJ CRUISER 2007

REAR DOOR Cont'd

HARDWARE Cont'd

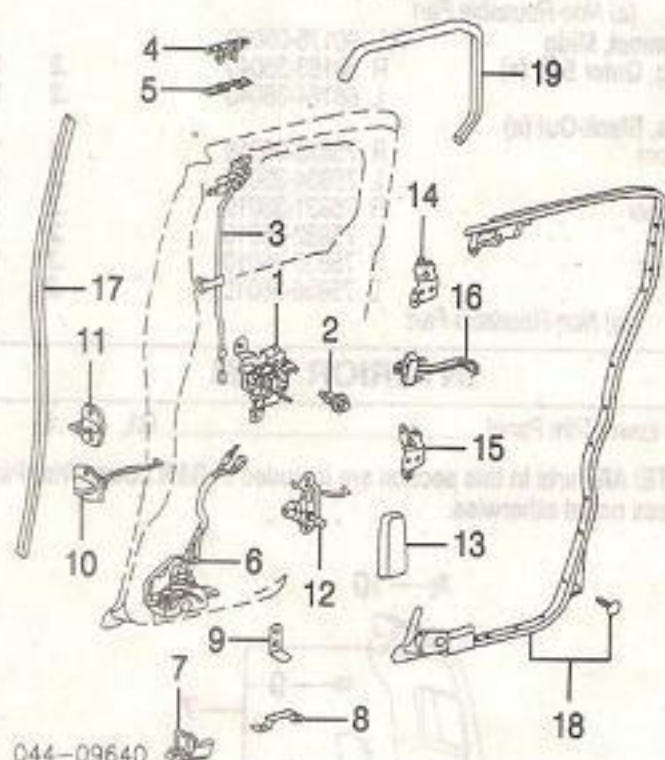

044-09640

#w/Trim Panel Removed

7 Striker, Lower	R 69410-35050	.2	32.07
	L 69420-35040	.2	32.07
8 Catch, Door Latch	R/L 69421-35010	.2	8.92
9 Stopper, Lower	R/L 69322-35010	.2	11.09
Harness, Door Wiring	R 82153-35230		47.61
	L 82154-35070		57.19
10 Lever, Lock Cancel	R 69770-35020	.2	7.46
	L 69780-35010	.2	7.46
11 Striker, Front Door	R/L 69410-AA030	.2	19.09
12 Handle, Inside	R 69207-35010	#.2	32.50
	L 69208-35010	#.2	32.50

#w/Trim Panel Removed

13 Grip, Handle	R/L 69205-35010-B0	.2	18.63
14 Hinge, Upper	R 68750-52020	#.2	42.24
	L 68760-0C010	#.2	42.24
15 Hinge, Lower	R 68750-52020	#.2	42.24
	L 68760-0C010	#.2	42.24

#w/Door Removed

16 Check, Door	R/L 68640-35030	#.2	86.20
#w/Trim Panel Removed			
17 Seal, Front (On Door)	R 67873-35010	.2	21.12
	L 67874-35010	.2	21.12
18 W/Strip, Door Opng (On Door)	R 67871-35070	.4	26.49
	L 67872-35070	.4	26.49

#Non-Reusable Part

19 Trim, Rear Door Opening-See Rocker/Pillars/Floor Section

GLASS & PARTS



044-08626

1 Glass, Rear Door

Toyota	R 68103-35090	#1.6	103.96
Green	L 68104-35090	#1.6	103.96
Privacy	R 68103-35080	#1.6	106.56
	L 68104-35080	#1.6	106.56
NAGS	R FD23055GTN	#1.6	0.00
Green	L FD23056GTN	#1.6	0.00
Privacy	R FD23055YPN	#1.6	0.00
	L FD23056YPN	#1.6	0.00

#Non-Reusable Part

#Includes R&R Upper Trim Panel & Clean Up Old Adhesive as Necessary

Adhesive, Glass N.A. 0.00

ROOF


Use Procedure Explanations 17 and 28 with the following text.

SHEET METAL/EXTERIOR TRIM

Refinish Roof Outside	4.2
R&I Drip Mouldings Complete	R/L .5

Illustration Located in Next Column

1 Panel, Roof	63111-35280	#17.0	995.89
#Does Not Include R&VR&R Quarter Glass			
2 Panel, Front Header (HSS)	63102-35050	1.5	135.00

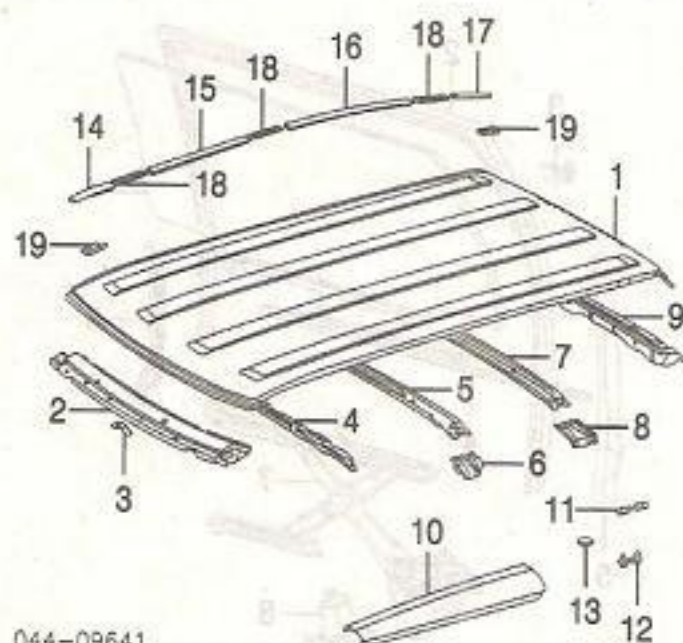


044-09641

3 Retainer, Support	R/L 63155-35010	.5	3.34
4 Reinf, Front Roof (HSS)	63141-35050	1.0	42.24
5 Reinf, Center Roof (HSS)	63103-35020	1.0	115.69
6 Bracket, Center Reinf	R/L 63146-35010	.5	24.64
7 Reinf, Rear Roof (HSS)	63125-35030	1.0	81.51
8 Reinf, Side	R 63148-35010	.5	25.18
	L 63149-35010	.5	25.18
9 Panel, Rear Header (HSS)	63105-35080	1.5	130.47
10 Rail, Outer Side Roof-See Rocker/Pillars/Floor Section			
11 Bracket, Roof Rack (3/Side)	R/L 63185-42020	2.74	
12 Stud, Mounting (3/Side)	R/L 63187-35020	3.54	
13 Retainer, Inner (3/Side)	R/L 63479-42010	1.40	
Rack, Roof			
Dealer Installed	N.A.	0.00	
Moulding, Roof Drip			
14 No. 1	R 75553-35020	#.2	28.89
	L 75554-35020	#.2	28.89
15 No. 2	R/L 75555-35010	#.2	61.36
16 No. 3	R/L 75556-35010	#.2	61.36
17 No. 4	R 75557-35020	#.2	20.83
	L 75556-35010	#.2	61.36

#R&R Each Additional 1

18 Cover, Midg Joint (3/Side)	R/L 75596-35020	12.72	
w/o Roof Rack	R/L 75561-42030	6.80	
19 Clip, Moulding (2/Side)			
#Non-Reusable Part			

INTERIOR TRIM

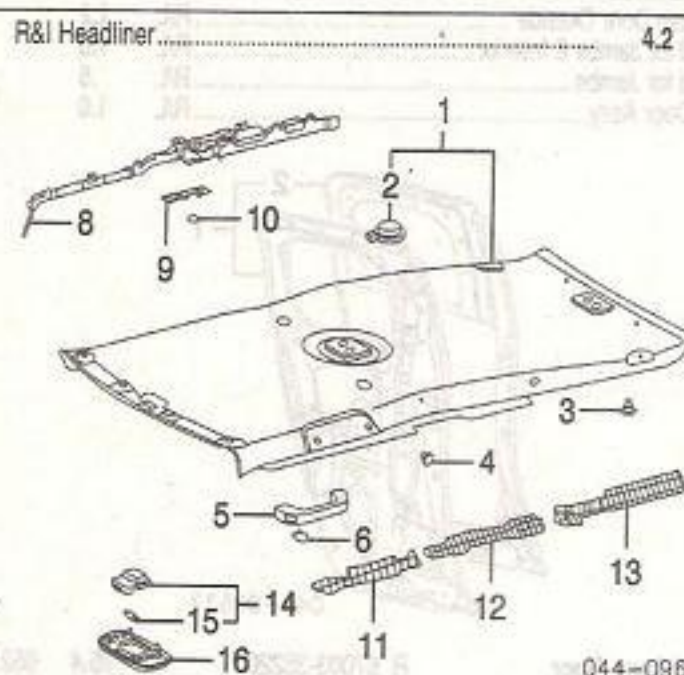

044-09642


R&I Headliner	4.2		
1 Headliner Assy			
w/Side Curtain Air Bags	63311-35380-B0	4.2	1441.96
w/o Side Curtain Air Bags	63311-35370-B0	4.2	1441.96
2 Speaker, Roof	R/L 86160-28660	.2	78.74
#Included w/Headliner Assy			
3 Clip, Headliner (2/Side)	R/L 90467-05164-B0	.63	
4 Plug, Hole			
w/Side Curtain Air Bags	R/L 74618-35021-B1	.2	11.98
5 Grip, Assist	R/L 74610-60060-B5	.2	0.00
6 Cap, Assist Grip (2/Side)	R/L 74617-60010-B4	1.69	
7 Hook, Coat	R/L 74631-35030-B1	.2	5.20
8 Module, Side Curtain Air Bag-See Air Bag System Section			
9 Cover, Striker	R 62431-35010-B0	34.55	
	L 62432-35010-B0	34.55	
10 Cap, Garnish (2/Side)	R/L 62487-35010-B0	1.49	
11 Front			
w/Side Curtain Air Bags	R 66413-35040	.2	19.69
	L 66423-35040	.2	19.69
w/o Side Curtain Air Bags	R 66413-35030	.2	38.58
	L 66423-35030	.2	38.58
12 Center	R 66414-35030	.2	54.33
	L 66424-35030	.2	54.33
13 Rear	R 66415-35030	.2	58.39
	L 66425-35030	.2	58.39
14 Lamp Assy, Room (2)	81366-68010	.2	13.92
15 Bulb, Room Lamp (a) (2)	90981-14011	.2	2.14
(a) Included w/Room Lamp Assy			
16 Lens, Room Lamp (2)	81240-52040-B1	34.68	

QUARTER PANEL

Use Procedure Explanations 20 and 28 with the following text.

SHEET METAL/EXTERIOR TRIM

Refinish Quarter Panel Outside	R/L	2.6
Add to Edge	R/L	.5
Add for Pillar	R/L	.5
Add for Inside	R/L	.8
Refinish Fuel Door	L	.5
#Included in Refinish Left Quarter Panel		
Add for Inside	L	.2
R&I Quarter Panel Flare Assy	R/L	.4
R&R Both Quarter Panels		36.1
R&R Roof & Both Quarter Panels		51.5

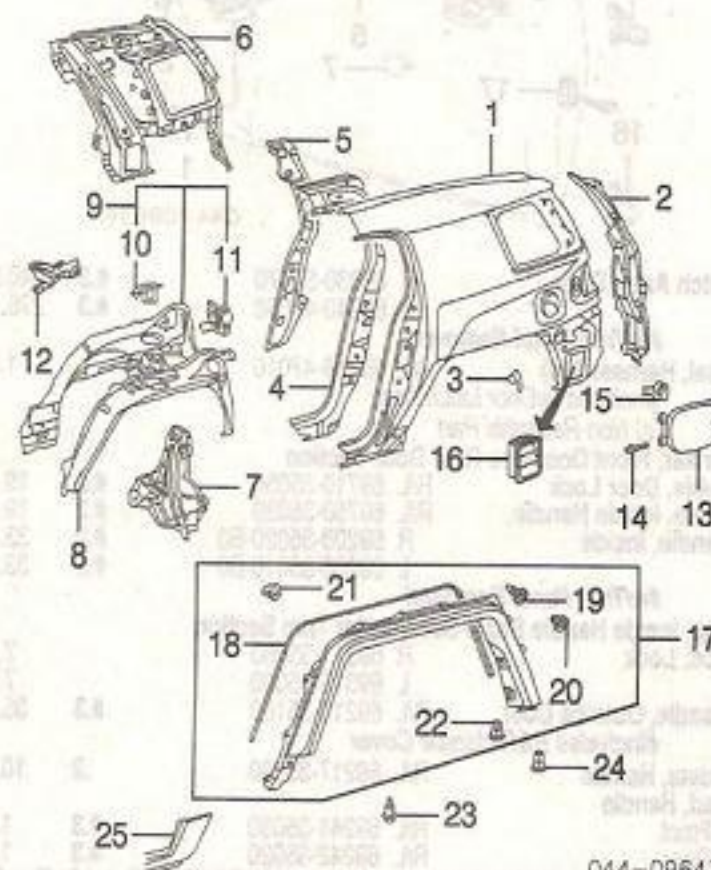


044-09643

1 Panel, Outer Quarter	R 61611-35250	#18.2	661.52
	L 61612-35191	#19.2	661.52
#Includes Transfer of Stub Bracket, Includes R&I Rear Door, Left Side Includes R&I Back Door			
2 Reinf, Rear Pillar	R 61035-35020	4.7	175.39
	L 61036-35020	4.7	247.13
3 Plate, Fuel Filler Mtg	L 61729-35060		6.97
4 Reinf, Frt Quarter Panel (HSS)	R 61605-35040	5.0	193.83
	L 61606-35020	5.0	193.83
5 Panel, Front Inner (HSS)	R 61733-35010	4.0	112.00
	L 61734-35010	4.0	112.00
6 Panel, Inner Quarter	R 61703-35090	6.5	405.77
	L 61704-35060	6.5	405.77
7 Protector, Filler Tube	L 77277-35030		85.17
8 Panel, Outer Wheelhouse	R 61631-35903	3.0	154.93
	L 61632-35902	3.0	154.93
9 Panel Assy, Inner Wheelhouse	R 61633-35904	3.0	245.50
	L 61634-35902	3.0	245.50
10 Brkt, Tool Bag	L 58785-35010	.5	16.29
11 Gusset, Wheelhouse	R 61645-35010	.5	16.52
	L 61646-35030	.5	16.52
#Included w/Inner Wheelhouse Panel Assy			
12 Brkt, Jack Mtg	L 58708-35030	.5	21.52
13 Door, Fuel	L 77350-35060	.3	48.30
14 Rivet, Fuel Door (a) (2)	L 90269-06017		1.47
(a) Non-Reusable Part			
15 Spring, Fuel Door	L 77366-35030		.60
16 Duct, Vent	R/L 62903-60070	#.2	60.39
#w/Bumper Cover Removed			
17 Flare Assy, Quarter Panel	R 75605-35100	.4	118.72
	L 75606-35100	.4	118.72
18 Pad, Flare (a) (b)	R/L 75659-35110		8.06
19 Orange	R/L 75397-35010		.74
20 Blue	R/L 75495-35010		.74
(a) Non-Reusable Part			
(c) As Required			
Grommet, Flare (b)			
21 Type 1	R/L 90189-A0002		.74
22 Type 2 (2/Side)	R/L 90189-06028		.71
(b) Included w/Quarter Panel Flare Assy			
23 Clip, Mounting (c)	R/L 52161-02020		1.83
(c) As Required			
24 Grommet, Mtg	R/L 90189-06029		.91
25 Moulding Assy, Rocker-See Rocker/Pillars/Floor Section			

INTERIOR TRIM

Illustration Located in Next Column

1 Panel Assy, Lower Trim	R 64730-35100-B0	.5	321.61
	L 64740-35070-B0	.5	321.61
2 Label, Body Caution	R/L 74541-28090		1.23
3 Clip, Panel (6/Side)	R/L 90467-10161		.89

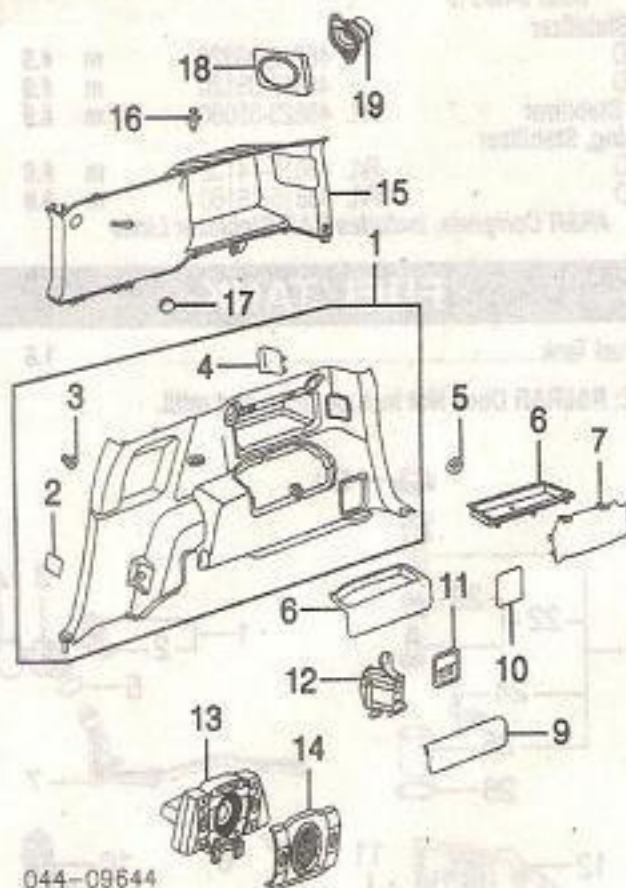

044-09644

4 Cover, Lamp Service	R 64745-35020-B0	14.00
	L 64746-35020-B0	14.86
*Included w/Lower Trim Panel Assy		
5 Hook, Cargo Net (2/Side)	R/L 64267-35020-B0	14.52
6 Pocket, Quarter Trim	R 62594-35030-B0	55.36
	L 62595-35030-B0	58.39
7 Cover, Lower Trim	R 62627-35010-B0	58.39
	L 64766-35020-B0	68.11
8 Tray, Quarter Trim	R 62596-35010-B0	
9 Garnish, Trim Panel w/Sub-Woofers	R 64753-35020-B0	41.27
10 Cover, Hole w/o Power Outlet	R 64716-35020-B0	32.32
	L 85530-35060-B0	31.92
11 Outlet, Power	R 86210-35040	1177.05
12 Module, Inverter	R 86150-35100	.2 792.42
13 Speaker, Sub-Woofers	R 86168-35020	213.63
14 Grille, Sub-Woofers	R 62471-35050-B0	#.7 189.45
15 Panel, Upper Trim	L 62472-35030-B0	#.7 192.17
*Includes R&R Lower Trim Panel Assy		
16 Clip, Upper Panel Type 1	R/L 90467-07076-P1	.89
Type 2 (10/Side)	R/L 90467-10161	.89
17 Cover, Front Panel	R 62521-35070-B0	3.69
	L 62522-35070-B0	3.69
18 Cover, Rear Trim w/Speakers	R 86269-35020-B0	24.44
	L 86279-35020-B0	26.61
w/o Speakers	R 62583-35010-B0	21.83
	L 62584-35010-B0	21.83
19 Speaker, Rear	R 86160-35280	.2 66.51
	L 86160-35290	.2 66.51

QUARTER GLASS



044-09645

1 Glass, Quarter		
Toyota		
Green	R 62730-35160	#1.7 236.71
	L 62740-35160	#1.7 236.71
Privacy	R 62730-35150	#1.7 240.75
	L 62740-35150	#1.7 240.75
NAGS		
Green	R FQ23057GTN	#1.7 0.00
	L FQ23058GTN	#1.7 0.00
Privacy	R FQ23057YPN	#1.7 0.00
	L FQ23058YPN	#1.7 0.00

*Non-Reusable Part


*Includes Clean Up Old Adhesive as Necessary

BACK DOOR

Use Procedure Explanations 16 and 28 with the following text.

SHEET METAL/EXTERIOR TRIM

Refinish Back Door Outside	2.6
Add for Inside	1.3
R&I Back Door	.6
R&I Spoiler	.5
R&I Lower Door Moulding	R/L .2

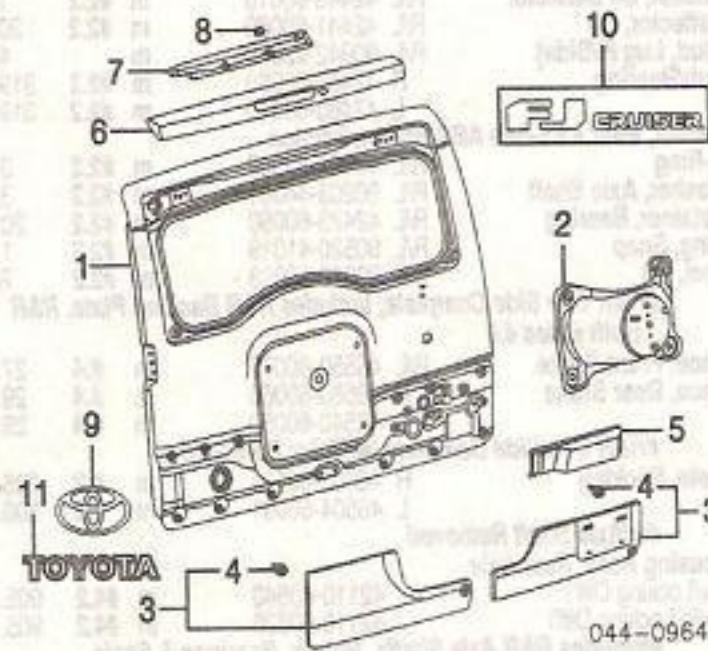


044-09646

1 Shell, Back Door w/Rear Wiper	67005-35380	4.0 566.29
w/o Rear Wiper	67005-35390	4.0 566.29
2 Carrier, Spare Wheel-See Wheel Section		
3 Moulding Assy, Lower Door	R 75815-35010	.2 134.81
	L 75816-35010	.2 139.50
4 Clip, Moulding (a) (b)		
Blue	R/L 75495-35010	.74
Orange	R/L 75397-35010	.74
*Included w/Lower Door Moulding Assy		
(a) As Required		
(b) Non-Reusable Part		
5 Lamp Assy, License Plate-See Rear Lamps Section		
6 Spoiler, Rear w/Rear Wiper	76871-35090	.6 236.96
w/o Rear Wiper	76871-35100	.6 236.96
7 Cover, Spoiler	76893-35040	27.87
8 Retainer, Spoiler Type 1 (2)	76865-35030	.89
Type 2 (2)	76866-35020	.71
9 Emblem (Adhesive)	75471-42030	.2 20.46
Nameplate (Adhesive)		
10 "FJ CRUISER"	75445-35080	.2 31.61
11 "TOYOTA"	75446-52050	.2 21.98

INTERIOR TRIM

R&I Trim Panel 3

NOTE: All Parts in this section are included in R&R Trim Panel unless noted otherwise.

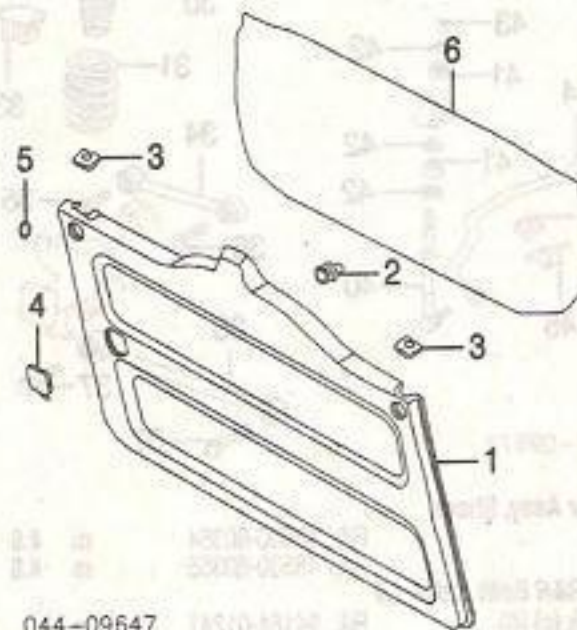

044-09647


1 Panel, Door Trim	64781-35030-B0	.3 242.47
2 Clip, Panel Type 1 (12)	90467-A0005	.97
Type 2 (4)	90467-10161	.89
3 Cover, Upper Hole	R 64791-35020-B0	7.29
	L 64792-35010-B0	7.29
4 Cover, Lock	64798-35020-B0	5.12
5 Cap, Screw	R/L 67772-35010-B0	2.72
6 Shield, Moisture	67847-35030	# 11.89
*Non-Reusable Part		
*w/Trim Panel Removed, Not Included in R&R Trim Panel		

HARDWARE

Refinish Upper Hinge	.5
Refinish Lower Hinge	.5

Illustration Located in Next Column

1 Latch, Back Door	69110-35070	#.3 263.25
*w/Trim Panel Removed		
2 Snap, Handle-See Rear Lamps Section		
3 Striker, Latch	69410-AA030	.2 19.09
4 Latch, Glass	69370-35020	#.3 249.73
5 Cylinder Assy, Back Door Lock (c)	69055-35130	#.2 91.74

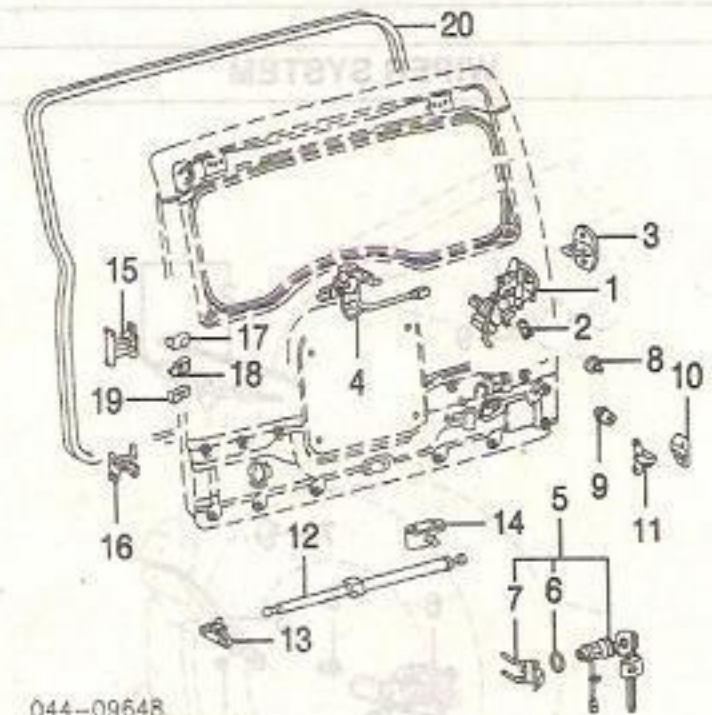


044-09648

*w/Trim Panel Removed		
6 Pad, Lock Cylinder (c) (d)	69563-10020	.51
(d) Included w/Back Door Lock Cylinder Assy		
7 Retainer, Lock Cyl (c)	69511-16030	2.83
(c) Included w/Vehicle Lock Set-listed in Steering Wheel/Column Section		
Harness, Wiring		
No. 1		
w/Rear Wiper	82184-35240	136.07
w/o Rear Wiper	82184-35230	136.07
No. 2	82185-35120	68.48
No. 3	82186-35010	9.55
8 Stopper, Door	67282-46010	4.00
9 Bumper, Door Wedge, Door	67293-60030	1.63
10 Male (On Body)	69461-46010	8.55
11 Female (On Door)	69403-60010	13.26
12 Damper, Door Bracket, Damper Mounting	68907-35070	125.78
13 On Body	68948-35021	14.18
14 On Door	68948-35010	9.20
15 Hinge, Upper	L 68801-35010	#.2 214.63
16 Hinge, Lower	L 68801-60050	#.2 56.53
*w/Back Door Removed		
Cover, Upper Hinge		
17 No. 1	L 68856-35011	8.75
18 No. 2	L 68852-35010	12.46
19 No. 3	L 68858-35011	9.06
20 W/Strip, Back Door (On Body)	67881-35050	77.23

GLASS & PARTS

R&I Back Door Glass 4

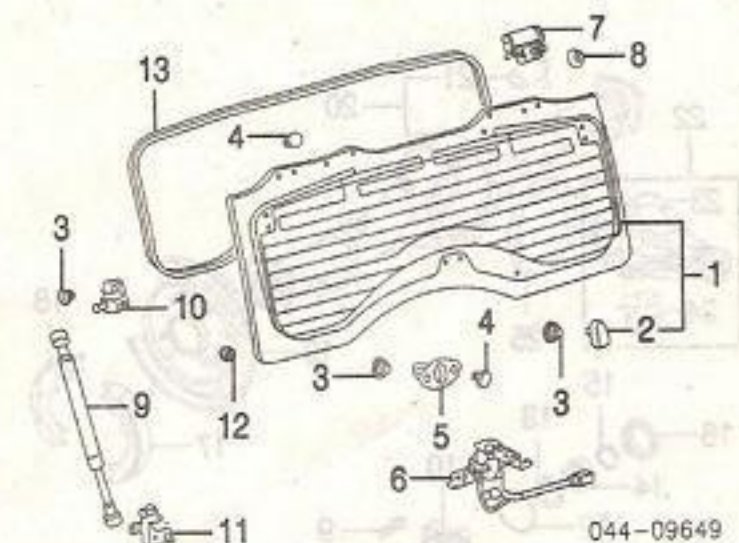


044-09649

1 Glass Assy, Back Door		
Toyota		
Green	68150-35901	.5 393.80
Privacy	68150-35902	.5 457.80
NAGS		
Green	FB23059GTY	.5 0.00
Privacy	FB23059YPY	.5 0.00
2 Handle, Outside	69209-35010	.2 11.57
*Included w/Back Door Glass Assy		
3 Bushing, Spacer (a)	90385-11005	1.12
4 Retainer, Glass (a)	62735-95D00	6.63
(a) As Required		
5 Striker, Latch	69450-35010	.2 12.57
6 Latch, Glass-See Hardware Section		
7 Hinge, Glass	R 68810-35020	#.2 37.24
	L 68820-35020	#.2 37.24
*w/Door Glass Removed		
8 Seal, Hinge	R/L 68868-32010	1.69
9 Stay, Glass Support Brkt, Stay Mtg	R/L 68930-35010	92.88
10 Upper	R 61655-35031	7.23
	L 61656-35020	7.23
11 Lower	R 61655-35040	11.09
	L 61656-35010	7.77
12 Bumper, Rubber	R/L 90541-11006	2.01
13 W/Strip, Glass (On Door)	67882-35010	.2 46.65

TOYOTA FJ CRUISER 2007

BACK DOOR Cont'd

WIPER SYSTEM

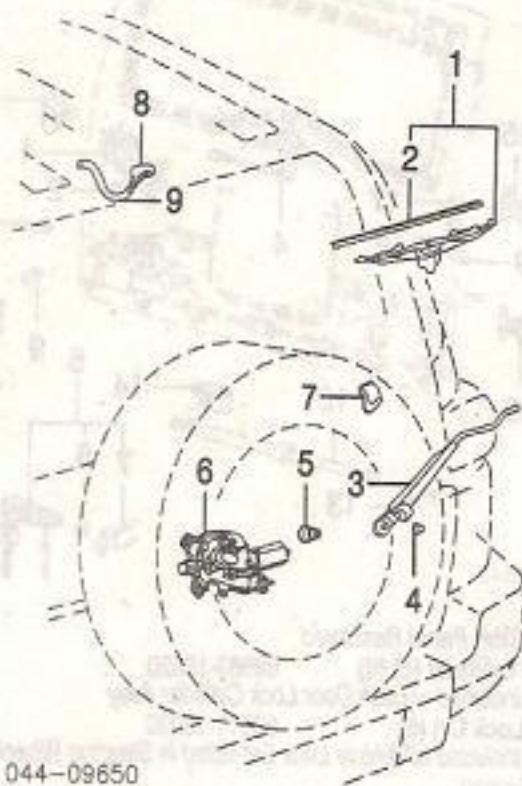

044-09650


1 Blade Assy, Wiper	85242-35040	#.1	10.29
#Included in R&R Wiper Arm			
2 Refill, Wiper	85214-35070	.1	2.64
#Included w/Wiper Blade Assy			
3 Arm, Wiper	85241-35050	#.2	54.67
4 Nut, Wiper Arm	90179-06158	#	1.03
5 Grommet, Wiper Arm	85143-52020	#	2.83
#Included in R&R Back Door Shell			
6 Motor, Wiper	85130-35090	#.3	166.89
#Includes R&R Wiper Arm, w/Trim Panel Removed, Included in R&R Back Door Shell			
7 Stop, Wiper Arm	85293-35030		14.43
8 Nozzle, Washer	85391-35030	.2	10.37
9 Hose, Washer (a)	N.A.		0.00
(a) Cut to Fit			

REAR SUSPENSION

Use Procedure Explanation 23 with the following text.

R&I Suspension/Axle Housing Assy	m	2.5
Check Rear Alignment	m	.8
Add to Adjust Front Alignment	m	.7
Bleed Brake System	m	.5

NOTE: R&I/R&R Does Not include alignment or bleed brake system.

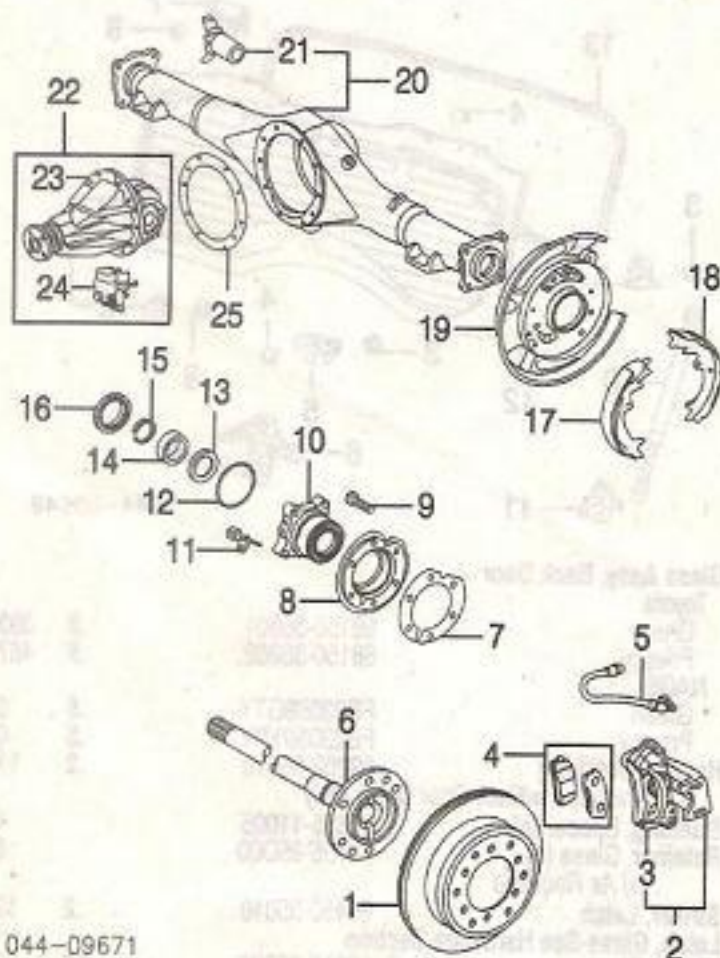

044-09671

1 Rotor, Brake	R/L 42431-60201	m	#.6	133.63
#R&R Both Sides 1.0				
2 Caliper Assy, Brake	R 47730-35170	m	#.5	320.55
	L 47750-35170	m	#.5	320.55
3 Brkt, Caliper	R 47721-60020	m	#.5	76.14
	L 47722-60020	m	#.5	76.14
#Included w/Brake Caliper Assy				
4 Pad Set, Brake	04466-60090	m	#1.0	46.32
#Deduct .5 for Each Caliper Removed				
5 Hose, Brake	R/L 90947-02D31-2	m	#.3	30.84
#w/Caliper Removed Deduct .2				

6 Shaft, Axle	R/L 42311-60240	m	#2.2	385.65
7 Gasket, Oil Deflector	R/L 42443-60010	m	#2.2	1.86
8 Deflector, Oil	R/L 42441-60060	m	#2.2	20.23
9 Stud, Lug (6/Side)	R/L 90942-02079	m		4.83
10 Hub/Bearing	R 42450-60050	m	#2.2	319.61
	L 42460-60010	m	#2.2	319.61
11 Sensor, Rear ABS-See ABS/Brakes Section				
12 O-Ring	R/L 90301-83002	m	#2.2	3.00
13 Washer, Axle Shaft	R/L 90208-44001	m	#2.2	3.74
14 Retainer, Bearing	R/L 42423-60050	m	#2.2	20.49
15 Ring, Snap	R/L 90520-41019	m	#2.2	1.54
16 Seal, Oil	R/L 90310-58003	m	#2.2	7.00

#R&R One Side Complete, Includes R&R Backing Plate, R&R Both Sides 4.0

17 Shoe, Front Brake	R/L 46550-60070	m	#.4	27.15
18 Shoe, Rear Brake	R 46580-60060	m	#.4	29.55
	L 46540-60060	m	#.4	29.55

#R&R One Side Complete, w/Rotor Removed

19 Plate, Backing	R 46503-60131	m	#.2	306.49
	L 46504-60091	m	#.2	306.49

#w/Axle Shaft Removed

20 Housing Assy, Rear Axle	42110-60840	m	#4.2	905.43
w/Locking Diff'l	42110-60820	m	#4.2	905.43

#Includes R&R Axle Shafts, Rotors, Bearings & Seals

21 Deflector, Oil (a)	R/L 42139-60070	m		23.12
(a) Included w/Rear Axle Housing Assy				


22 Differential Assy				
w/Locking Diff'l				
Man Trans	41110-35B30	m	#6.0	1178.60
Auto Trans	41110-60A00	m	#6.0	1202.12
w/o Locking Diff'l				
Man Trans	41110-35B10	m	#6.0	1202.12
Auto Trans	41110-3D550	m	#6.0	1202.12

23 Housing, Diff'l (b)				
w/Locking Diff'l	41101-35150	m	#6.4	358.87
w/o Locking Diff'l	41101-35170	m	#6.4	358.87

#Includes R&R Axle Shafts, Rotors, Bearings & Seals

24 Actuator, Diff'l Lock (b)	41450-35030	m	.7	744.44
(b) Included w/Differential Assy				

25 Gasket, Housing				
w/Locking Diff'l	42181-60130	m		6.86
w/o Locking Diff'l	42181-60120	m		6.86

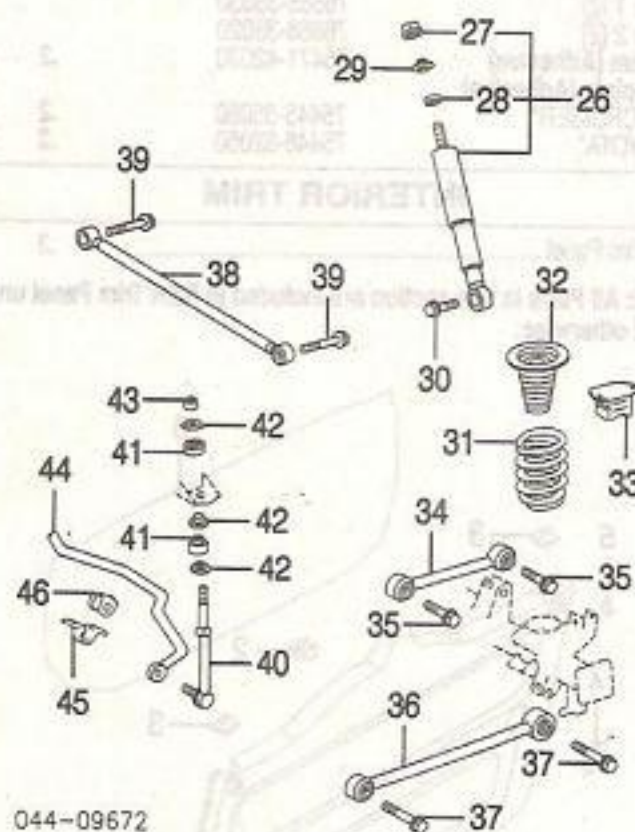

044-09672

26 Absorber Assy, Shock				
2WD	R/L 48530-80354	m	#.6	37.94
4WD	R/L 48530-80355	m	#.6	37.94
#R&R Both Sides 1.0				
27 Nut, Lock (c) (d)	R/L 94184-01241	m		.94
(d) Non-Reusable Part				
28 Cushion, Shock Absorber (c)				
Upper	R/L 90948-01087	m		4.46
Lower	R/L 90948-01088	m		5.29
(c) Included w/Shock Absorber Assy				
29 Retainer, Cushion				
Type 1 (2/Side)	R/L 48597-60070	m		3.52
Type 2	R/L 48597-60080	m		3.17
30 Bolt, Shock Mtg	R/L 90119-A0018	m		3.03
31 Spring, Coil				
2WD	R/L 48231-35320	m	#.8	94.24
4WD	R/L 48231-35330	m	#.8	68.71
32 Insulator, Spring	R/L 48302-35040	m	#.8	66.42
33 Bumper, Rebound	R/L 48306-60180	m	#.8	42.24

#R&R One Side Complete, R&R Both Sides 1.4

34 Arm, Upper Control	R/L 48710-35050	m	#.9	98.60
#R&R Both Sides 1.6				
35 Bolt, Up Cont Arm (2/Side)	R/L 90105-12340	m		3.32
36 Arm, Lower Control	R/L 48720-35060	m	#.7	174.05
#R&R Both Sides 1.2				
37 Bolt, Lwr Cont Arm (2/Side)	R/L 90119-14118	m		4.12
38 Rod, Lateral Control	48740-35040	m	.7	197.54
39 Bolt, Lateral Rod	R/L 90119-14119	m		4.94
40 Link, Stabilizer	R/L 48830-60030	m	#.4	69.76
41 Cushion, Link (2/Side)	R/L 48817-30020	m	#.4	2.77
42 Retainer, Cushion				
Type 1 (2/Side)	R/L 90948-02126	m	#.4	4.20
Type 2	R/L 90948-02127	m	#.4	3.32
43 Nut, Link (d)	R/L 94183-00831	m	#.4	.63
(d) Non-Reusable Part				

#R&R One Side Complete, Included in R&R Stabilizer Bar, R&R Both Sides .6

44 Bar, Stabilizer				
2WD	48812-60220	m	#.9	102.60
4WD	48812-35120	m	#.9	86.91

45 Brkt, Stabilizer	R/L 48823-35060	m	#.9	8.03
---------------------	-----------------	---	-----	------


46 Bushing, Stabilizer				
2WD	R/L 48815-14130	m	#.9	8.86
4WD	R/L 48815-16160	m	#.9	14.60

#R&R Complete, Includes R&R Stabilizer Links

FUEL TANK

R&I Fuel Tank	1.8
---------------	-----

NOTE: R&I/R&R Does Not include drain and refill.

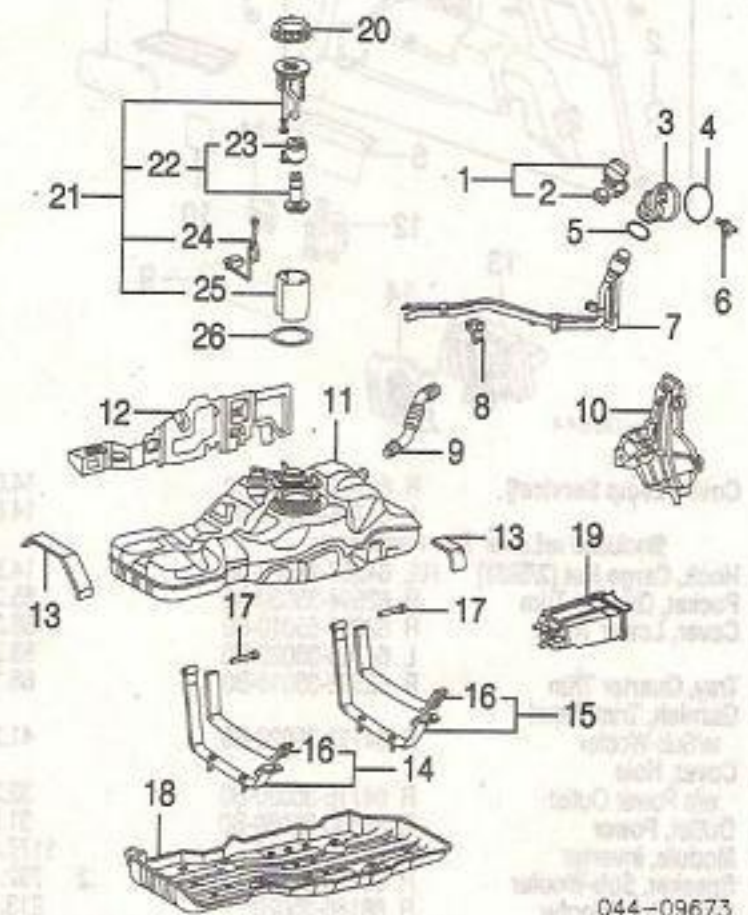

044-09673

1 Cap Assy, Fuel	77300-06040			14.42
2 Gskt, Fuel Cap	77316-52020			3.49
#Included w/Fuel Cap Assy				
3 Shield, Fuel Filler	77291-35140			23.41
4 Ring, Shield Retainer				
Upper	77391-02030			2.43
Lower	77371-35010			1.97
5 Clip, Retainer	77367-35020			3.00
6 Pipe, Fuel Filler	77201-35600			195.17
7 Clamp, Tube	77229-60070			7.60
8 Hose, Fuel Filler	77213-35370			33.55
9 Protector, Filler Tube-See Quarter Panel Section				
10 Tank, Fuel	77001-3D550	m	2.0	494.60
11 Shield, Fuel Tank	77643-35050			28.81
12 Cushion, Fuel Tank				
Type 1	77651-35070			15.06
Type 2 (a) (b)	77652-35060			6.83
(a) As Required				
(b) Order by Application				

Strap Assy, Fuel Tank				
14 Front	77601-35110			43.58
15 Rear	77602-35050			59.36
16 Seat, Strap (c)				
Front	77681-35060			9.37
Rear	77681-35040			20.83
(c) Included w/Fuel Tank Strap Assy				
17 Pin, Tank Strap (2)	77653-35040			8.69
18 Protector, Tank	77606-35070			328.98
19 Canister, Vapor-See Emission System Section				
20 Ring, Fuel Pump Retainer (d)	77144-35010			34.55
(d) Non-Reusable Part				


21 Pump/Sender Assy, Fuel	77020-35121	m	#1.8	563.36
#Included in R&R Fuel Tank				
22 Pump Assy, Fuel (e)	23220-50130	m	#2.0	319.42
23 Filter, Fuel (e) (f)	23300-21030	m	#2.0	40.40
(f) Included w/Fuel Pump Assy				
24 Sender, Fuel (e)	83320-35611	m	#2.0	76.14
#R&R Complete, Included in R&R Fuel Tank				
25 Protector, Pump (e)	77131-26112			19.89
(e) Included w/Fuel Pump/Sender Assy				
26 O-Ring, Fuel Pump (d)	77169-35010			2.63
(d) Non-Reusable Part				

REAR BODY

Use Procedure Explanations 26 and 28 with the following text.

SHEET METAL


Refinish Rear Body Panel	1.5
Refinish Rear Floor Pan	2.0
Add for Underside	1.0
Refinish Rear Floor Pan Section	1.6
Add for Underside	.8
Refinish Floor Sidemember	R/L 1.0
Section Rear Floor Pan	#10.5
#w/Rear Body Panel & Panel Extensions Removed	

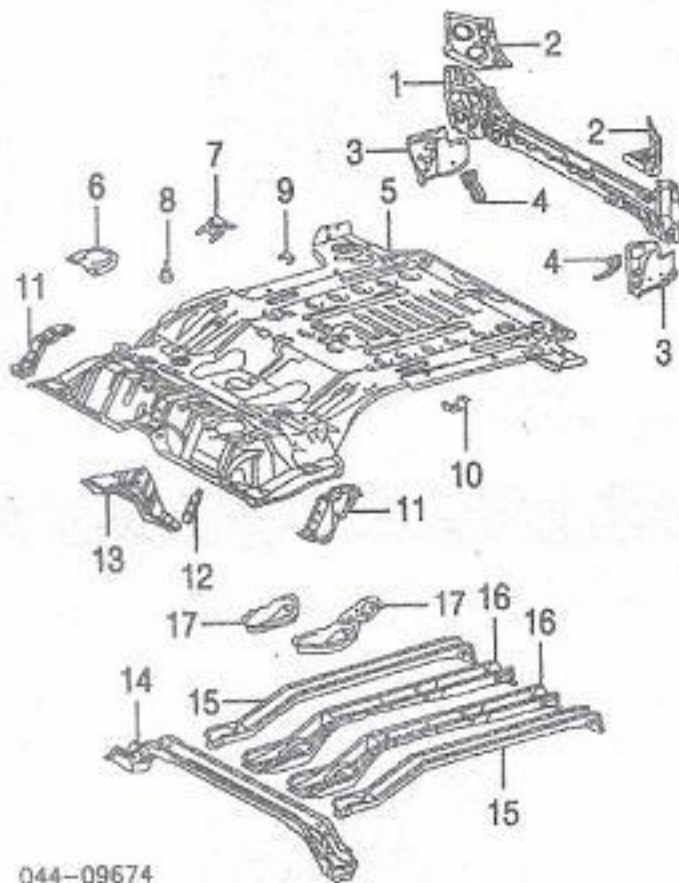

044-09674

1 Panel, Rear Body	58307-35030	8.2	356.42
2 Extension, Panel	R 58305-35020	2.5	58.39
	L 58306-35030	2.5	58.39
3 Extension, Side Floor	R 58316-35050	2.5	30.95
	L 58317-35040	2.5	30.95
4 Brkt, Bumper Arm	R/L 58355-35020	.5	7.54
5 Pan, Rear Floor	58311-35090	#14.5	596.91
#w/Rear Body Panel & Panel Extensions Removed			
6 Cover, Service Hole	58325-35010		14.06
7 Brkt, Center Floor	R/L 58249-35040	.5	16.29
8 Bolt, Mounting	R/L 71397-35020		6.09
9 Stopper, Seat Back	R/L 58244-35010		3.32
10 Reinf, Mounting (a)	58204-35051		49.30
(a) As Required			
11 Brkt, Seat Mounting	R 58215-35030	1.0	37.24
	L 58216-35010	1.0	37.24
12 Reinf, Rear Seat Hinge	L 58247-35040	.5	10.75
13 Reinf, Center Floor	57551-35010	2.0	50.99
14 Crossmember, Floor (HSS)	57405-35010		318.92
15 Sidemember, Floor (HSS)	R/L 57601-35030	#2.0	61.73
16 Reinf, Inner Floor (HSS)	R 57603-35020	#2.0	103.63
	L 57604-35020	#2.0	103.63
#Included in R&R Rear Floor Pan			
17 Plate, Reinf	R 58271-35010	1.5	28.21
	L 58204-35051	1.5	49.30

INTERIOR TRIM

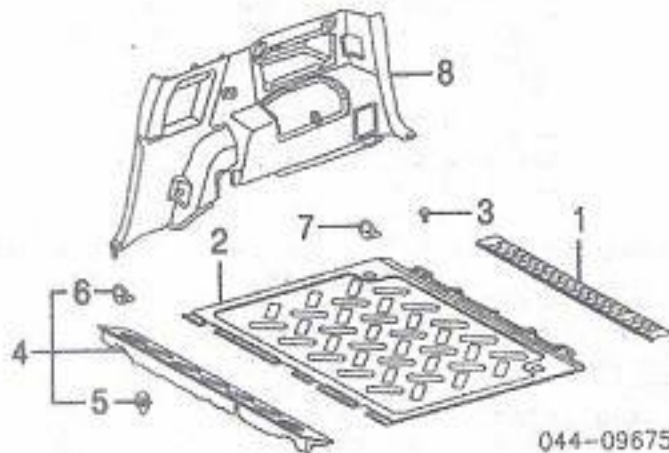


044-09675

1 Plate, Rear Scuff	58574-35020-B0	.2	68.11
2 Mat, Rear	58570-35130-B0	.2	251.78
3 Clip, Rear	R/L 90467-05164-B2		.63
4 Panel Assy, Center Finish	58401-35030-B0	.2	172.39
5 Clip, Mat	52425-35020		2.23
Hook, Tie-Down			
6 Front	R/L 58460-35020		12.09
7 Rear	R/L 58460-35020		12.09
#Included w/Center Finish Panel Assy			
8 Panel Assy, Lower Trim-See Quarter Panel Section			

REAR LAMPS

COMBINATION LAMP

R&I Combination Lamp R/L #.3
 #w/Lower Trim Panel Assy Removed

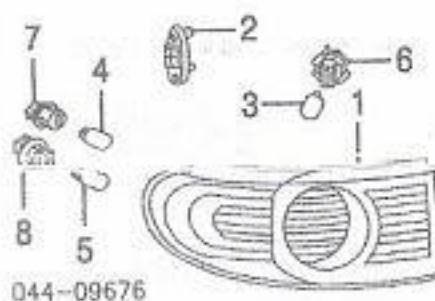


044-09676

1 Lamp, Combination	R 81551-35340	#.3	202.76
	L 81561-35300	#.3	202.76
#w/Lower Trim Panel Assy Removed			
2 Support, Lamp	R 61663-35010		14.52
	L 61664-35010		14.52
3 Bulb, Tail/Stop/Side Marker	R/L 90981-11048		4.23
4 Bulb, Back-Up	R/L 90981-11059	#.2	3.89
5 Bulb, Signal	R/L 90981-15021	#.2	3.92
#R&R One Side Complete, Included in R&I/R&R Combination Lamp			
6 Socket, Tail/Stop Lamp	R/L 90075-60002		4.83
7 Socket, Back-Up Lamp	R/L 90075-60021		7.89
8 Socket, Signal Lamp	R/L 90075-60026		8.40

LICENSE LAMP


R&I License Plate Lamp Assy #.6
 #Includes R&I Trim Panel, Included in R&R Back Door

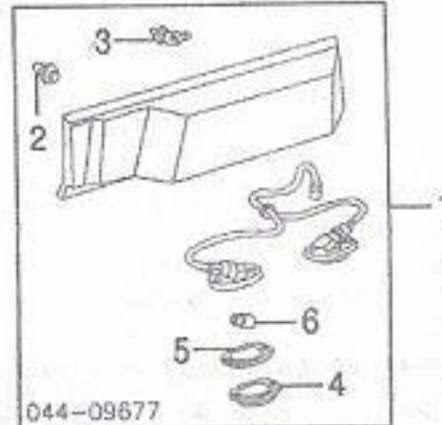

044-09677

1 Lamp Assy, License Plate	76801-35480	#.3	209.92
#w/Trim Panel Removed			
2 Clip, Mounting (4)	62955-95700		1.11
3 Snap, Handle	69293-12030		2.09
4 Lens, License Lamp	R/L 81271-24010	#.2	4.63
5 Gskt, Lens	R/L 81272-24010		3.54
6 Bulb, License Lamp	R/L 00234-00192	#.2	1.00
#Included w/License Plate Lamp Assy			
#R&R One Side Complete, Included in R&I/R&R License Lamp Assy			

HIGH MOUNT STOP LAMP

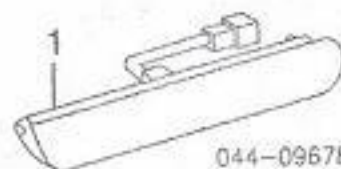

044-09678


1 Lamp, High Mount Stop	81570-35090	#.2	110.27
#Included in R&R Spoiler			

REAR BUMPER

Use Procedure Explanations 27 and 28 with the following text.

R&I Bumper Cover	1.0
O/H Bumper Cover (Includes R&I)	1.9
Add to R&R or O/H Bumper Cover	
w/Rear Object Sensors	.4

NOTE: All Parts in this section are included in O/H unless noted otherwise.

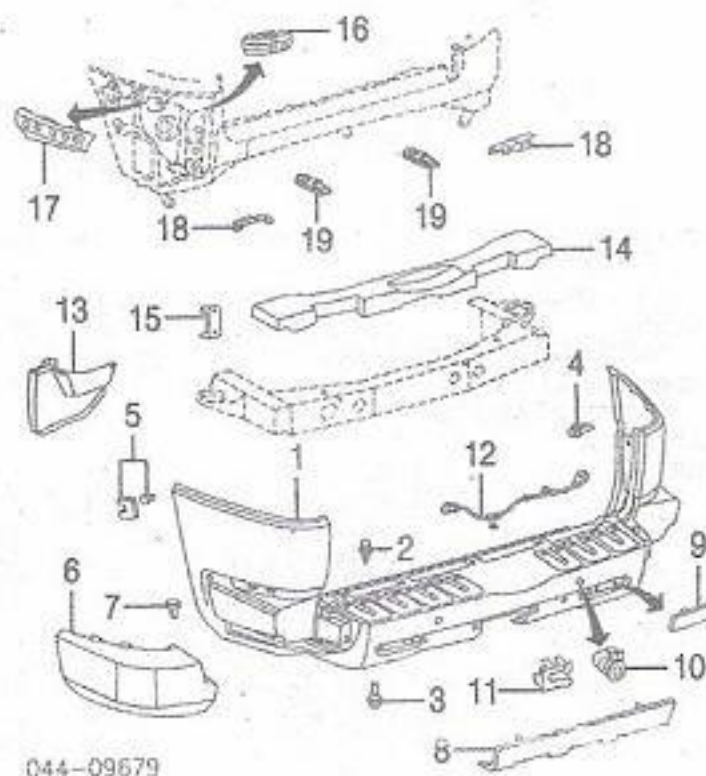


044-09679

1 Cover, Bumper	52159-35220	1.7	220.36
w/Rear Object Sensors			
	52159-35210		220.36
w/o Rear Object Sensors			
2 Bolt, Upper Mtg (5)	90109-05371		1.26
3 Bolt, Lower Mtg	R/L 90109-06325		.80
4 Clip, Cover	R/L 52161-02020		1.83
#As Required			
5 Support, Side Cover	R 52155-35030		10.37
	L 52156-35030		10.37

6 Pad, Side Bumper	R 52462-35010	#.3	119.01
	L 52463-35010	#.3	119.01
#w/Bumper Cover Removed			
7 Retainer, Pad (6/Side)	R/L 75392-35200		1.40
8 Cover, Lower	52169-35020	.2	76.48
9 Reflector, Bumper	R/L 81910-35060	#.2	24.64
#w/Bumper Cover Removed			
10 Sensor, Rear Object	R/L 89341-33050	#.2	172.36
11 Retainer, Sensor	R/L 89348-45010	#	6.34
12 Harness, Sensor	R 82163-35070	#	15.92
	L 82163-35080	#	15.92
#w/Bumper Cover Removed, Not Included in O/H			
13 Mudguard, Rear	R 76607-35100	#.2	58.42
	L 76608-35101	#.2	33.21
#Not Included in O/H			
14 Absorber, Energy	52615-35030	IOH	41.93
15 Brkt, Bumper	R 52173-35070	#.1	7.57
	L 52174-35070	#.1	7.57
Retainer, Bumper End			
16 Inner	R 52587-35030	#.1	39.58
	L 52588-35030	#.1	39.58
17 Outer	R 52562-35030	#.1	57.36
	L 52563-35030	#.1	57.36
18 Stay, Side Bumper	R 52151-35110	#.1	17.09
	L 52152-35090	#.1	17.09
19 Brkt, Side Mtg (2/Side)	R/L 52185-35020	#.1	0.00
#w/Bumper Cover Removed, Not Included in O/H			

R&I Hood Assy	.6
R&I Hood Moulding	.3
R&I Washer Nozzle	R/L #.2

#Included in R&R Hood

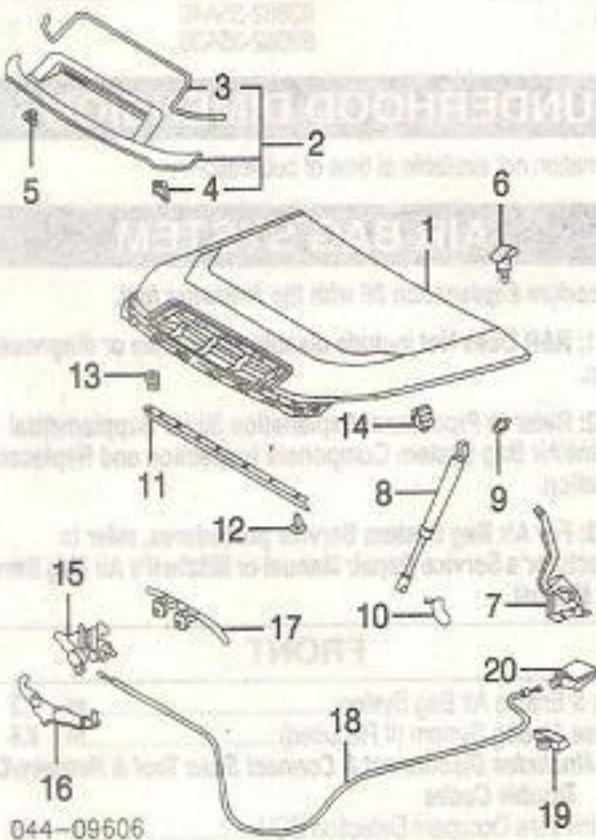


1 Hood	53301-35190	1.3	393.88
2 Moulding Assy, Hood			
Black (Code 2JW)	76180-35030-C0	.3	218.98
Blue (Code 2JV)	76180-35030-J0	.3	218.98
Bordeaux (Code 2JT)	76180-35030-D0	.3	218.98
Silver (Code 2JR)	76180-35030-B0	.3	218.98
Yellow (Code 2JU)	76180-35030-F0	.3	218.98
3 Protector, Mldg	76183-35020		3.32
4 Clip, Moulding			
Blue (6)	75396-35020	.74	
Orange	75395-35070	2.49	
#Included w/Hood Moulding Assy			
5 Nut, Moulding (10)	90080-17202	1.46	
6 Nozzle, Washer-See Windshield Section			
7 Hinge, Hood	R 53410-35110	#.2	26.52
	L 53420-35100	#.2	26.52
#w/Hood Removed			
8 Support, Hood	R 53440-0W120	.2	62.93
	L 53450-0W110	.2	62.93
9 Stud, Ball	R/L 68961-30020	7.34	
10 Bracket, Support	R 53408-35010	6.66	
	L 53409-35010	6.66	
11 Seal, Hood	53381-35070	.2	23.95
12 Clip, Hood Seal (8)	90467-A0009	.97	
13 Bumper, Front Hood	R/L 90541-15004	.1	4.20
14 Bumper, Side Hood-See Front Fender Section			
15 Latch, Hood	53510-35240	.3	42.24
16 Protector, Latch	53525-33040	13.15	
17 Protector, Cable	53602-60020	16.86	
18 Cable, Hood	53630-35090	.9	24.75
19 Clamp, Cable	53614-35020	2.94	
20 Handle, Release	53601-52010-B3	.3	33.87

COOLING

Use Procedure Explanations 5 and 28 with the following text.

R&I Radiator Assy	1.4
Add to R&R Radiator Support Assy	
To R&I/R&R Base Model Mechanical Components	m #.9
#Includes R&I/R&R A/C Condenser, Air Bag Sensors, Ambient Temp Sensor	
To Air Lamps	.4
Evacuate & Recharge System	m 1.4
Recover Refrigerant	m .3

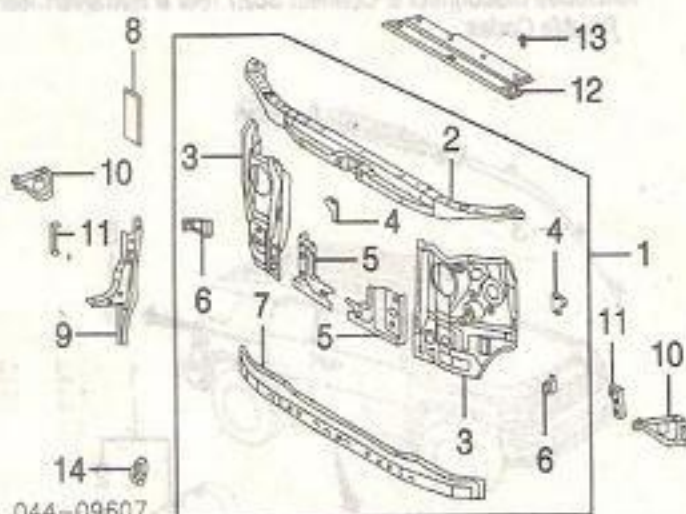


1 Support Assy, Radiator	53201-35230	#8.8	397.27
#Includes R&I Air Cleaner Assy, R&I/R&R Headlamps, Radiator, Shroud, Fan Blade, Overflow Tank Assy, Washer Tank, Hood Latch Bracket, Disconnect & Connect Hood Release Cable, Wiring &/or Harness as Necessary			
2 Bar, Upper Tie	53205-35030	2.0	91.39
3 Panel, Side Support	R 53211-35170	#3.0	79.16
	L 53212-35110	#3.0	79.16


#w/Upper Tie Bar Removed Deduct .3, w/Lower Tie Bar Removed Deduct .5

4 Brkt, Inner H/Lamp	R 53233-35010	.5	5.97
	L 53234-35010	.5	5.97
5 Reinf, Rad Support	R 53268-35040	1.6	34.24
	L 53269-35040	1.6	34.24
6 Brkt, Support	R 53257-35060	.5	6.97
	L 53258-35010	.5	6.97
7 Bar, Lower Tie	57104-35060	3.8	98.34
#Included w/Radiator Support Assy			
8 Seal, Support	R 53291-35010		8.00
9 Brace, Hood Latch	53209-35030	.3	40.24
10 Brkt, Grille Mounting	R 53273-35090	20.43	
	L 53274-35070	20.43	
11 Brkt, Outer H/Lamp	R 53245-35030	6.77	
	L 53246-35020	6.77	
12 Seal, Upper	53292-35020	58.39	
13 Clip, Seal (7)	90467-08217	1.01	
14 Sensor, Ambient	88790-22131	m #.3	16.10

#w/Grille Removed

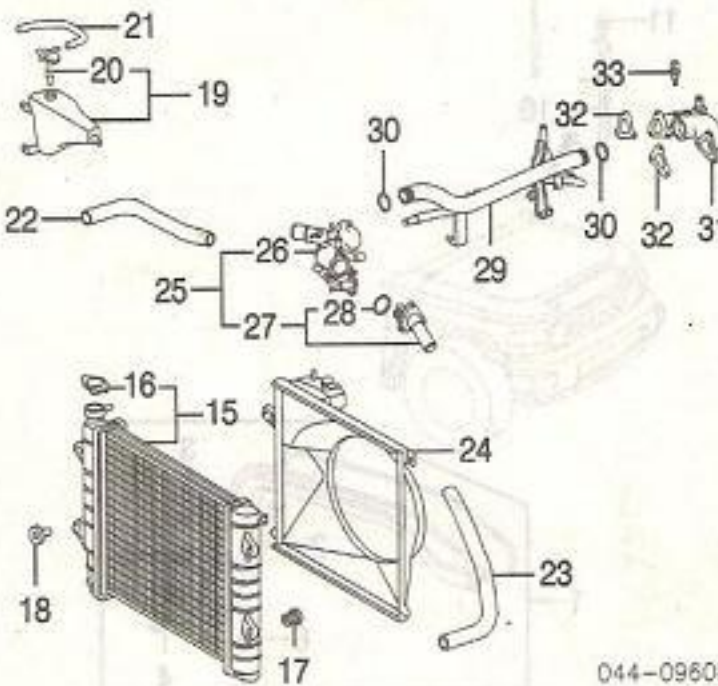

15 Radiator Assy			
Man Trans	16400-75451	1.4	592.58
Auto Trans	16400-31461	1.4	564.72
16 Cap, Radiator (a)	16401-75440	12.97	
(a) Included w/Radiator Assy			
17 Bushing, Rad Mtg (2/Side)	R/L 16547-50010	8.77	
18 Collar, Bushing			
Upper	R 16533-50090	6.77	
	L 16534-50050	6.77	
Lower	R/L 16534-50050	6.77	
19 Tank Assy, Overflow	16470-50140	.4	63.71
20 Cap, Tank (b)	16405-50051	10.80	
(b) Included w/Overflow Tank Assy			
21 Hose, Overflow	16567-31010	.3	5.30
22 Hose, Upper Rad	16571-31130	#.9	14.77
23 Hose, Lower Rad	16572-31170	#1.0	16.34
#R&R Both 1.6			
24 Shroud, Radiator	16711-31200	#.8	116.38
#Includes R&R Fan			
25 Housing Assy, Inlet	16320-31011	1.2	126.44
26 Housing, Inlet (c)	16323-0P010	1.5	82.17
27 Thermostat & Housing Assy (c)	16031-0P010	1.0	40.93
28 Gskt, Thermostat (c) (d)	16326-31020	.69	
(c) Included w/Inlet Housing Assy			
(d) Included w/Thermostat & Housing Assy			
29 Pipe, Water Outlet	16306-31010	m	51.33
30 Seal, Pipe (2)	96761-35031	m	3.06
31 Housing, By-Pass	16356-AD010	1.6	61.36
32 Gskt, Housing	R/L 16341-31010	5.49	
33 Sensor, Water Temp	89422-33030	m .4	56.33

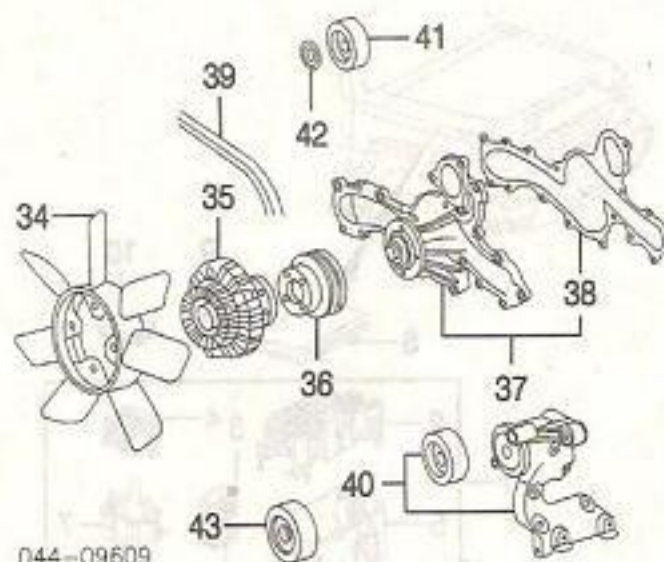

34 Blade, Fan	16361-31060	#.8	100.47
#Includes R&R Fan Shroud			
35 Clutch, Fan	16210-0P010	#1.3	166.94
36 Pulley, Water Pump	16371-0P010	#1.3	53.67
#R&R Complete, Includes R&R Fan & Shroud			
37 Pump Assy, Water-See Engine/Trans Section			
38 Gasket, Water Pump-See Engine/Trans Section			
39 Belt, Drive	90916-02571	.5	87.33
40 Tensioner, Belt	16620-31012	#.7	105.32
41 Pulley, Upper Idler (2)	16604-0P010	#.6	51.33
#Includes R&R Drive Belt			

42 Plate, Pulley (2)	16659-31011	2.03
43 Pulley, Lower Idler	16603-0P020	58.39

A/C REFRIGERANT CAPACITIES


A/C R-134a Refrigerant Capacity
20.1-22.2 Ozs (1.26-1.39 Lbs), 570-630 g

A/C /HEATER/VENTILATION


Use Procedure Explanation 6 with the following text.

R&I Condenser Assy	m 1.5
Evacuate & Recharge System	m 1.4
Recover Refrigerant	m .3

NOTE: R&R Does Not include recover, evacuate and recharge system.

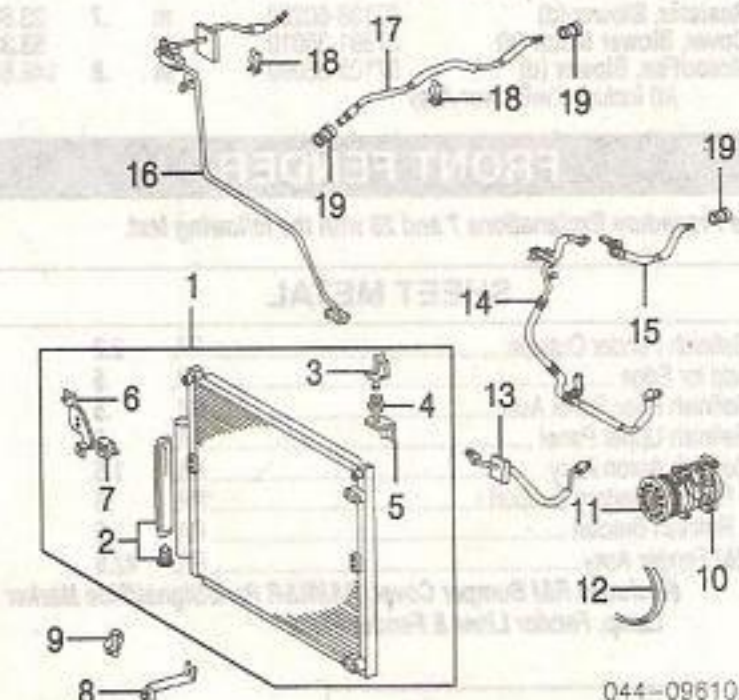

1 Condenser Assy	88460-35380	m 1.5	618.94
2 Receiver/Drier	88474-17010	m #.3	257.75
#w/Condenser Assy Removed			
3 Bracket, Upper Mtg	R/L 88688-35620		3.92
4 Cushion, Upper Mtg	R/L 88467-28050		3.29
5 Bracket, Lower Mtg	R/L 88688-35290		3.66
6 Bracket, Side	R 88688-35640		8.47
	L 88688-35650		7.60
7 Cushion, Side Brkt	R/L 88467-35080		7.18
#Included w/Condenser Assy			
8 Brace, Bracket	L 88688-35570		7.68
9 Sensor, Ambient-See Cooling Section			
10 Compressor	88320-35700-84	m 1.7	R715.41
11 Clutch/Pulley, Compressor	88410-35430	m #.5	322.86
#w/Compressor Removed			
Bolt, Compressor Mtg (4)	90119-08B42		1.32
12 Belt, Drive-See Cooling Section			
13 Hose, Discharge	88703-35050	m #.7	81.98
#w/Condenser Removed Deduct .4			
14 Hose, Suction	88704-60370	m #.9	153.80
15 Pipe, Suction	88707-60180	m #1.1	71.80
#R&R Both 1.3			
Tube, Condenser/Evaporator			
16 Front	88710-35660	m 1.0	245.13
17 Rear	88716-88740	m	85.27
18 Clip, Tube (2)	88718-1A430		.82
19 Clamp, Pipe (a) (b)	88718-02170		3.68
(a) As Required			
(b) Order by Application			

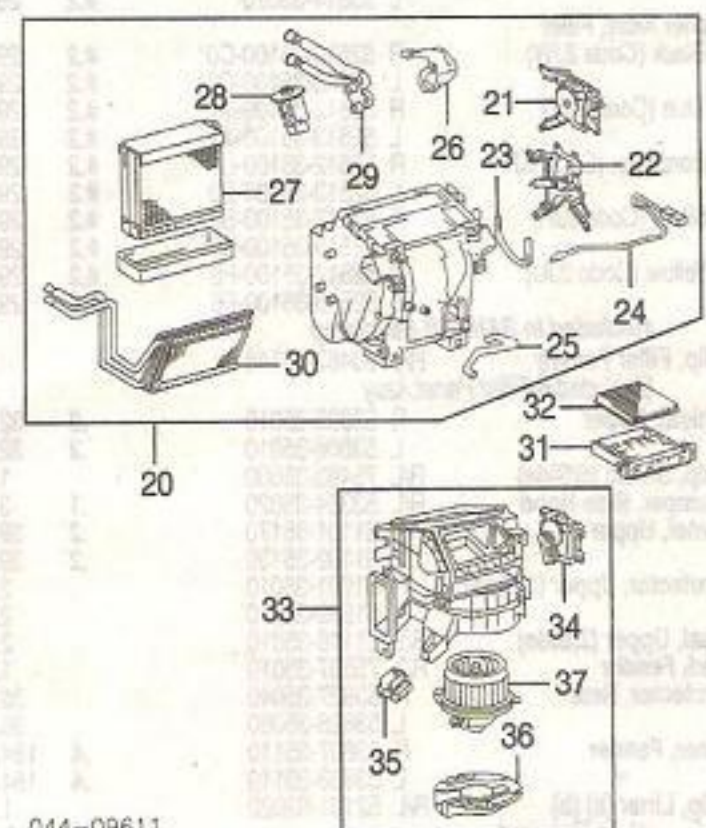

20 A/C/Heater Assy	87050-35060	m #2.7	1901.34
21 Actuator, Mode (c)	87106-35120	m #.5	144.90
22 Actuator, Air Mix (c)	87106-35190	m #.5	146.90
#w/Instrument Panel Removed			

TOYOTA FJ CRUISER 2007

A/C /HEATER/VENTILATION Cont'd

23 Seal, Case (c)	88578-35170	m	3.92
24 Thermistor (c)	88625-60190	m	17.52
25 Hose, Drain (c)	88539-35030	m	8.76
26 Cover, Side (c)	88899-60260	m	2.76
27 Evaporator (c)	88501-60300	m #3.0	260.14
28 Valve, Expansion (c)	88515-60190	m #3.0	57.62
29 Tube, Evaporator (c)	88710-35650	m #3.0	116.38
#R&R Complete, w/Instrument Panel Removed			
30 Core, Heater (c)	87107-35100	m #3.4	305.17
(c) Included w/ A/C/Heater Assy			
#w/Instrument Panel Removed			
31 Cover, Filter	88899-06020	m	18.34
32 Filter, Air	87139-47010-83	m	20.00
33 Blower Assy	87130-35180	m #1.5	486.25
34 Actuator, Door (d)	87106-60170	m #4	132.15
#w/Glove Box & Center Console Removed			
35 Resistor, Blower (d)	87139-60280	m	23.86
36 Cover, Blower Motor (d)	87391-35010	m	53.33
37 Motor/Fan, Blower (d)	87103-35090	m	146.89
(d) Included w/Blower Assy			


FRONT FENDER

Use Procedure Explanations 7 and 28 with the following text.

SHEET METAL

Refinish Fender Outside	R/L	2.2
Add for Edge	R/L	.5
Refinish Filler Panel Assy	R/L	.5
Refinish Upper Panel	R/L	.5
Refinish Apron Assy	R/L	1.5
Refinish Battery Support	R/L	.5
Refinish Bracket	R/L	.5
R&I Fender Assy	R/L	#2.9

#Includes R&I Bumper Cover, R&I/R&R Park/Signal/Side Marker Lamp, Fender Liner & Fender Flare

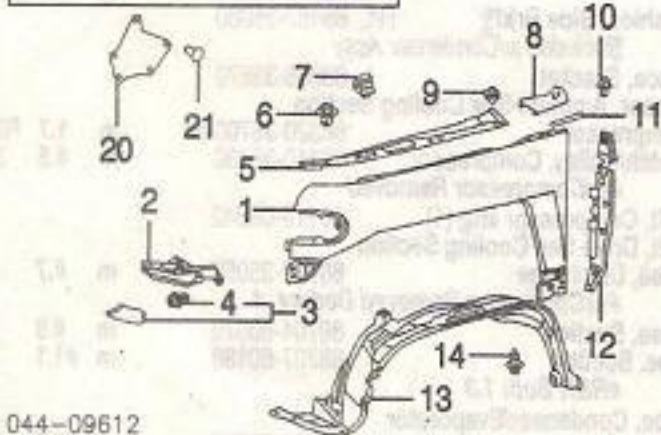


044-09612

1 Fender, Front	R 53801-35600	#3.1	226.50
	L 53802-35690	#3.1	226.50
#Includes R&I Bumper Cover, R&I/R&R Park/Signal/Side Marker Lamp, Fender Liner & Fender Flare			
2 Extension, Fender	R 53813-35090	#2	26.38
	L 53814-35070	#2	26.38
3 Panel Assy, Filler			
Black (Code 2JW)	R 52512-35100-C0	#2	29.32
	L 52513-35100-C0	#2	29.32
Blue (Code 2JV)	R 52512-35100-J0	#2	29.32
	L 52513-35100-J0	#2	29.32
Bordeaux (Code 2JT)	R 52512-35100-D0	#2	29.32
	L 52513-35100-D0	#2	29.32
Silver (Code 2JR)	R 52512-35100-B0	#2	29.32
	L 52513-35100-B0	#2	29.32
Yellow (Code 2JU)	R 52512-35100-F0	#2	29.32
	L 52513-35100-F0	#2	29.32
#Included in R&I/R&R Headlamp			
4 Clip, Filler Panel	R/L 90467-10148		.95
(Included w/Filler Panel Assy)			
5 Shield, Upper	R 53805-35010	.2	32.12
	L 53806-35010	.2	32.43
6 Clip, Shield (5/Side)	R/L 75493-35030		1.40
7 Bumper, Side Hood	R/L 53384-35020	.1	3.89
8 Panel, Upper	R 61101-35170	.2	39.58
	L 61102-35130	.2	39.58
9 Protector, Upper (2/Side)	R 61991-35010		2.74
	L 61992-35010		2.74
10 Seal, Upper (2/Side)	R/L 61118-35010		2.74
11 Pad, Fender	R/L 75537-35010		1.23
12 Protector, Rear	R 53827-35040		36.55
	L 53828-35060		36.55
13 Liner, Fender	R 53807-35110	.4	184.11
	L 53808-35110	.4	184.11
14 Clip, Liner (a) (b)	R/L 52161-02020		1.83
(a) As Required			
(b) Order by Application			
15 Apron Assy	R 53701-35A10	#4.5	302.14
	L 53702-35A00	#4.5	302.14
#w/Cowl Panel Reinforcement Removed			
16 Support, Battery (c)	R 53771-35080	1.5	35.55

17 Brkt, Body Mtg (c)	L 53704-35081	1.5	54.67
	R 57021-35080	1.5	82.51
	L 57022-35050	1.5	82.51
18 Bracket, Apron (c)	R/L 53728-35080	.5	5.29
19 Plate, Apron (c)	R 55133-35021	.5	16.20
	L 55134-35020	.5	16.03
(c) Included w/Apron Assy			
20 Shield, Side Splash			
Front	R 53735-35150	.2	17.95
	L 53736-35150	.2	21.86
Rear	R/L 53886-35020	.2	19.48
21 Clip, Attaching (a)	R/L 90467-10186		1.49
(a) As Required			

EXTERIOR TRIM


R&I Fender Flare Assy	R/L	.4
R&I Mudguard	R/L	.2

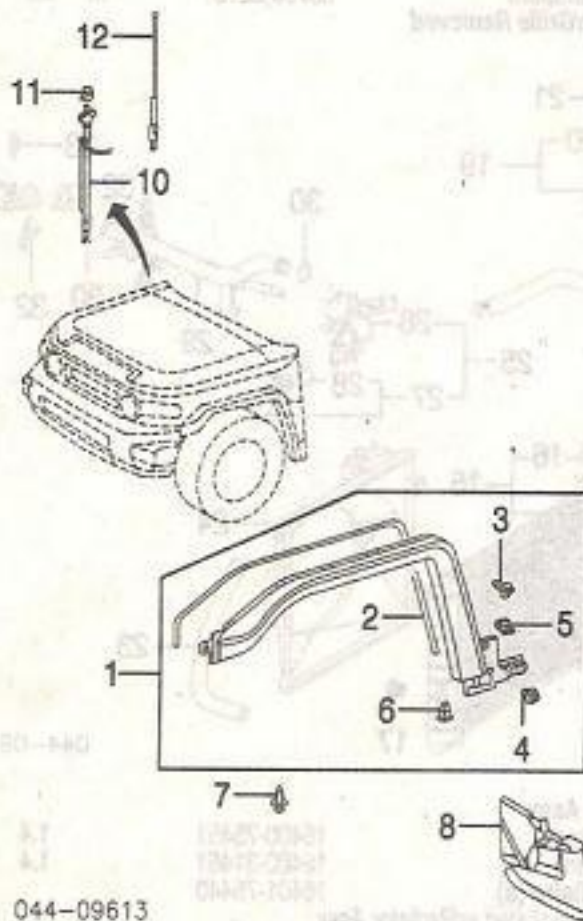

044-09613

1 Flare Assy, Fender	R 53087-35140	.4	210.95
	L 53088-35140	.4	210.95
2 Pad, Flare (a)	R/L 75691-35040		6.23
Clip, Flare (a)			
Type 1			
Orange	R/L 75395-35070		2.49
Blue (2/Side)	R/L 75396-35020		.74
Type 2 (2/Side)	R/L 76879-04010		2.03
(a) Non-Reusable Part			
6 Grommet, Flare (2/Side)	R/L 90189-06028		.71
#Included w/Fender Flare Assy			
7 Clip, Mounting (b)	R/L 52161-02020		1.83
(b) As Required			
8 Mudguard, Front	R 76603-35040	.2	47.90
	L 76604-35040	.2	47.90
9 Clip, Mudguard (b)	R/L 52161-20010		1.86
(b) As Required			
10 Antenna	L 86300-35180	.7	57.39
11 Cap, Antenna	L 86392-35031		11.49
12 Mast, Antenna	L 86309-42060	#.2	39.55
#Included in R&R Antenna			

ELECTRICAL COMPONENTS

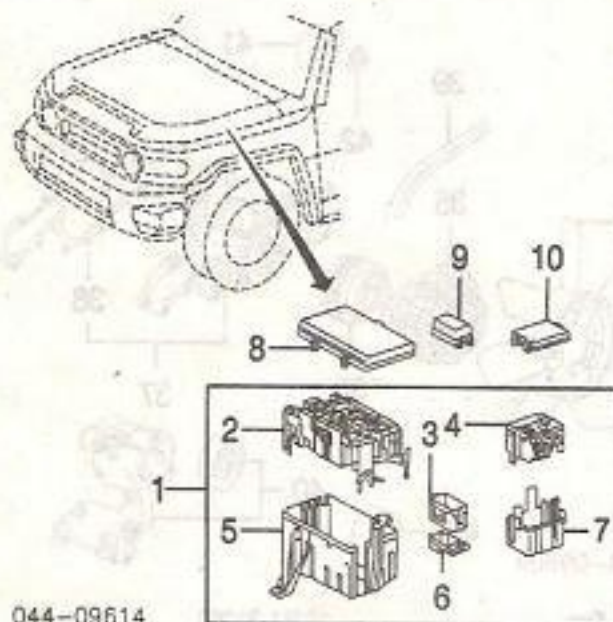

044-09614

1 Harness Assy, Engine Compartment			
Man Trans	82111-35B60	m	1400.57
Auto Trans	82111-35C00	m	1264.56
2 Block, Fuse/Relay (a)	82741-35110	m	140.18
#Order by Application			
Box, Relay (a)			
3 Front	82742-35050		16.38
4 Rear	82743-35010		31.89
5 Box, Fuse/Relay (a)	82663-35090		95.60

6 Cover, Lower Relay Box (a)			
Front	82663-35100		8.80
Rear	82663-35120		11.69
(a) Included w/Engine Compartment Harness Assy			
8 Cover, Fuse/Relay Box	82662-3D180		37.58
9 Cover, Relay Box			
Front	82662-35A40		9.37
Rear	82662-35A30		9.97

UNDERHOOD DIMENSIONS

Information not available at time of publication.

AIR BAG SYSTEM

Use Procedure Explanation 30 with the following text.


NOTE 1: R&R Does Not include disable and enable or diagnose Air Bag System.

NOTE 2: Refer to Procedural Explanation 30 for Supplemental Restraint/Air Bag System Component Inspection and Replacement Information.

NOTE 3: For Air Bag System Service procedures, refer to Manufacturer's Service Repair Manual or Mitchell's Air Bag Service and Repair Manual.

FRONT

Disable & Enable Air Bag System	m	.3
Diagnose Air Bag System (If Required)	m	#.5
#Includes Disconnect & Connect Scan Tool & Retrieve/Clear Trouble Codes		
Add to Initialize Occupant Detection ECU	m	.3

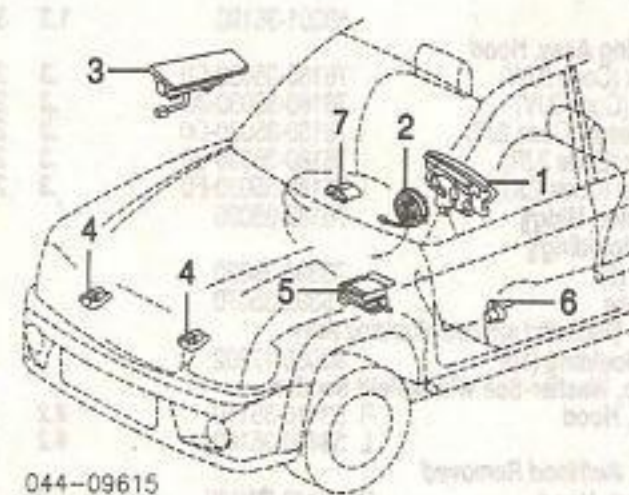

044-09615

1 Module, Driver Air Bag			
w/Remote Audio Control	45130-35451-B0	m	.3
w/o Remote Audio Control	45130-35441-B0	m	.3
2 Cable, Spiral	84306-07040	m	.8
#Included w/Combination Switch Assy-listed in Steering Wheel/Column Section			
3 Module, Pass Air Bag	73960-35070	m	#.7
#w/Instrument Panel Removed			
4 Sensor, Front Impact	R/L 89173-39375	m	#.4
#w/Grille & Bumper Removed, R&R Both .6			
5 Control Unit, Air Bag			
w/Side Curtain Air Bags	89170-35270	m	#.5
w/o Side Curtain Air Bags	89170-35260	m	#.5
#w/Center Console Removed			
6 Sensor, Seat Position (a)			
Driver Side	89178-0W010	m	#.3
Passenger Side	89952-35011	m	#.4
(a) Included w/Front Seat Assy-listed in Front Seat Section			
#w/Seat Assy Removed			
Pretensioner, Seat Belt (b)-See Seat Belts Section			
(b) Serviced w/Seat Belt			

SIDE

Disable & Enable Air Bag System	m	.3
Diagnose Air Bag System (If Required)	m	#.5
#Includes Disconnect & Connect Scan Tool & Retrieve/Clear Trouble Codes		





044-09616

1 Seat Assy, Front w/ Side Air Bags Passenger Side	71010-3D820-B3	m	.3	2632.60
Driver Side	71020-3D030-B3	m	.3	2509.61
w/o Side Air Bags-See Front Seat Section				
2 Module, Side Air Bag-Serviced w/Front Seat Assy		m	#.9	1197.14
3 Module, Side Curtain Air Bag	R 62170-35030 L 62180-35030	m	#.9	1197.14
#w/Headliner Removed				
Sensor, Side Impact				
4 Front	R/L 89831-35010	m	#.3	108.46
5 Rear	R/L 89831-35020	m	#.3	157.45
#w/Necessary Interior Trim Removed				

ABS/BRAKES

Bleed Brake System.....m .5


NOTE: R&R Does Not include bleed brake system.

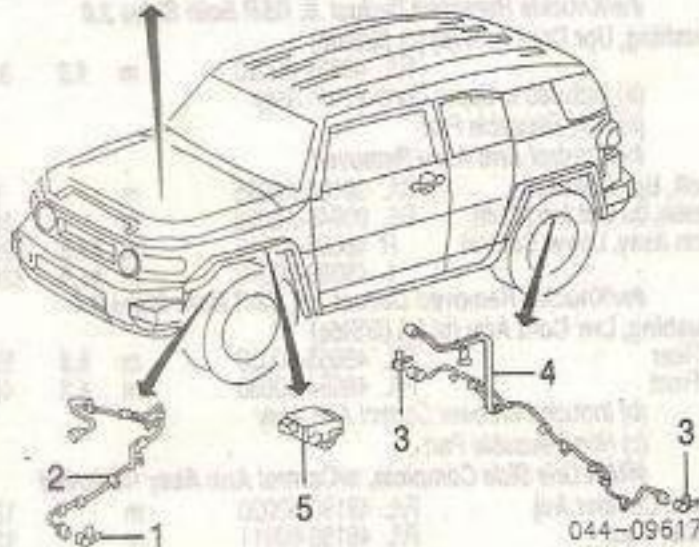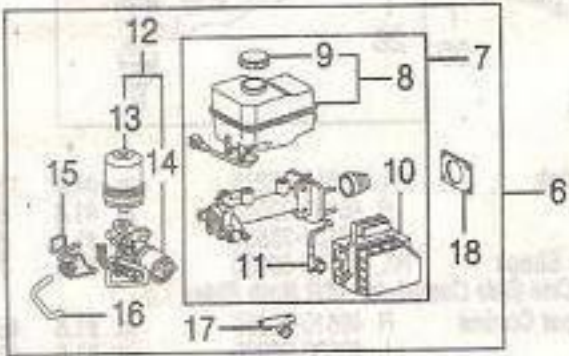


1 Sensor, Front ABS	R 89542-04020 L 89543-04020	m	#.7	191.05
#R&R Both Sides .9				
2 Harness, Front Sensor	R 89516-60070 L 89516-60080	m		47.61
3 Sensor, Rear ABS	R 89542-04020 L 89543-04020	m	#.5	191.05
#R&R Both Sides .7				
4 Harness, Rear Sensor	89516-60090	m		98.34
5 Sensor, Yaw Rate				
Man Trans	89180-60090	m	#.3	358.82
Auto Trans	89180-60080	m	#.3	392.60
#w/Center Console Removed				
6 Booster/Cylinder Assy, Brake				
w/Locking Diff'l				
Man Trans	47050-35070	m	1.9	1900.49
Auto Trans	47050-35080	m	1.9	1900.49
w/o Locking Diff'l				
Man Trans	47050-35050	m	1.9	1900.49
Auto Trans	47050-35040	m	1.9	1900.49
7 Cylinder Assy, Brake Master				
w/Locking Diff'l				
Man Trans	47025-35110	m	2.3	1051.71
Auto Trans	47025-35090	m	2.3	1051.71
w/o Locking Diff'l				
Man Trans	47025-35100	m	2.3	1051.71
Auto Trans	47025-35080	m	2.3	1051.71
8 Reservoir Assy, Master Cylinder (a)				
47220-60180	m	.6		146.58
9 Cap, Reservoir (a) (b)	47230-24010			10.77
(b) Included w/Master Cylinder Reservoir Assy				
10 Solenoid Kit, Master Cyl (a)				
w/Locking Diff'l				
Man Trans	47217-35050	m	2.7	1056.30
Auto Trans	47217-35030	m	2.7	1056.30
w/o Locking Diff'l				
Man Trans	47217-35040	m	2.7	1056.30
Auto Trans	47217-35020	m	2.7	1056.30
11 Bracket, Brake Module (a)	44591-35070			5.89
(a) Included w/Brake Master Cylinder Assy				
12 Pump Assy, Brake Booster	47070-60030	m	2.6	1441.96
13 Accumulator, Booster Pump (c)	47950-60020	m	.7	298.49
14 Pump, Brake Booster (c)	47960-60090	m	2.6	1140.13
(c) Included w/Brake Booster Pump Assy				
15 Tube, Brake Fluid	44551-60040	m		9.69
16 Hose, Brake	44571-60020	m		10.32
17 Bracket, Booster	47967-60090	m		9.09
18 Gasket, Brake Booster	44785-60020	m		1.86
(Included w/Brake Booster/Cylinder Assy)				

FRAME

Use Procedure Explanation 9 with the following text.

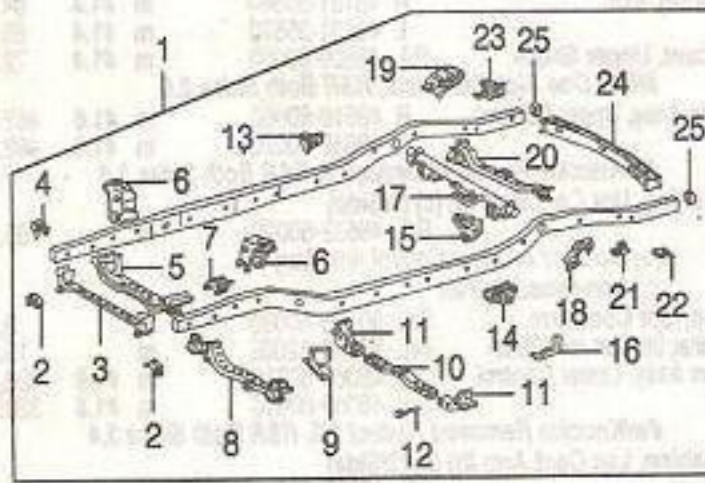

1 Frame Assy				
2WD	51001-35A10	32.4	4728.21	
4WD	51001-35A00	33.4	4728.21	
2 Plate, Rail	R 51135-35060		24.12	
L 51136-35070			25.78	
3 Crossmember, Auxiliary	51021-35071		292.46	
4 Bracket, No. 1 Body Mtg	R/L 51711-35190		17.75	
5 Crossmember, No. 1	51201-35340		665.37	
6 Support, Suspension	R 51501-35140		419.18	
L 51502-35140			419.18	
7 Brkt, Eng Mtg	R 51401-35390		55.36	
L 51402-35340			56.33	
8 Crossmember, No. 2	51202-35470		745.05	
9 Bracket, No. 2 Body Mtg	R 51703-35180		88.20	
L 51704-35160			88.20	
10 Crossmember, No. 3				
2WD	51203-35380	m	#1.0	320.73
4WD	51203-35370	m	#1.0	195.66
#Includes Support Trans				
11 Brkt, No. 3 Crossmember	R 51025-35030		159.96	
L 51026-35030			159.96	
12 Bolt, Crossmember (2/Side)	R/L 90105-A0009		1.69	
13 Bracket, No. 3 Body Mtg	R 51707-35090		41.93	
L 51708-35090			41.93	
14 Brkt, Lower Link	R 51503-35031		33.55	
L 51504-35021			33.55	
Brkt, Fuel Tank				
No. 1	L 77512-35120		25.35	
No. 2	L 57683-35030		16.12	
15 Crossmember, No. 4	51205-35280	3.0	541.86	
16 Brkt, No. 4 Crossmember	R 51027-35020		73.14	
L 51028-35020			73.14	
17 Brkt, Rear Spring	R 51531-35031		68.76	
L 51541-35031			72.79	
20 Crossmember, No. 5	51206-35070	3.0	446.25	
21 Brkt, Spring Bumper	R 51593-35030		18.92	
L 51594-35030			18.92	
22 Hook, Transport	L 51963-35110		35.87	
23 Bracket, No. 4 Body Mtg	R 51709-35040		89.88	
L 51706-35060			67.73	
24 Crossmember, Rear	51209-35221	3.0	390.85	
25 Gusset, Rear Crossmember	R 51391-35090		17.75	
L 51392-35080			17.75	
(Included w/Frame Assy)				
26 Brkt, Susp Crossmember	R 51225-35040		84.20	
L 51226-35060			84.20	
27 Cover, Front Eng				
2WD	51405-35140		217.63	
4WD	51405-35101		262.59	
28 Cover Assy, Rear Engine	51450-35010	.4	130.47	
29 Seal, Lower (a)	51457-35030		17.09	
(a) Included w/Rear Engine Cover Assy				

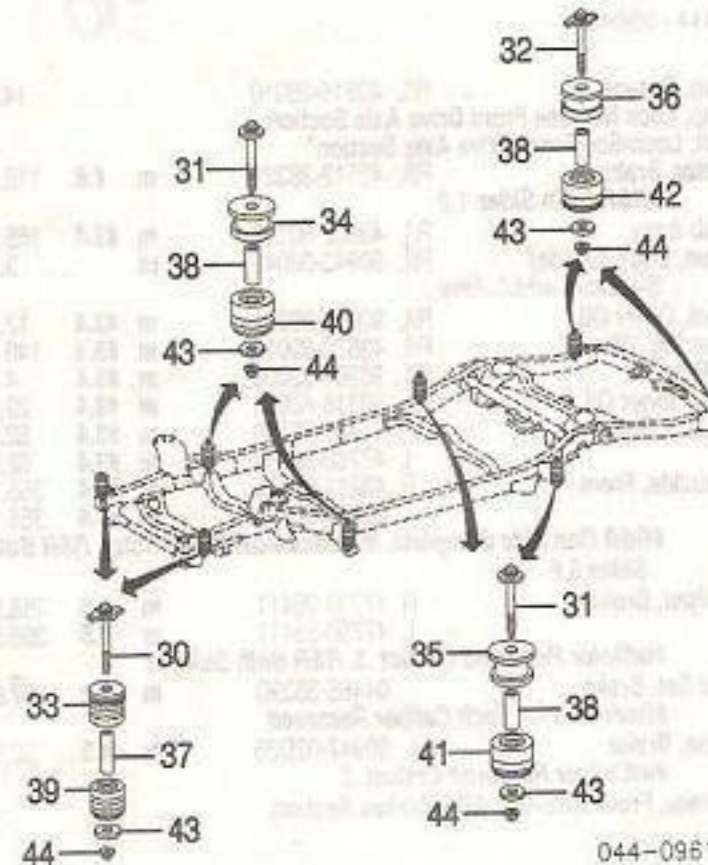


Bolt, Body Mounting				
30 No. 1	R/L 52217-35180		10.60	
31 No. 2, No. 3 (2/Side)	R/L 52217-35191		10.60	
32 No. 4	R/L 52217-35180		10.60	
Cushion, Upper Body Mount				
33 No. 1	R/L 52201-35100		36.90	
34 No. 2	R/L 52203-35210		46.96	
35 No. 3	R/L 52205-35160		46.96	
36 No. 4	R/L 52207-35050		41.93	
Collar, Cushion				
37 No. 1	R/L 90440-18011		18.03	
38 No. 2, No. 3, No. 4 (3/Side)	R/L 90440-31002		30.52	
Cushion, Lower Body Mount				
39 No. 1	R/L 52202-35090		23.46	
40 No. 2	R/L 52204-35120		41.93	
41 No. 3	R/L 52206-35040		36.90	
42 No. 4	R/L 52208-35050		36.90	
43 Washer, Mounting (4/Side)	R/L 90201-12078		4.14	
44 Nut, Mounting (4/Side)	R/L 94184-01201		1.09	

WHEEL

Use Procedure Explanation 10 with the following text.

STEEL WHEEL


Refinish Wheel	.5
Add to R&I Spare Wheel & Tire Assy	.2

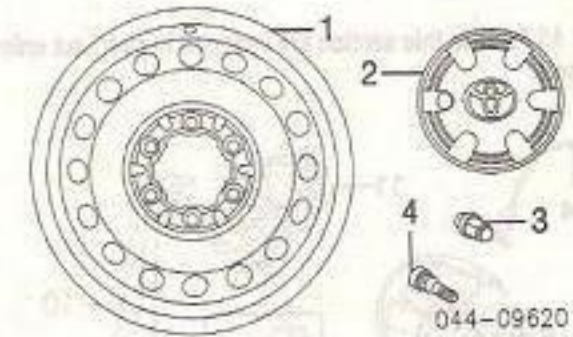

1 Wheel, Steel (17x7-1/2")	42611-35330	.3	143.03
2 Cap, Center	42603-35610		40.58
3 Nut, Lug	90942-01104		3.14
4 Stem, Valve	90942-05009		8.37


ALLOY WHEEL

Add to R&I Spare Wheel & Tire Assy	.2
------------------------------------	----

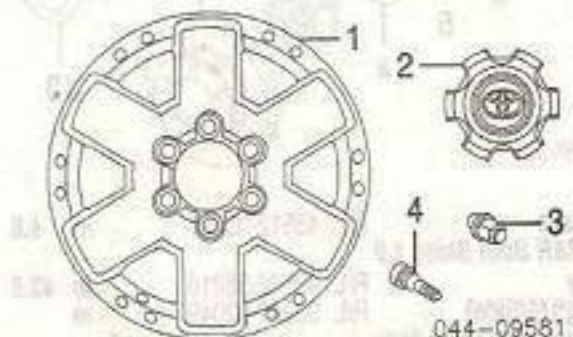

1 Wheel, Alloy (17x7-1/2")	42611-35340	.3	341.23
2 Cap, Center	42603-35840		58.02
3 Nut, Lug	90942-01058		6.37
4 Stem, Valve	90942-05009		8.37

SPARE WHEEL & HARDWARE

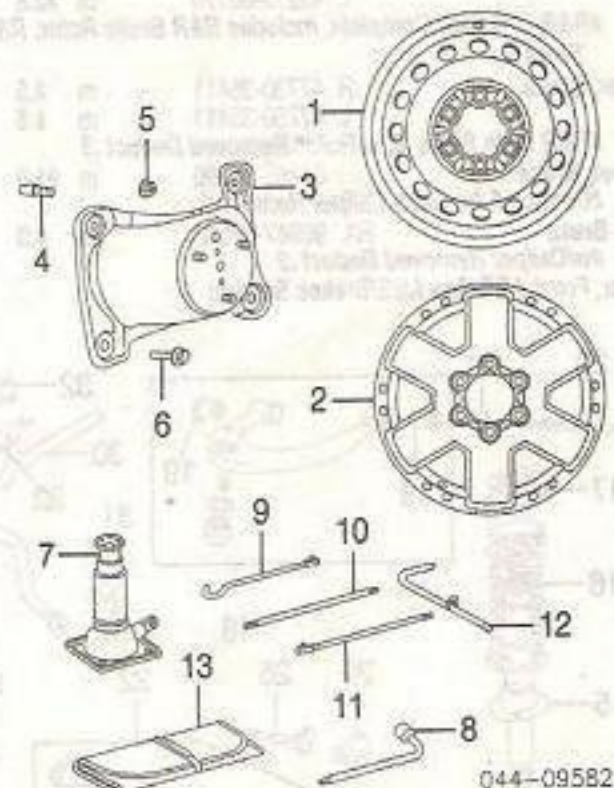

Wheel, Spare				
1 Steel	42611-35330		143.03	
2 Alloy	42611-35340		341.23	
3 Carrier, Spare Wheel	51908-35030	#.3	151.59	
#w/Trim Panel Removed, Included in R&R Back Door				
4 Stud, Mtg (2)	90116-10199		1.20	
5 Nut, Mtg (2)	90179-10074		.94	
6 Bolt, Mtg (2)	90119-10252		1.63	

TOYOTA FJ CRUISER 2007

WHEEL Cont'd

SPARE WHEEL & HARDWARE Cont'd

7 Jack	09111-35181	140.78
8 Wrench, Lug	09150-35070	14.60
9 Rod, Jack Handle Extension, Rod	09115-35110	12.43
10 No. 1	09114-35040	12.00
11 No. 2	09114-35050	12.00
12 Handle, Jack	09116-35080	14.78
13 Bag, Tool	09120-35180	11.43

FRONT SUSPENSION


Use Procedure Explanation 11 with the following text.

2WD

R&I Suspension (One Side)	R/Lm	3.2
O/H Suspension (Includes R&I)		
One Side	R/Lm	4.7
Both Sides	m	8.0
Adjust Front Alignment	m	1.5
Bleed System	m	.5


NOTE 1: R&I/R&R or O/H Does Not include alignment or bleed brake system.

NOTE 2: All Parts in this section are included in overhaul unless noted otherwise.

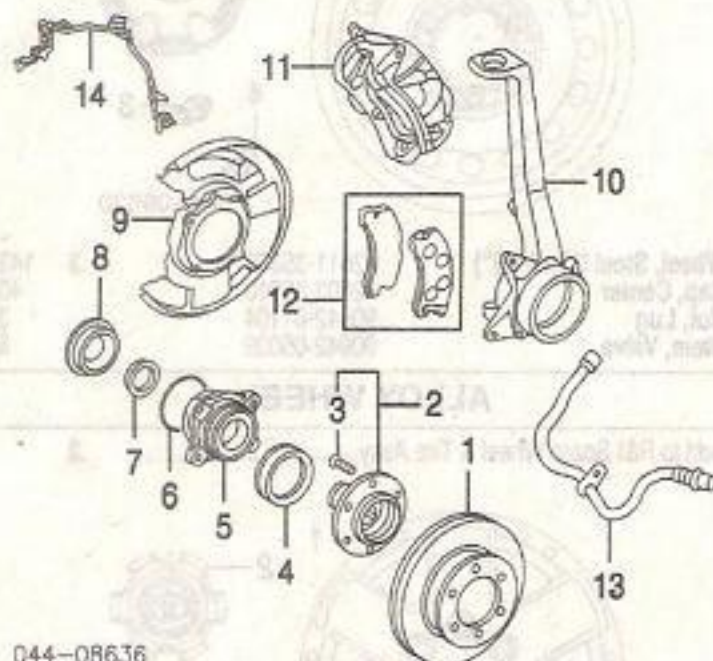

044-08636

1 Rotor, Brake	R/L 43512-35321	m #.6	118.75
#R&R Both Sides 1.0			
2 Hub Assy	R/L 43502-35210	m #.2.8	155.59
3 Stud, Lug (6/Side)	R/L 90942-02049	m	3.20
#Included w/Hub Assy			
4 Seal, Oil	R/L 90312-96001	m #.2.8	12.95
5 Bearing, Wheel	R/L 43570-60010	m #.2.8	149.59
6 O-Ring	R/L 90301-92003	m #.2.8	4.09
7 Nut, Adjusting	R/L 43521-35010	m #.2.8	14.29
8 Cap, Grease Retainer	R/L 43442-35080	m #.2.8	15.06
9 Shield, Splash	R 47781-35160	m #.2.8	52.59
10 Knuckle, Front	R 43211-60170	m #.2.8	355.13
#R&R One Side Complete, Includes R&R Brake Rotor, R&R Both Sides 5.4			
11 Caliper, Brake	R 47730-35411	m #.5	358.93
#R&R Both Sides .8, w/Rotor Removed Deduct .3			
12 Pad Set, Brake	04465-35290	m #1.0	67.68
#Deduct .5 for Each Caliper Removed			
13 Hose, Brake	R/L 90947-02D35	m #.3	30.84
#w/Caliper Removed Deduct .2			
14 Sensor, Front ABS-See ABS/Brakes Section			

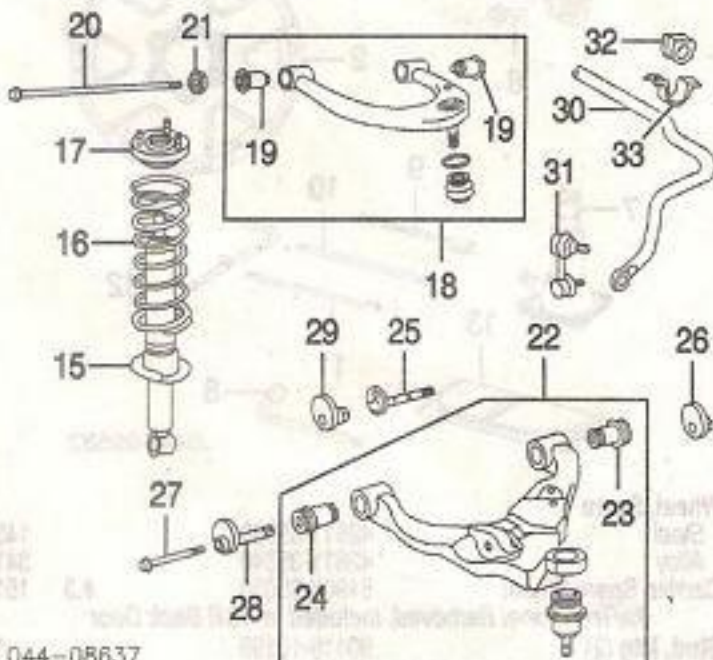

044-08637


15 Absorber, Shock	R/L 48510-80314	m #1.4	130.93
16 Spring, Coil	R 48131-35560	m #1.4	64.77
#R&R One Side Complete, R&R Both Sides 2.6			
17 Mount, Upper Shock	R/L 48609-60030	m #1.4	72.11
#w/Knuckle Removed Deduct .8, R&R Both Sides 3.0			
18 Arm Assy, Upper Control	R 48610-60050	m #1.6	462.76
#w/Knuckle Removed Deduct .8, R&R Both Sides 3.0			
19 Bushing, Upr Cont Arm (a) (c) (2/Side)	R/L 48632-60020	m	35.55
(a) Included w/Upper Control Arm Assy			
(c) Non-Reusable Part			
20 Bolt, Upr Cont Arm	R/L 90105-A0095	m	9.97
21 Washer, Upr Cont Arm (2/Side)	R/L 90948-A2002	m	15.06
22 Arm Assy, Lower Control	R 48068-60010	m #1.8	328.92
#w/Knuckle Removed Deduct 1.0, R&R Both Sides 3.4			
23 Bushing, Lwr Cont Arm (b) (c) (2/Side)	R/L 48655-60030	m #.3	59.05
24 Front	R/L 48654-60030	m #.3	49.30
(b) Included w/Lower Control Arm Assy			
(c) Non-Reusable Part			
#R&R One Side Complete, w/Lower Control Arm Assy Removed			
25 Cam, Camber Adj	R/L 48190-60020	m	12.60
26 Plate, Cam	R/L 48198-60011	m	12.09
27 Bolt, Lwr Cont Arm	R/L 90119-14120	m	5.74
28 Cam, Toe Adj	R/L 48409-60020	m	15.98
29 Plate, Toe Adj	R/L 48452-35020	m	17.03
30 Bar, Stabilizer	48811-60240	m #1.0	139.64
#Includes R&R Stabilizer Bar Links, Bushings & Brackets, Not Included in O/H			
31 Link, Stabilizer Bar	R 48820-60050	m #.4	80.85
#R&R Both Sides .6, Not Included in O/H			
32 Bushing, Stabilizer Bar	R/L 48815-60190	m #.5	12.23
33 Bracket, Stabilizer Bar	R 48824-60140	m #.5	19.12
#R&R One Side Complete, Not Included in O/H			

4WD

R&I Suspension (One Side)	R/Lm	3.7
O/H Suspension (Includes R&I)		
One Side	R/Lm	5.7
Both Sides	m	10.0
Adjust Front Alignment	m	1.5
Bleed System	m	.5


NOTE 1: R&I/R&R or O/H Does Not include alignment or bleed brake system.

NOTE 2: All Parts in this section are included in overhaul unless noted otherwise.

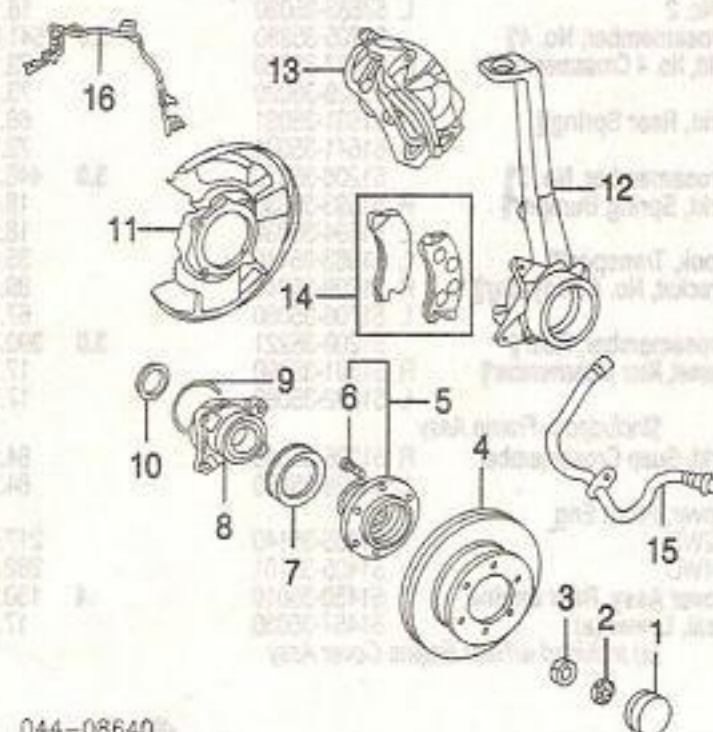

044-08640

1 Cap, Grease	R/L 43514-28010		14.43
2 Cap, Lock Nut-See Front Drive Axle Section			
3 Nut, Lock-See Front Drive Axle Section			
4 Rotor, Brake	R/L 43512-35321	m #.6	118.75
#R&R Both Sides 1.0			
5 Hub Assy	R/L 43502-60180	m #3.4	155.59
6 Stud, Lug (6/Side)	R/L 90942-02049	m	3.20
#Included w/Hub Assy			
7 Seal, Outer Oil	R/L 90312-96001	m #3.4	12.95
8 Bearing, Wheel	R/L 43570-60010	m #3.4	149.59
9 O-Ring	R/L 90301-92003	m #3.4	4.09
10 Seal, Inner Oil	R/L 90316-A0001	m #3.4	29.04
11 Shield, Splash	R 47781-35160	m #3.4	52.59
12 Knuckle, Front	R 43211-60170	m #3.4	355.13
#R&R One Side Complete, Includes R&R Brake Rotor, R&R Both Sides 6.6			
13 Caliper, Brake	R 47730-35411	m #.5	358.93
#w/Rotor Removed Deduct .3, R&R Both Sides .8			
14 Pad Set, Brake	04465-35290	m #1.0	67.68
#Deduct .5 for Each Caliper Removed			
15 Hose, Brake	R/L 90947-02D35	m #.3	30.84
#w/Caliper Removed Deduct .2			
16 Sensor, Front ABS-See ABS/Brakes Section			

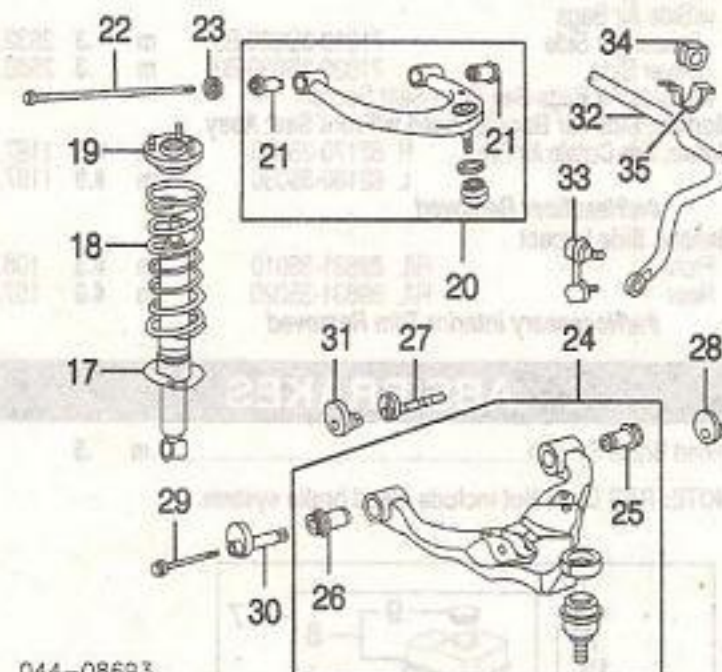

044-08693

17 Absorber, Shock	R/L 48510-80315	m #1.4	130.93
18 Spring, Coil	R 48131-35540	m #1.4	82.81
#R&R One Side Complete, R&R Both Sides 1.8			
19 Mount, Upper Shock	R/L 48609-60030	m #1.4	72.11
#w/Knuckle Removed Deduct .8, R&R Both Sides 3.0			
20 Arm Assy, Upper Control	R 48610-60050	m #1.6	462.76
#w/Knuckle Removed Deduct .8, R&R Both Sides 3.0			
21 Bushing, Upr Cont Arm (a) (c) (2/Side)	R/L 48632-60020	m #.2	35.55
(a) Included w/Upper Control Arm Assy			
(c) Non-Reusable Part			
#w/Control Arm Assy Removed			
22 Bolt, Upr Cont Arm	R/L 90105-A0095	m	9.97
23 Washer, Upr Cont Arm (2/Side)	R/L 90948-A2002	m	15.06
24 Arm Assy, Lower Control	R 48068-60010	m #1.8	328.92
#w/Knuckle Removed Deduct 1.0, R&R Both Sides 3.4			
25 Rear	R/L 48655-60030	m #.3	59.05
26 Front	R/L 48654-60030	m #.3	49.30
(b) Included w/Lower Control Arm Assy			
(c) Non-Reusable Part			
#R&R One Side Complete, w/Control Arm Assy Removed			
27 Cam, Camber Adj	R/L 48190-60020	m	12.60
28 Plate, Cam	R/L 48198-60011	m	12.09
29 Bolt, Lwr Cont Arm	R/L 90119-14120	m	5.74
30 Cam, Toe Adj	R/L 48409-60020	m	15.98
31 Plate, Toe Adj	R/L 48452-35020	m	17.03
32 Bar, Stabilizer	48811-60230	m #1.0	139.64
#Includes R&R Stabilizer Bar Links, Bushings & Brackets, Not Included in O/H			
33 Link, Stabilizer Bar	R 48820-60050	m #.4	80.85
#R&R Both Sides .6, Not Included in O/H			
34 Bushing, Stabilizer Bar	R/L 48815-60180	m #.5	12.23
35 Bracket, Stabilizer Bar	R 48824-60140	m #.5	19.12
#R&R One Side Complete, Not Included in O/H			


FRONT DRIVE AXLE

R&I Differential Assy	m	2.8
R&I Axle Shaft Assy	R/Lm	#.4
O/H Axle Shaft Assy (Includes R&I)	R/Lm	#1.2
#w/Necessary Suspension Components Removed		

NOTE: All Parts in this section are included in overhaul unless noted otherwise.

Illustration Located in Next Column

1 Cap, Lock Nut	R/L 43525-35010		2.74
2 Nut, Lock	R/L 90179-28007	m	2.74
3 Shaft Assy, Axle	R/L 43430-60060	m #.4	448.31
#w/Necessary Suspension Components Removed			
4 Joint Assy, Outer Axle	R/L 43460-69105	m #.5	483.58
5 Boot Kit, Outer/Inner (a)	R/L 04427-60080	m #.5	33.88
#w/Axle Assy Removed			
6 Boot Kit, Inner (a) (b)	R/L 04437-60040	m	21.19
(a) Included w/Outer Axle Joint Assy			
(b) Included w/Outer/Inner Boot Kit			
7 Joint, Inner Axle	R/L 43403-60020	m #.5	368.91
#w/Axle Assy Removed			
8 Cover, Dust	R/L 41336-35020	m	5.80
#Included w/Front Axle Assy			
9 Differential Assy			
Man Trans	41110-71160	m #3.2	1143.30
Auto Trans	41110-35A10	m #3.2	1511.99
10 Carrier, Differential (c)	41101-71010	m #6.5	356.91
11 Actuator, Vacuum (c)			
Auto Trans	41400-35031	m #.8	321.61
#Not Included in O/H			
12 Housing, Outer (c)			
Man Trans	R 41321-35050	m #.5	122.75
Auto Trans	R 41320-35050	m #.5	145.56
13 Shaft, Inner (c)			

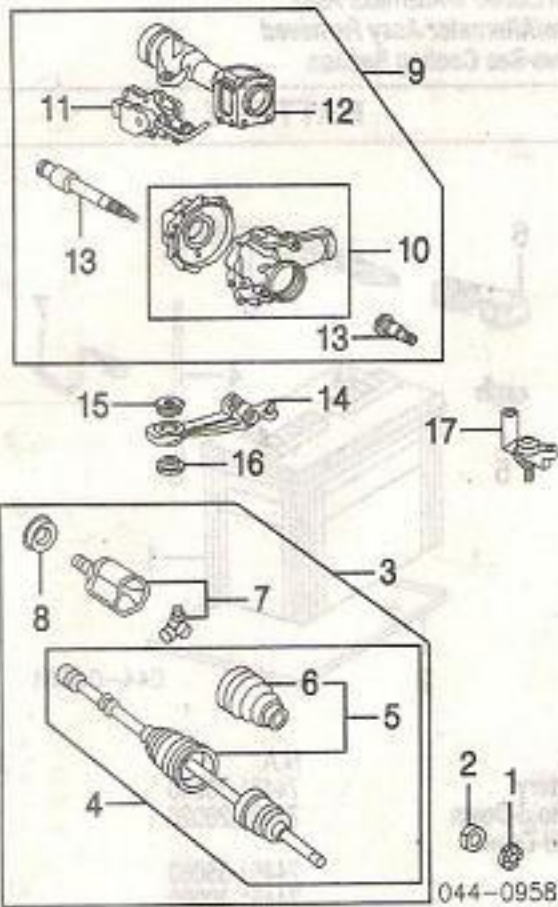

Man Trans	R 41337-35050	m	#.5	179.08
Auto Trans	R 41337-35060	m	#.5	138.84
	L 41306-35050	m	#.5	120.38

(c) Included w/Differential Assy

#w/Axle Assy Removed, Not Included in O/H

14 Mount, Front Differential	R 52380-60021	m	#.7	124.09
	L 52380-60012	m	#.7	140.53
15 Stopper, Upper	R/L 41653-60030	m	#.7	15.60
16 Stopper, Lower	R/L 41654-60010	m	#.7	9.86

#R&R One Side Complete, R&R Both Sides 1.0, Not Included in O/H


17 Mount, Rear Differential	52380-60050	m	#.6	91.23
-----------------------------	-------------	---	-----	-------

#Not Included in O/H

FRONT STEERING LINKAGE/GEAR

R&I Steering Gear Assym #2.8
#Includes R&R Stabilizer Bar

NOTE: All Parts in this section are included in overhaul unless noted otherwise.

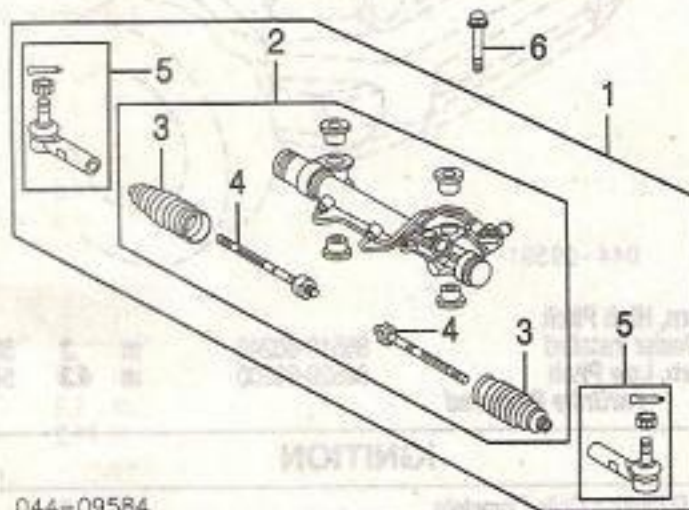


044-09584

1 Gear Assy, Steering	44200-35080	m	3.0	944.96
2 Rack Assy, Steering	44250-35080	m		849.50
3 Boot, Rack (a)	R/L 45535-26030	m	#.6	17.61
#Includes R&R Tie Rod End				
4 Rod, Inner Tie (a)	R/L 45503-39305	m	#.6	143.87
(a) Included w/Steering Rack Assy				
#w/Steering Gear Removed, R&R Both Sides .9				
5 End, Tie Rod	R/L 45046-39505	m	.3	50.77
(a) Included w/Steering Gear Assy				
6 Bolt, Mounting (2)	90119-12367			4.94

STEERING PUMP

Illustration Located in Next Column

1 Pump, Steering	44310-35660	m	1.8	380.57
2 Pulley, Steering Pump-Serviced w/Steering Pump				
3 Belt, Drive-See Cooling Section				
4 Reservoir Assy, Pump	44360-35170	m	.5	169.36
5 Cap, Reservoir	44305-06030			17.75
(a) Included w/Pump Reservoir Assy				
6 Hose & Tube, Pressure	44410-35691	m	1.1	291.08
7 Hose, Return	44348-35280	m	.5	35.55

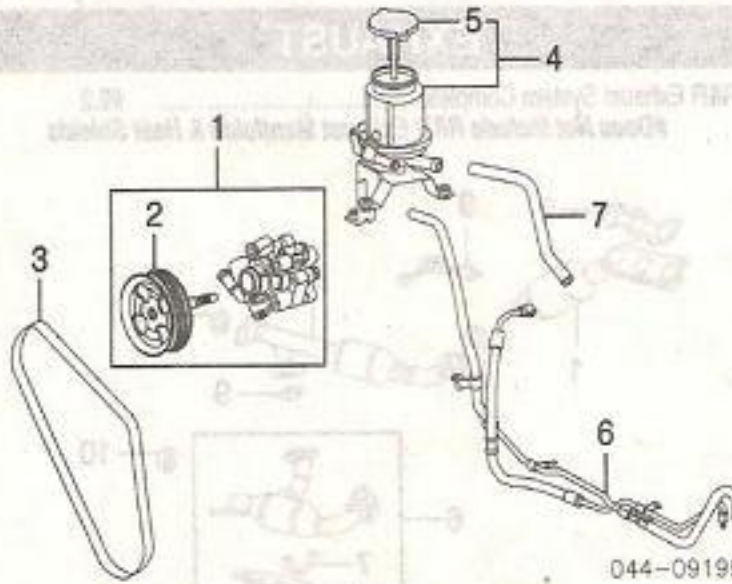


044-09199

STEERING WHEEL/COLUMN

NOTE: All Parts in this section are included in overhaul unless noted otherwise.

WHEEL & TRIM


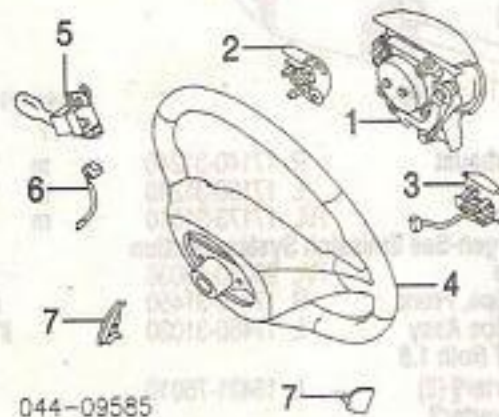


044-09585

1 Module, Driver Air Bag-See Air Bag System Section				
2 Switch, Remote Audio	R 45116-35010	m	.3	20.15
3 Right	L 84247-35030	m	.3	90.57
#Order by Application				
4 Wheel, Steering				
Urethane	45100-35460-B0	m	.6	314.52
Leather	45100-35470-B0	m	.6	842.27
5 Switch, Cruise Control	R 84632-34011	m	#.8	90.20
6 Harness, Cruise Cont Switch	84633-34010	m	#.8	31.89
#R&R Complete, Includes R&R Steering Wheel				
7 Cover, Strg Wheel				
Right	R 45186-35020-B0			1.37
w/Cruise Control	R 45186-35030-B0			3.89
w/o Cruise Control	L 45187-35020-B0			3.89
Left				

COLUMN TILT


R&I Steering Column	m	2.0
O/H Steering Column (Includes R&I)	m	3.6

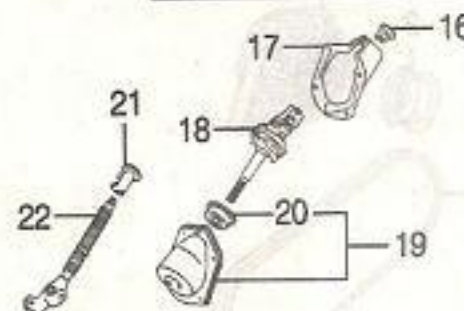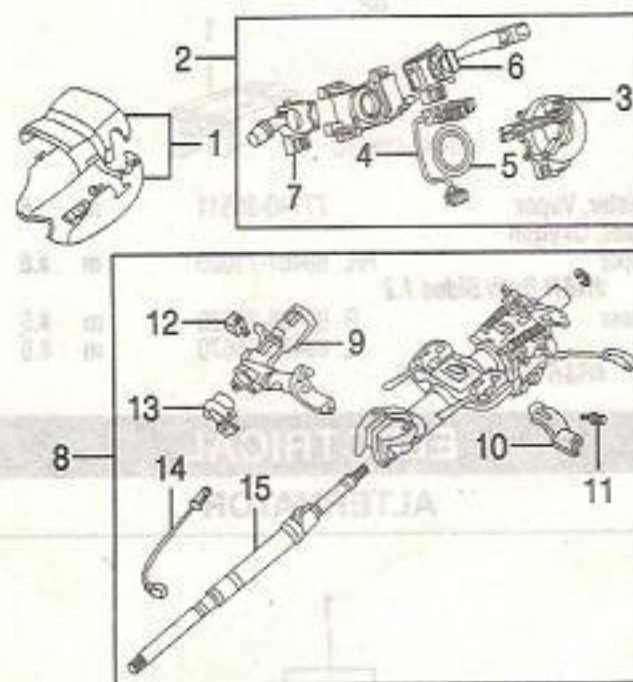

044-09586

1 Cover, Strg Column	45286-35906-B3	m	.5	65.73
2 Switch Assy, Combination				
w/Cruise Control	84310-35800	m	1.2	409.97

w/o Cruise Control	84310-35830	m	1.2	417.81
3 Cable, Spiral-See Air Bag System Section				
4 Sensor, Steering	89245-35020	m	#.8	342.07
5 Disc, Steering Sensor	89246-34010	m	#.8	97.26
#R&R Complete				
6 Switch, Wiper				
w/Cruise Control	84652-14642	m	1.0	138.15
w/o Cruise Control	84652-35580	m	1.0	102.63
7 Switch, Lighting	84140-10190	m	1.0	59.05
(a) Included w/Combination Switch Assy				
8 Column Assy, Steering				
Man Trans	45250-35A10	m	2.7	452.73
Auto Trans	45250-35A20	m	2.7	452.73
9 Housing, Strg Lock (a)				
Man Trans	45280-60540	m	1.3	210.60
Auto Trans	45280-35380	m	1.3	210.60
10 Brkt, Housing (a)	45271-12080	m	1.8	12.40
11 Bolt, Shear (a) (2)	45897-12020	m		3.03
12 Solenoid, Interlock (a)				
Auto Trans	85432-35030	m	.6	80.90
13 Switch, Ignition (a)	84450-12200	m	.8	80.17
14 Switch, Unlock Warning (a)	84052-35030	m	.7	19.61
15 Shaft, Up Strg (a)	45210-35240	m		348.76
(a) Included w/Steering Column Assy				
16 Stopper, Upper	45817-35050	m		8.69
17 Cover, Upper Column Hole	45253-35350	m		27.44
18 Shaft, Intermediate	45220-35170	m	1.2	188.14
19 Cover Assy, Lower Column Hole	45025-35370			103.97
20 Seal, Cover (b)	45026-35060	m		43.27
(b) Included w/Lower Column Hole Cover Assy				
21 Yoke, Shaft	45219-35160	m		18.81
22 Shaft, Lower	45203-35310	m	.9	183.08

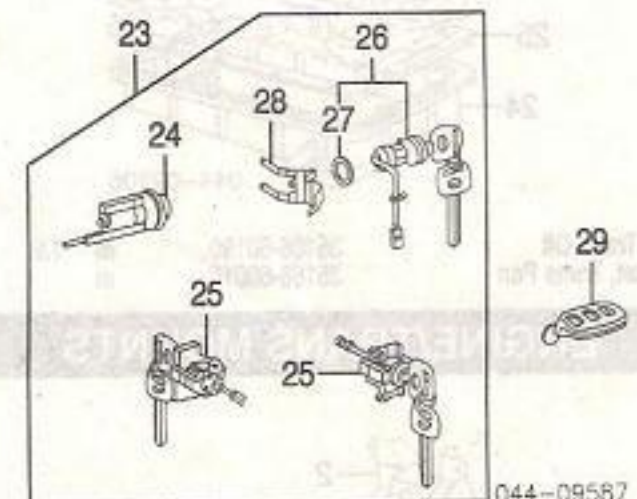


044-09587

23 Lock Set, Vehicle	69005-35A00	m	#	271.10
#Not Included in O/H				
24 Cylinder, Ign Lock (c)	69057-35190	m	.7	87.28
25 Cylinder, Door Lock (c)-See Front Door Section				
26 Cylinder Assy, Back Door Lock (c)-See Back Door Section				
27 Pad, Lock Cylinder (c)-See Back Door Section				
28 Retainer, Lock Cyl (c)-See Back Door Section				
(c) Included w/Vehicle Lock Set				
29 Transmitter, Keyless Entry	89742-42120			135.86

ENGINE/TRANS

Use Procedure Explanation 12 with the following text.

R&I Engine/Trans Assy				
2WD	m	16.8		
4WD	m	17.4		

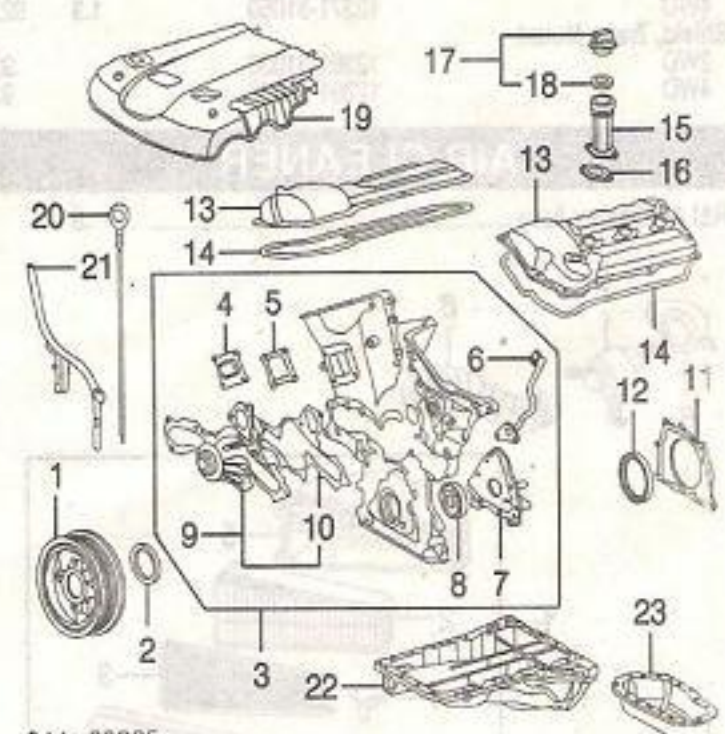


044-09205

1 Pulley, Crankshaft	13470-0P010	m	1.4	233.06
2 Bolt, Crankshaft	90119-16004	m		6.06
3 Seal, Crankshaft	90311-A0005	m		12.95
4 Cover Assy, Timing	11310-0P030	m	#9.0	731.04
#w/4WD Add 2.8, Includes R&R Crankshaft Pulley				
5 Plate, Timing Cover Up	11324-0P010	m		7.49
6 Gasket, Plate	11328-31030	m		9.00
7 Pipe, Oil Outlet	15413-31020	m		4.57
8 Cover, Oil Pump	15115-31050	m		23.09
9 Rotor, Oil Pump	15103-0P010	m		42.24
10 Pump Assy, Water	16100-09470	m	#2.8	171.89
#Includes R&R/R&R Alternator, Fan & Shroud				

TOYOTA FJ CRUISER 2007

ENGINE/TRANS Cont'd

10 Gasket, Water Pump (a)	16124-0P030		9.09
(a) Included w/ Timing Cover Assy			
(a) Included w/ Water Pump Assy			
11 Retainer, Rear Seal	11381-31010	m	40.93
12 Seal, Rear Oil	90311-AD006	m	41.38
13 Cover, Valve	R 11201-AD010	m #1.0	224.35
	L 11202-AD010	m #2.0	243.13
#R&R Both 2.6			
14 Gasket, Valve Cover	R 11213-AD010	m	15.22
	L 11214-AD010	m	15.22
15 Neck, Oil Filler	L 12185-50020		39.27
16 Gasket, Filler Neck	L 12196-50010		5.94
17 Cap Assy, Oil Filler	L 12180-0H010		9.23
18 Gasket, Filler Cap (b)	L 90080-43032		4.40
(b) Included w/ Oil Filler Cap Assy			
19 Cover, Engine	11259-31011	.3	130.12
20 Dipstick, Engine Oil	15301-AD010		12.46
21 Tube, Engine Dipstick	11452-AD010	.5	20.35
22 Pan, Upper Engine Oil	12101-31071	m #5.5	207.12
#Includes R&R Lower Oil Pan, w/4WD Add 2.8			
23 Pan, Lower Engine Oil	12102-AD010	m 2.6	54.39
Sealant, Eng	N.A.	m	0.00

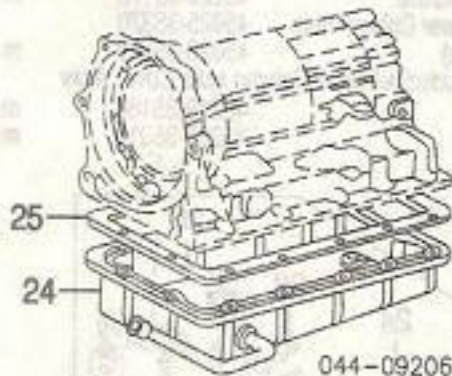

044-09206

24 Pan, Trans Oil	35106-60180	m 1.9	92.88
25 Gasket, Trans Pan	35168-60010	m	18.35

ENGINE/TRANS MOUNTS




044-08597

1 Mount, Engine	R/L 12361-31080	#1.1	92.37
#w/4WD Add .3, R&R Both 1.7			
2 Bracket, Engine Mount	R 12311-31021	#.3	46.61
	L 12315-31051	#.3	62.05
#w/Mount Removed			
3 Mount, Trans			
2WD	12371-31060	1.0	68.42
4WD	12371-31050	1.3	92.37
Shield, Trans Mount			
2WD	12391-31030		9.52
4WD	12391-31020		9.52

AIR CLEANER

R&I Air Cleaner Assy		.5	
----------------------	--	----	--

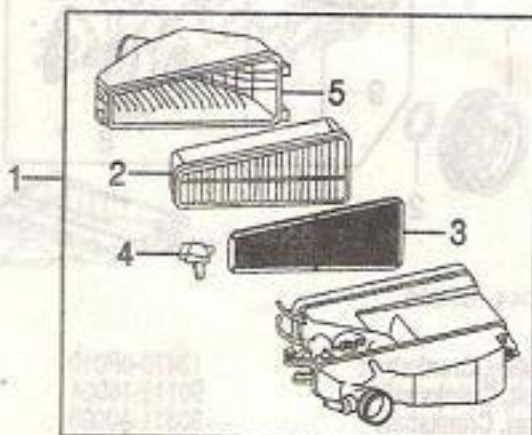


044-09588

1 Cleaner Assy, Air	17700-0P011	.5	546.61
2 Element, Cleaner	17801-31090	.3	27.82
3 Screen, Filter	17812-31030	.2	39.16
4 Meter, Air Flow	22204-0D030	m .3	146.47
5 Housing, Air Cleaner	17705-0P010	.5	54.67
(Included w/ Air Cleaner Assy)			
6 Hose, Air Cleaner	17882-31080	.2	81.51
7 Inlet, Air	17971-31020	.2	52.99

8 Tube, Inlet	17972-31010	.3	37.93
---------------	-------------	----	-------

EXHAUST

R&R Exhaust System Complete #2.2
#Does Not Include R&R Exhaust Manifolds & Heat Shields

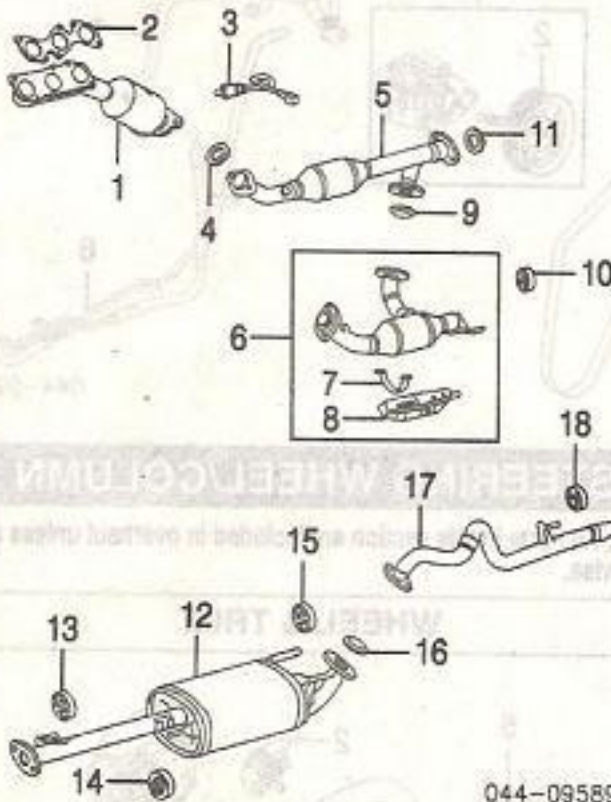

044-09589

1 Manifold, Exhaust	R 17140-31240	m 1.2	584.67
	L 17150-31240	m 1.2	584.67
2 Gskt, Manifold	R/L 17173-31010	m	18.19
3 Sensor, Oxygen-See Emission System Section			
4 Gskt, Flange	R/L 90080-43036		8.00
5 Converter/Pipe, Front	R 17410-31450	#.9	866.26
6 Converter/Pipe Assy	L 17450-31030	#1.1	931.06
#R&R Both 1.8			
7 Brkt, Converter (2)	L 18421-75010		14.86
8 Shield, Converter			
Upper	L 18435-31030		36.90
Lower	L 18445-31010		33.87
(Included w/ Converter/Pipe Assy)			
9 Gskt, Crossover	90917-06083		8.43
10 Hanger, Converter	L 17565-0P040		13.49
11 Gskt, Muffler	17451-74051		21.75
12 Muffler, Rear	17420-31110	.6	232.96
Hanger, Muffler			
13 Front	17565-0P040		13.49
14 Center	N.A.		0.00
15 Rear	N.A.		0.00
16 Gasket, Tailpipe	90917-06072		8.09
17 Tailpipe	17430-30040	.6	117.36
18 Hanger, Tailpipe	17565-31050		20.41

EMISSION SYSTEM



044-09590

1 Canister, Vapor	77740-35511	m .5	368.23
2 Sensor, Oxygen			
Upper	R/L 89467-71020	m #.8	225.78
#R&R Both Sides 1.2			
Lower	R 89465-35680	m #.5	138.89
	L 89465-35670	m #.5	138.89
#R&R Both Sides .8			

ELECTRICAL

ALTERNATOR




044-06717

1 Alternator Assy	27060-31120	m 1.0	567.70
-------------------	-------------	-------	--------

2 Pulley, Alternator	27411-31210	m #.2	18.21
(Included w/ Alternator Assy)			
#w/Alternator Assy Removed			
3 Belt, Drive-See Cooling Section			


BATTERY

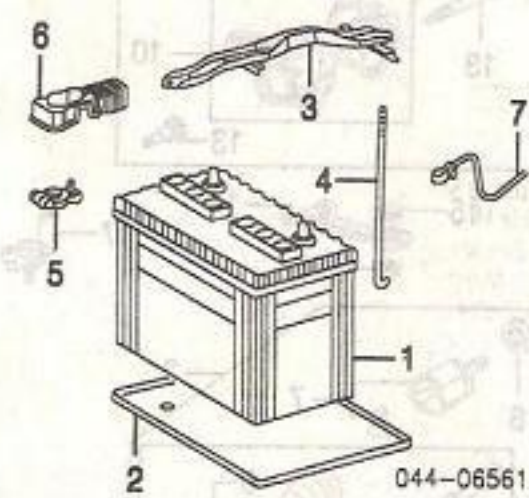

044-06561

1 Battery	N.A.	.2	0.00
2 Tray, Battery	74431-35040		37.24
3 Clamp, Hold-Down	74481-26020		8.37
4 Bolt, Hold-Down			
Long	74451-35080		1.54
Short	74451-30090		1.80
5 Terminal, Positive	90982-05054		22.49
6 Cover, Terminal	82821-35020		11.20
7 Cable, Battery	82122-35A70	.5	268.73
#Order by Application			

HORN

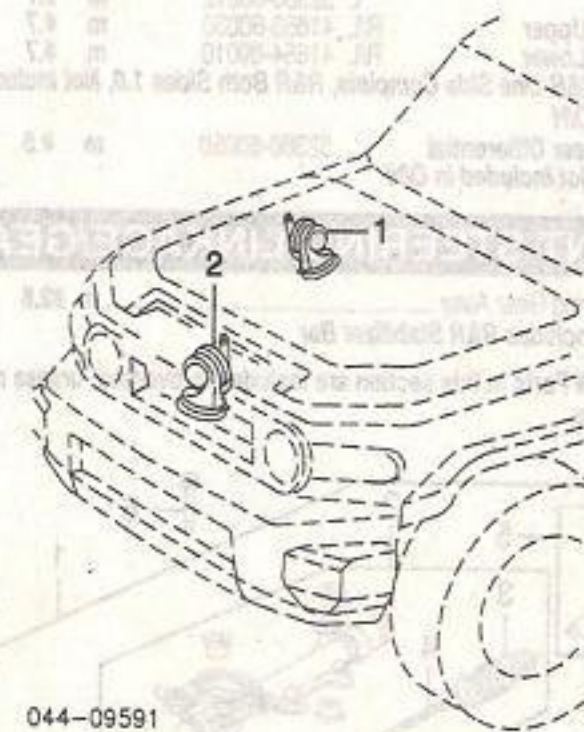

044-09591

1 Horn, High Pitch			
Dealer Installed	86510-60240	m .3	58.90
2 Horn, Low Pitch	86520-60200	m #.3	58.90
#w/Grille Removed			

IGNITION


R&R Ignition Coils Complete m .8



044-09592

1 Coil, Ignition (6)	90919-A2001	m .3	90.35
2 Computer, Engine Control			
Man Trans	89661-35B90	m .7	1422.95
Auto Trans	89661-35B80	m .7	1055.19
3 Brkt, Upper Computer	89667-60240		9.77
4 Brkt, Lower Computer	89668-60240		16.03

STARTER

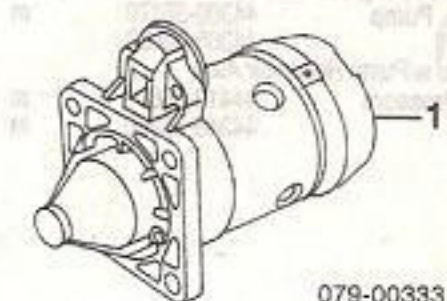


079-00333

1 Starter 28100-31050-84 m 1.3 R307.69

WINDSHIELD


Use Procedure Explanation 13 with the following text.

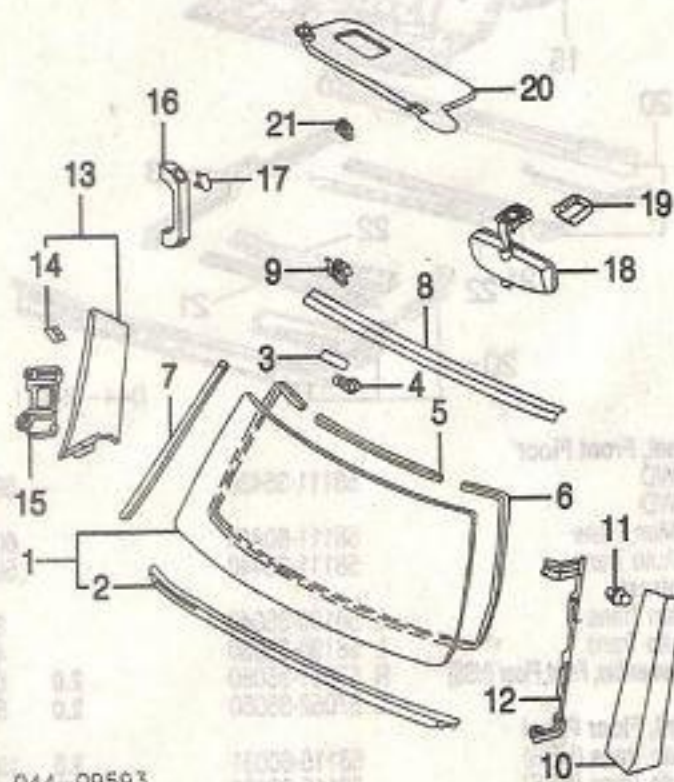R&I Windshield..... #3.0
#Includes Clean Up Old Adhesive as Necessary

044-09593

1 Glass Assy, Windshield	56101-35070	#2.7	1053.00
Toyota NAGS	FW02652GTN	#2.7	0.00
#Includes Clean Up Old Adhesive as Necessary			
2 Midg, Lower Reveal	75535-35010		117.38
#Included w/Windshield Glass Assy			
Adhesive, Glass	N.A.		0.00
Stopper, Windshield			
3 Type 1	R/L 56116-22050		1.83
4 Type 2	R/L 56115-30100		1.86
5 Dam, Upper Windshield	56117-35140		3.34
6 Dam, Side/Lower Windshield	56117-35070		8.77
7 Midg, Side Reveal (b)	R/L 75532-35010		14.89
(b) Order by Application			
8 Midg, Upper Reveal (a)	75503-35011		274.65
(a) Non-Reusable Part			
9 Retainer, Up Midg (4)	75563-35010		2.26
10 Garnish, Side Windshield (P)	R 61110-35010	.3	143.56
	L 61120-35010	.3	143.56
(P) Paint to Match			
11 Retainer, Garnish (5/Side)	R/L 75392-35210		.71
12 Protector, Edging (a)	R 75565-35010		12.00
	L 75566-35010		12.00
(a) Non-Reusable Part			
13 Garnish Assy, Inner Windshield			
w/Side Curtain Air Bags	R 62211-35100-B0	.2	70.11
	L 62212-35100-B0	.2	70.11
w/o Side Curtain Air Bags	R 62211-35090-B0	.2	59.05
	L 62212-35090-B0	.2	59.05
14 Clip, Garnish (c)			
Type 1	R/L 90467-10161		.89
Type 2	R/L 90467-10167		.94
(c) Included w/Inner Windshield Garnish Assy			
15 Bracket, Assist Grip	R 74681-35010	.2	13.52
	L 74682-35010	.2	13.52
16 Grip, Front Assist	R/L 74610-60060-B5		0.00
17 Cap, Assist Grip (2/Side)	R/L 74617-60010-B4		1.69
18 Mirror, Rear View	87810-52010-B1	.2	87.88
19 Cover, Mirror	87834-20080-B8		5.37
20 Visor, Sun	R 74310-3D030-B0	.2	49.96
	L 74320-3D090-B0	.2	43.58
21 Holder, Visor	R/L 74348-02020-B0		6.94

WIPER SYSTEM

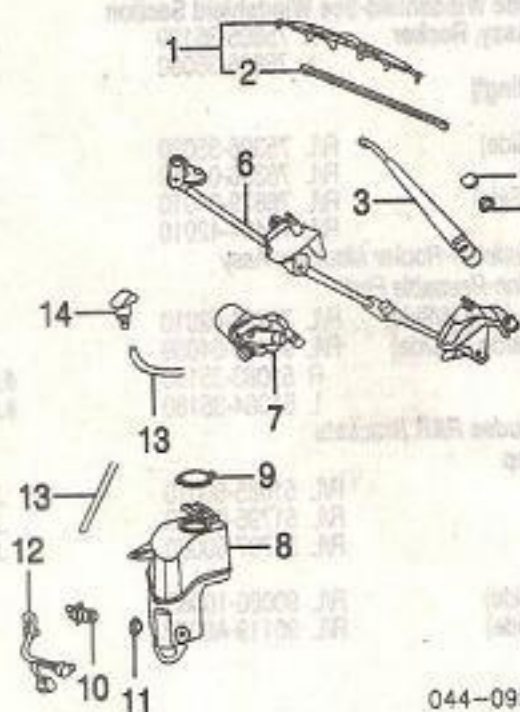


044-09594

1 Blade Assy, Wiper			
Right	R 85212-35090	.2	9.25
Center	85212-35090	.2	9.25
Left	L 85212-13030	.2	11.31
2 Refill, Wiper			
Right	R 85214-68010	.1	2.88
Center	85214-68010	.1	2.88
Left	L 85214-50060	.1	3.40
#Included w/Wiper Blade Assy			
3 Arm, Wiper			
Right	R 85211-35140	#.2	36.55
Center	85211-35140	#.2	36.55
Left	L 85221-35140	#.2	12.84
#Includes R&R Wiper Blade Assy or Wiper Refill			
4 Cap, Wiper Arm (3)	85292-13010		4.52
5 Nut, Wiper Arm (3)	90182-A0004		.71
6 Linkage, Wiper	85150-35210	#1.1	120.38
7 Motor, Wiper	85110-26210	#1.1	195.93
#R&R Complete, Includes R&R Cowl Cover			
8 Tank, Washer			
w/Rear Wiper	85315-35330	#.5	85.54
w/o Rear Wiper	85315-35320	#.5	85.54
9 Cap, Washer Tank	85316-12290		4.23
10 Pump, Washer			
Front	85330-60190	#.5	45.76
Rear	85330-60180	#.5	45.76
#R&R Complete			
11 Gskt, Pump			
Front	85336-60300		3.06
Rear	85336-60300		3.06
12 Harness, Washer			
w/Rear Wiper	85317-35330		9.40
w/o Rear Wiper	85317-35320		6.37
13 Hose, Washer (a)	N.A.		0.00
(a) Cut to Fit			
14 Nozzle, Washer	R/L 85381-34030	#.2	15.92
#Included in R&R Hood			

COWL & DASH

Use Procedure Explanations 14 and 28 with the following text.

Refinish Cowl Extension Panel..... R/L 1.5

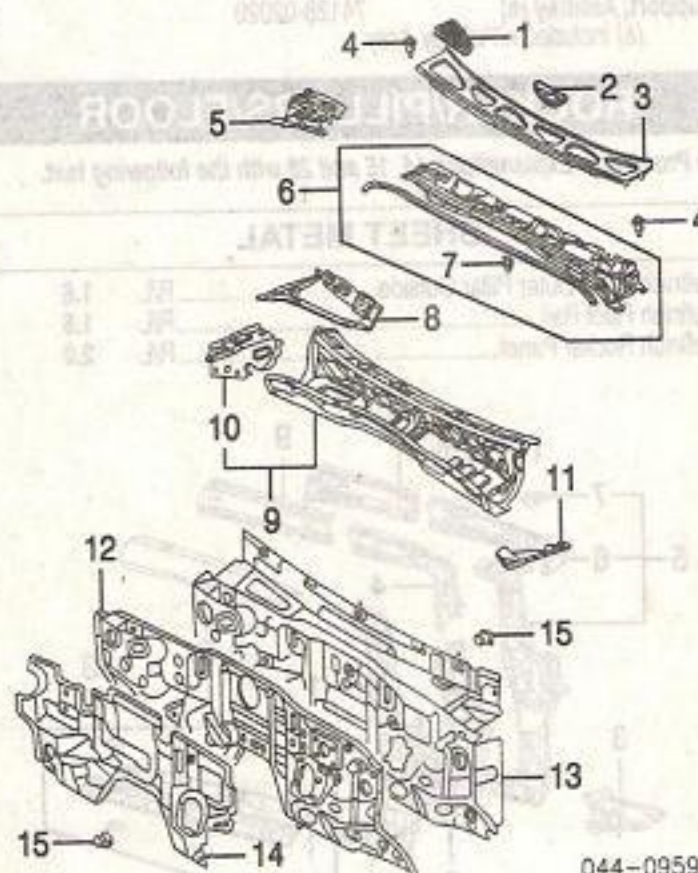

044-09595


1 Cover, Hole			
Right	R 55791-35010		25.15
Center	55792-35010		21.83
Left	L 55796-35010		21.83
2 Cover, Wiper Link			
Right	R 55793-35010		13.60
Center	55794-35010		13.15
Left	L 55795-35010		11.69
3 Cover, Upper Cowl	55709-35010	#.8	132.15
#Includes R&R Fender Upper Panels & Wiper Arms			
4 Clip, Cowl Cover (a)	90467-07076-C0		.69
(a) As Required			
5 Panel, Right Cowl Inner	R 55783-35010		84.20
6 Panel Assy, Left Cowl Inner	L 55708-35090		258.90
7 Clip, Cowl Seal (13)	90080-46196		.74
#Included w/Left Cowl Inner Panel Assy			
8 Panel, Side Inner Cowl	R 55706-35010		82.51
9 Panel Assy, Inner Cowl			
Man Trans	55700-35720		452.73
Auto Trans	55700-35710		452.73
10 Extension, Cowl Panel (b)	R 55717-35040	2.0	37.58
	L 55718-35040	2.0	37.58
(b) Included w/Inner Cowl Panel Assy			
11 Brace, Cowl Panel	L 55716-35030		21.12
12 Panel, Dash			
Man Trans	55101-35A40		348.76
Auto Trans	55101-35A30		348.76
13 Insulator, Inner			
Man Trans	55210-35380		179.42
Auto Trans	55210-35370		179.42
14 Insulator, Outer	55223-35071		99.91
15 Clip, Insulator			
Inner (3)	55217-35020		2.60
Outer (4)	90467-06169		.98

INSTRUMENT PANEL

Use Procedure Explanation 14 with the following text.

R&I Instrument Panel..... m 4.7

NOTE: All Parts in this section are included in R&R Instrument Panel unless noted otherwise.

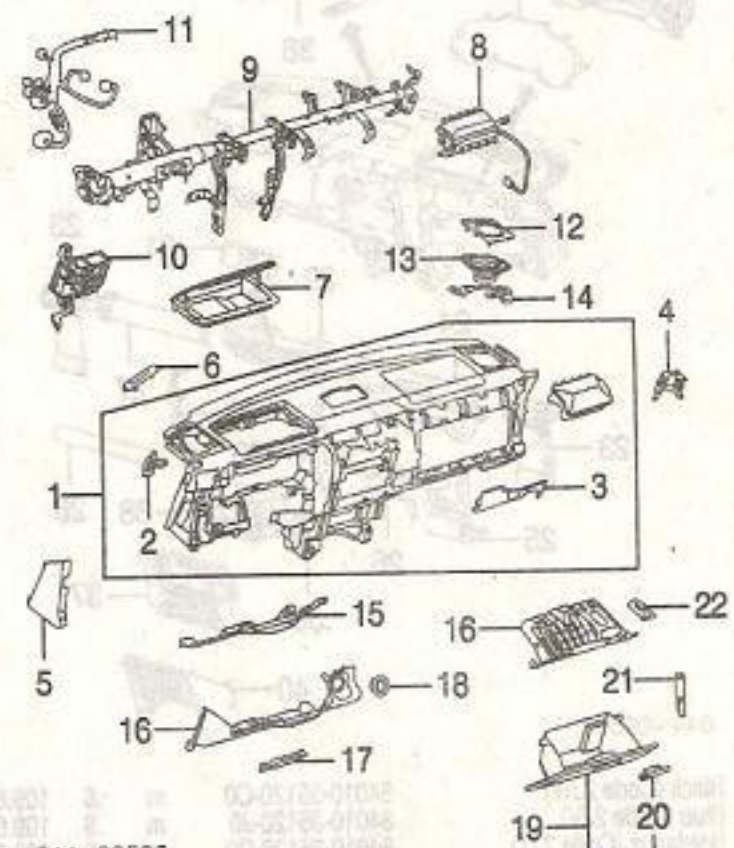

044-09596

1 Panel Assy, Instrument	55301-35240-B0	m	7.0	507.57
w/Information Display	55301-35230-B0	m	7.0	507.57
2 Vent, Defroster	R 55961-35030			8.35
	L 55962-35010			8.35
3 Plate, Inst Panel	R 61191-35020			13.92
#Included w/Instrument Panel Assy				
4 Retainer, Inst Panel	R 55690-35010			26.38
5 Panel, Side	R 55303-35020-B0	.1		31.38
	L 55302-35010-B0	.1		31.38
6 Finisher, Panel	L 55436-35010			5.97
7 Box, Upper Storage	L 55042-35010-B0	.3		159.65
8 Module, Pass Air Bag-See Air Bag System Section				
9 Reinf, Inst Panel	55330-35170	#.5		298.80
#w/Instrument Panel Removed, Not Included in R&R Instrument Panel				
10 Box, Junction				
w/DRL	L 82730-35380	m	#	543.27
w/o DRL	L 82730-35370	m	#	543.27
11 Harness, Inst Pnl (a)				
Man Trans	82141-35G70	m	#	1675.74
Auto Trans	82141-35G30	m	#	1675.74
(a) Order by Application				
#Not Included in R&R Instrument Panel				
12 Panel, Speaker	R 55409-35010-B0	.1		41.93
	L 55408-35190-B0	.1		41.93
13 Speaker, Front	R/L 86160-35270			66.51
14 Brkt, Speaker	R 86161-35090			10.60
	L 86161-35100			10.60
15 Reinf, Lower	L 55308-35120			45.27
16 Panel, Lower Finish	R 55045-35130	.4		83.51
	L 55046-35070-B0	.4		139.18
17 Cover, Fuse Box	L 55645-35040-B0			17.26
18 Bezel, Panel	55445-35030-B0			5.46
19 Box Assy, Glove	55550-35080-B0	.3		235.10
20 Latch, Glove Box (b)	55506-44010-B0	.2		16.66
(b) Included w/Glove Box Assy				
21 Stopper, Glove Box	55054-33060			17.55
22 Striker, Glove Box	55568-35030	.1		8.49


Illustration Located in Next Column

23 Vent, Side Air	R 55660-35110	.5		141.50
	L 55650-35080	.5		141.50
24 Panel, Upper Cluster Finish	55421-35010-B0	.6		52.02
25 Panel, Lwr Cluster Finish	55422-35010-B0	.4		104.29
26 Garnish, Cluster	55474-35030-B0			3.46
27 Panel, Upper Finish	55403-35010-B0	.5		81.17
28 Panel, Lower Finish	55406-35040-B0	.4		69.76
29 Vent, Center Air	55405-35350-B0	.5		166.68
30 Garnish, Cluster Finish	R 55011-35010			35.55
	L 55012-35010			35.55
31 Clock	83910-35030	.3		242.47
32 Meter Assy, Instrument				
2WD (a)	83800-35G40	m	1.0	312.06
4WD				
Man Trans	83800-35G30	m	1.0	306.85
Auto Trans	83800-35G20	m	1.0	317.27
(a) Order by Application				
33 Lens, Meter (c)	83852-35G20			24.55
(c) Included w/Instrument Meter Assy				
34 Display, Information	83290-35081	m	.5	355.47
35 Cover, Display	83179-35020	.2		45.96
36 Bracket, Display	83297-35050			20.23
37 Control, A/C/Heater				

Procedure Explanation Pages Must Be Used with the Above Text for an Accurate Damage Report.


Comments or suggestions? Need assistance? Call 1-800-854-7030 or 858-578-6550. Ext. 8220. Fax 1-888-256-7969 or 858-549-0629.

INSTRUMENT PANEL Cont'd

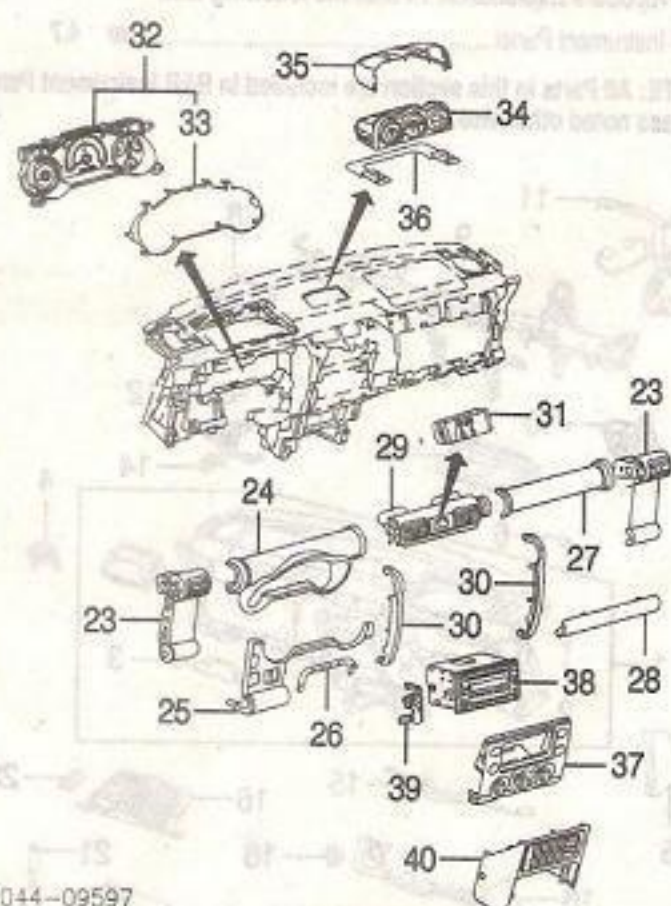

044-09597

Black (Code 2JW)	84010-35120-C0	m	.6	109.69
Blue (Code 2JV)	84010-35120-J0	m	.6	109.69
Bordeaux (Code 2JT)	84010-35120-D0	m	.6	109.69
Silver (Code 2JR)	84010-35120-B0	m	.6	109.69
Yellow (Code 2JU)	84010-35120-J0	m	.6	109.69
38 Radio, AM-FM/CD				
Type 1	86120-35380	.7	1490.94	
Type 2	86120-35400	.7	1168.57	
39 Brkt, Radio	R 86211-35060		12.57	
	L 86212-35080		12.57	
40 Panel, Lower Inst	55407-35090-B0	.4	115.69	

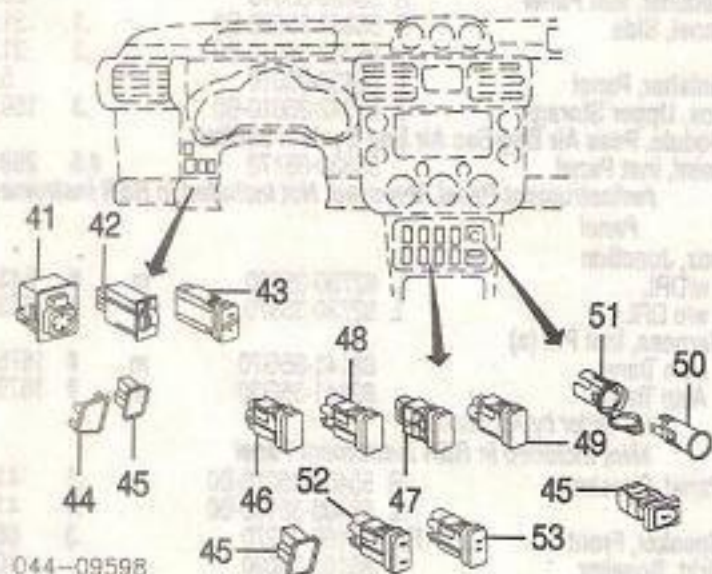

044-09598

41 Switch, Mirror	84870-34010	.3	120.38
42 Rheostat, Illumination	84119-35030	.3	114.00
43 Switch, Clutch Cancel			
Man Trans	84480-35090	.2	65.73
44 Plug, Mirror Switch	55547-37010-B1		6.89
45 Plug, Switch Hole (d)	55539-48030-B1		3.77
(d) As Required			
Switch, Traction Cont			
46 2WD	84988-35050	.2	58.02
47 4WD	84988-35060	.2	58.02
48 Switch, Diff'l Lock	84725-35070	.2	64.70
49 Switch, Speaker			
Sub-Woofers	86171-35010	.2	56.02
50 Socket, Power	85530-33020		18.21
51 Cover, Power Socket	85535-60100-B1		6.80
52 Switch, Main	84480-35080	.2	65.73
53 Switch, Parking Aid	84490-35010	.2	65.73
Jack, Aux Audio	86190-53010	.2	89.23

CENTER CONSOLE


Use Procedure Explanation 14 with the following text.

R&L Center Console Assy .5

NOTE: All Parts in this section are included in R&R Center Console unless noted otherwise.

Illustration Located in Next Column

1 Console, Center				
Man Trans	58802-35230-B0	.8	135.01	
Auto Trans	58802-35240-B0	.8	135.01	
2 Garnish, Console Upper	58833-35060-B0	.2	45.27	
3 Front	58996-60061		17.83	

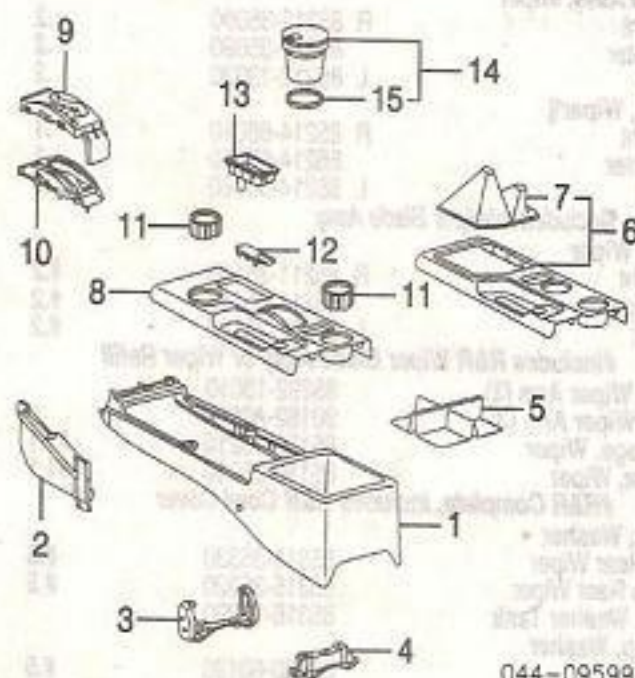

044-09599


4 Rear	58995-60060		26.44	
5 Mat, Console	58916-35050		41.58	
6 Panel Assy, Console Trim				
Man Trans	58805-35100-B0	.3	84.17	
Auto Trans	58808-35300-B0	.3	94.26	
(Included w/Console Trim Panel Assy)				
7 Boot, Shift				
8 Panel, Console Trim				
Auto Trans	58805-35090-B0	.4	84.17	
4WD	58805-35080-B0	.4	84.17	
Housing, Indicator				
9 Upper	35907-35260	.3	37.58	
10 Lower	35974-35170	.3	32.35	
11 Insert, Cup Holder (2)	55616-35010		23.35	
12 Cover, Parking Brake Hole	58904-35050	.4	41.58	
13 Box, Console				
2WD	58844-35010	.2	36.90	
14 Ashtray Assy	74102-02140		18.00	
15 Support, Ashtray (a)	74128-02020		3.50	
(a) Included w/Ashtray Assy				

ROCKER/PILLARS/FLOOR

Use Procedure Explanations 14, 15 and 28 with the following text.


SHEET METAL

Refinish Front Outer Pillar Outside	R/L	1.6
Refinish Roof Rail	R/L	1.6
Refinish Rocker Panel	R/L	2.0

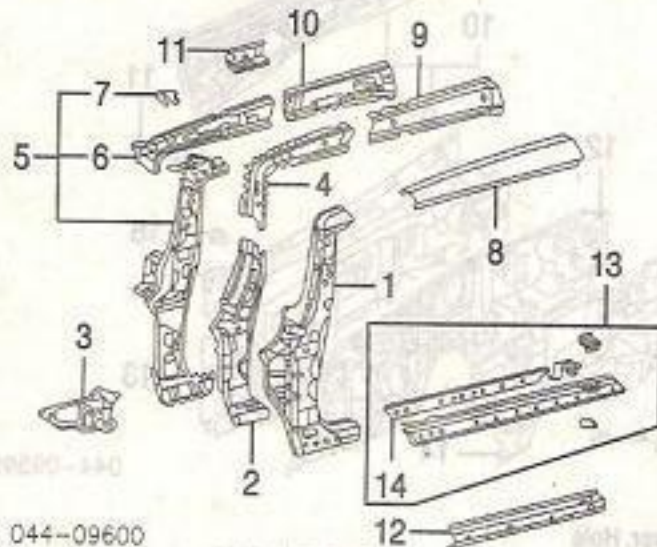

044-09600

1 Pillar, Front Outer (HSS)	R 61131-35060	8.0	172.39	
	L 61132-35060	8.0	172.39	
2 Reinf, Lower Pillar (HSS)	R 61108-35060	3.0	174.05	
	L 61109-35060	3.0	174.39	
3 Reinf, Cowl	R 61103-35010	1.5	45.64	
	L 61104-35010	1.5	43.96	
4 Reinf, Upper Pillar (HSS)	R 61106-35010	2.0	135.12	
	L 61107-35010	2.0	135.12	
5 Pillar Assy, Front Inner (HSS)	R 61013-35020	5.0	196.20	
	L 61014-35020	5.0	196.20	
6 Rail, Front Inner Roof (HSS)	R 61231-35180	2.0	142.87	
	L 61232-35130	2.0	142.87	
7 Bracket, Assist Grip	R/L 61237-35020		27.12	
(Included w/Front Inner Pillar Assy)				
8 Rail, Outer Side Roof (HSS)	R 61211-35060	2.5	155.96	
	L 61212-35060	2.5	155.96	
9 Reinf, Roof Rail (HSS)	R 61235-35020	2.0	181.77	
	L 61236-35010	2.0	181.77	
10 Rail, Inner Roof (HSS)	R 61233-35010	2.0	130.12	
	L 61234-35010	2.0	130.12	
11 Reinf, Upper Center	R 61303-35020	1.5	121.41	
	L 61304-35020	1.5	121.41	
12 Panel, Outer Rocker (HSS)	R 61411-35090	7.7	104.29	
	L 61412-35090	7.7	104.29	
13 Panel Assy, Inner Rocker (HSS)	R 61401-35030	4.0	116.72	
	L 61402-35030	4.0	116.72	
14 Panel, Inner Rocker (HSS) (a)	R 61452-35010	4.0	190.48	
	L 61462-35010	4.0	190.48	
(a) Included w/Inner Rocker Panel Assy				

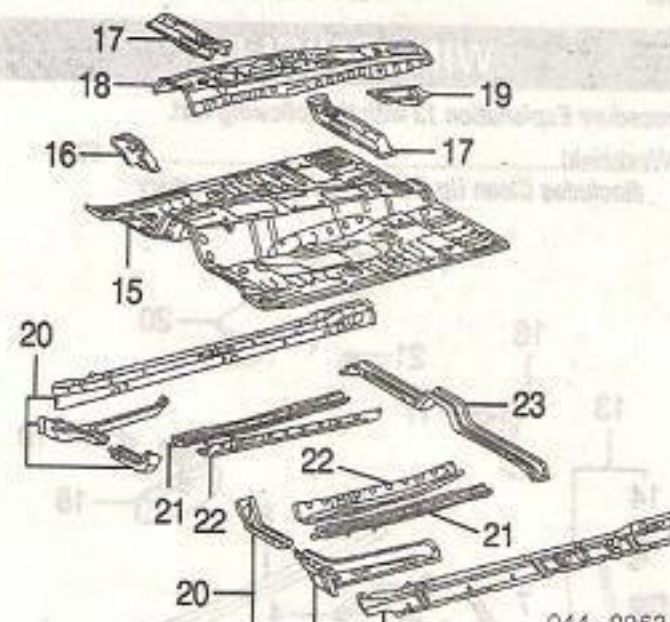


044-09621

15 Panel, Front Floor				
2WD	58111-35430		596.91	
4WD				
Man Trans	58111-60A01		600.26	
Auto Trans	58111-35440		596.91	
16 Footrest				
Man Trans	L 58190-35040		34.55	
Auto Trans	L 58190-35030		46.30	
17 Crossmember, Front Floor (HSS)	R 57051-35050	2.0	60.05	
	L 57052-35050	2.0	58.39	
18 Reinf, Floor Panel				
Man Trans (HSS)	58115-60031	3.0	190.48	
Auto Trans (HSS)	58115-60020	3.0	208.43	
19 Reinf, Parking Brake	58171-60020		59.10	
20 Sidemember, Floor (HSS)	R 57401-35906	5.0	305.60	
	L 57402-35907	5.0	305.60	
21 Reinf, Outer Side (HSS)	R 57417-35051	2.0	56.02	
	L 57417-35060	2.0	56.02	
22 Reinf, Inner Frt Floor (HSS)	R 58127-35010	2.0	49.96	
	L 58128-35010	2.0	54.02	
23 Crossmember, Rear (HSS)	57509-35010	3.0	169.02	

EXTERIOR TRIM

R&L Rocker Moulding Assy	R/L	.4
R&L Side Step	R/L	.5

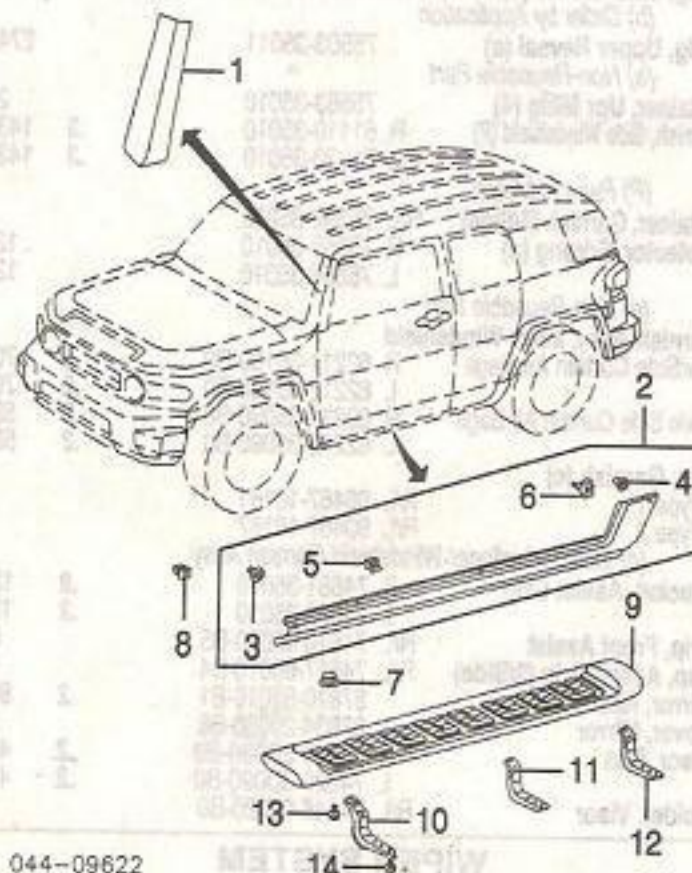

044-09622

1 Garnish, Side Windshield-See Windshield Section				
2 Moulding Assy, Rocker	R 75805-35120	.4	139.50	
	L 75806-35090	.4	139.50	
Clip, Moulding				
Type 1 (a)				
Blue (2/Side)	R/L 75396-35020		.74	
Pink	R/L 75396-04010		.74	
Type 2 (2/Side)	R/L 76879-04010		2.03	
Type 3 (a)	R/L 75494-42010		1.40	
(Included w/Rocker Moulding Assy)				
(a) Non-Reusable Part				
7 Retainer, Moulding (6/Side)	R/L 76924-02010		1.17	
8 Grommet, Midlg (3/Side)	R/L 90189-04059		.63	
9 Step, Side	R 51083-35190	#.8	563.36	
	L 51084-35180	#.8	563.36	
#Includes R&R Brackets				
Bracket, Step				
Front	R/L 51085-60010	.2	53.67	
Center	R/L 51795-60060	.2	40.93	
Rear	R/L 51797-60080	.2	40.93	
Bolt, Mtg				
Upper (6/Side)	R/L 90080-10083		.94	
Lower (6/Side)	R/L 90119-A0062		.49	